

N600R repeater settings

Contents

- [1 N600R repeater settings](#)
- [2 DOWNLOAD](#)
- [3 Related Posts](#)

N600R repeater settings

It is suitable for: **N600R**

Application introduction: Solution about how to set repeater mode on TOTOLINK products.

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.



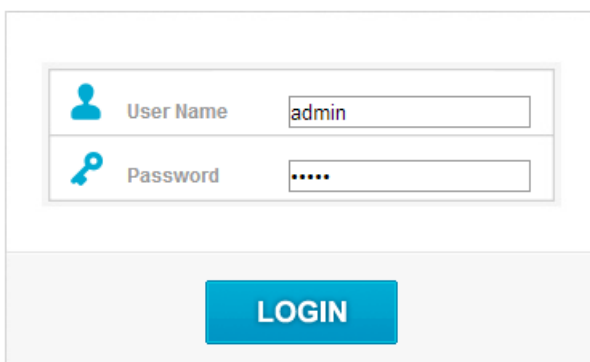
Note: The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

USER LOGIN

The server 192.168.0.1 requires a username and password.

A screenshot of a web-based user login form. The form is contained within a light gray rectangular box. Inside this box, there is a smaller white rectangular area with a thin gray border. This area contains two input fields. The first field is labeled "User Name" with a blue person icon to its left; the text "admin" is entered in the field. The second field is labeled "Password" with a blue key icon to its left; the field contains five dots. Below these two fields, centered at the bottom of the gray box, is a blue rectangular button with the word "LOGIN" in white capital letters.

STEP-3:

You need to enter the settings page, then follow the steps illustrated.

① Change SSID and Password -> ② Click the Apply button

N600R (Firmware V5.3c.6817) [Help](#)

Easy Setup
The easy setup will guide you to configure AP for first time. [Advanced Setup](#)

Connection Status
Connection Status DHCP **Disconnected**

Internet Setting
WAN Connection Type **DHCP**

2.4G Wireless
Network Name (SSID) **TOTOLINK_N600R**
Password
The Password length should be between 8-63 bits

1 You can change SSID and Password

2 Apply

STEP-4:

Please go to **Operation Mode -> Repeater Mode** then Click **Next**.

N600R (Firmware V5.3c.5507)

- System Status
- Operation Mode**
- Network
- Wireless
- QoS
- Firewall
- Management

Operation Mode

This page is used to change Operation Mode.

☐ Gateway Mode

In this mode, the device is supposed to connect to internet via ADSL/Cable Modem. The NAT is enabled and PCs in LAN ports share the same IP to ISP through WAN port. The connection type can be setup in WAN page by using PPPOE, DHCP client, Static IP.

☐ Bridge Mode

In this mode, connect the superior AP/Router by wire, you can bridge the superior's AP/Router wired signal into wireless Wi-Fi signals for Wi-Fi devices.

☒ Repeater Mode

In this mode, you can extend the superior Wi-Fi signal by Repeater setting function under the Wireless column to increase the coverage of the wireless signal.

☐ WISP Mode

In this mode, all ethernet ports are bridged together and the wireless client will connect to ISP access point. The NAT is enabled and PCs in ethernet ports share the same IP to ISP through wireless LAN.

Next

STEP-5:

Please go to **Wireless -> Repeater Setting** page, and check which you have select.

Select **Scan** and **WIFI**, then Input **Key** of the **host router's SSID**, then Click **Connect**.

N600R (Firmware V5.3c.5507)

- System Status
- Operation Mode**
- Network
- Wireless
- QoS
- Firewall
- Management

Operation Mode

This page is used to change Operation Mode.

Please select a list of sites that need to be relayed. Tip: Click the "Scan" button to search for the current AP site.

Back

Scan

| Channel | Network Name(SSID) | MAC Address | Encryption | Signal | Mode |
|---------|--------------------|-------------------|--------------|--------|---------|
| 2 | Dreadnaught | 64:E5:99:F5:1C:E0 | WPA2-PSK | 100% | (B+G+N) |
| 11 | TOTOLINK_Emily_2G | F4:28:53:F6:53:54 | WPA/WPA2-PSK | 100% | (B+G+N) |
| 1 | TOTOLINK_TEST | F4:28:53:D9:66:F4 | WPA/WPA2-PSK | 100% | (B+G+N) |
| 6 | 衣药 | F4:28:53:19:22:8A | WPA/WPA2-PSK | 100% | (B+G+N) |
| 11 | TOTOLINK_N300RT | 14:4D:67:00:00:03 | Disable | 100% | (B+G+N) |
| 11 | TOTOLINK_A810R | F4:28:54:07:A9:B8 | Disable | 96% | (B+G+N) |
| 11 | TOTOLINK_T10 | F4:28:53:C0:A1:3C | WPA/WPA2-PSK | 88% | (B+G+N) |
| 11 | TOTOLINK_T10 | F4:28:53:C0:A1:34 | WPA/WPA2-PSK | 80% | (B+G+N) |
| 12 | wifi MT 2.4G | F4:28:53:19:55:45 | WPA/WPA2-PSK | 76% | (B+G+N) |

N600R (Firmware V5.3c.5507)

- System Status
- Operation Mode**
- Network +
- Wireless +
- QoS
- Firewall +
- Management +

Operation Mode

This page is used to change Operation Mode.

Please select a list of sites that need to be relayed. Tip: Click the "Scan" button to search for the current AP site.

Back Scan

| Channel | Network Name(SSID) | MAC Address | Encryption | Signal | Mode |
|---------|--------------------|-------------------|--------------|--------|---------|
| 2 | Dreadnaught | 64:E5:99:F5:1C:E0 | WPA2-PSK | 100% | (B+G+N) |
| 11 | TOTOLINK_Emily_2G | F4:28:53:F6:53:54 | WPA/WPA2-PSK | 100% | (B+G+N) |
| 1 | TOTOLINK_TEST | F4:28:53:D9:66:F4 | WPA/WPA2-PSK | 100% | (B+G+N) |
| 6 | 农药 | F4:28:53:19:22:8A | WPA/WPA2-PSK | 100% | (B+G+N) |
| 11 | TOTOLINK_N300RT | 14:4D:67:00:00:03 | Disable | 100% | (B+G+N) |
| 11 | TOTOLINK_A810R | F4:28:54:07:A9:B8 | Disable | 96% | (B+G+N) |
| 11 | TOTOLINK_T10 | F4:28:53:C0:A1:3C | WPA/WPA2-PSK | 88% | (B+G+N) |
| 11 | TOTOLINK_T10 | F4:28:53:C0:A1:34 | WPA/WPA2-PSK | 80% | (B+G+N) |
| 12 | wifi MT 2.4G | F4:28:53:19:55:45 | WPA/WPA2-PSK | 76% | (B+G+N) |

PS: After completing the above operation, please re-connect your SSID after 1 minute or so. If the Internet is available it means that the settings are successful. Otherwise, please re-set the settings again

DOWNLOAD

N600R repeater settings – [[Download PDF](#)]