

N600R Reset settings

Contents

- [1 N600R Reset settings](#)
- [2 DOWNLOAD](#)
- [3 Related Posts](#)

N600R Reset settings

It is suitable for: **N600R, A800R, A810R, A3100R, T10, A950RG, A3000RU**

Application introduction: Solution about how to reset TOTOLINK products to factory defaults.

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.

5bdb9aa54312.png


Note:The default access address varies depending on the actual situation. Please find it on the bottom label of the product.


STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

USER LOGIN

The server 192.168.0.1 requires a username and password.

 User Name

 Password

LOGIN

STEP-3: Login page reset

Please go to **Management->System Configuration** page, and check which you have selected. Select **Restore**.

The screenshot shows the TOTO LINK N600R web interface. The top header includes the TOTO LINK logo and the tagline 'The Smartest Network Device'. The left sidebar contains a menu with 'Management' highlighted with a red circle and the number 1. Under 'Management', 'System Configuration' is highlighted with a red circle and the number 2. The main content area is titled 'System Configuration' and contains a description: 'This page allows you save current settings to a file or reload the settings from the file which was saved previously. Besides, you could reset the current configuration to factory default or reboot the device.' Below this, there are four sections: 'Save Configuration File' with a 'Save' button; 'Update Configuration File' with a file selection button (labeled '选择文件' and '未选择任何文件') and an 'Update' button; 'Restore Factory Default' with a 'Restore' button highlighted by a red circle and the number 3; and 'Reboot System' with a 'Reboot' button.

STEP-4: RST Button reset

Please make sure your router's power is on regularly, then press the RST button for about 5~8s.

Loosen the button until your router's LED lights all flashing, then you have reset your router to default settings.



DOWNLOAD

