

Touch Controls CI-RS232 Serial Interface Installation Guide


Home » Touch Controls » Touch Controls CI-RS232 Serial Interface Installation Guide 🖺



Contents


- 1 INSTALLATION
- **INSTRUCTIONS**
- 2 TIPS / NOTES
- 3 Documents / Resources
 - 3.1 References
- **4 Related Posts**

INSTALLATION INSTRUCTIONS

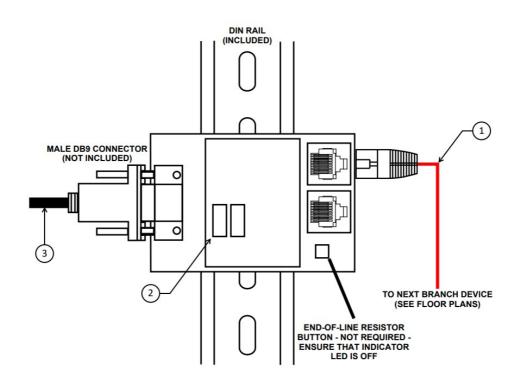


CABLE TYPES			
LINE ID	DESCRIPTION	TYPE	NOTES
	BRANCH	CAT 5 (MIN)	TOTAL BRANCH LENGTH NOT TO EXCEED 1000'

SIDE VIEW

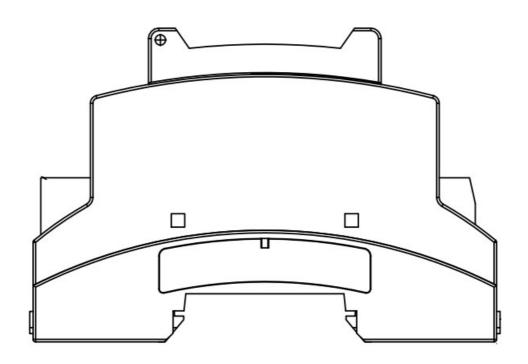

RS232 SYMBOLS AS SHOWN ON SUBMITTAL AND CONSTRUCTION DOCUMENTS

DEVICE PINOUT (FEMALE PORT)

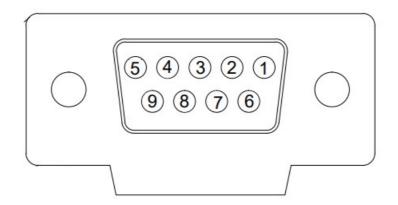

PIN	WIRE
1	NC
2	RxD
3	TxD
4	NC
5	GND
6	NC
7	RTS
8	CTS
9	NC

TIPS / NOTES

- 1. ENSURE CABLES ARE PLUGGED INTO BRANCH PORTS OF ROOM MANAGERS DO NOT CONNECT TO SMARTNET OR SMARTPACKS
- 2. ADDRESS DISPLAY IF DEVICE HAS COMMUNICATION "AC" WILL BE SHOWN
- 3. SERIAL CABLE TO 3RD PARTY DEVICE MAX 30'

Touch Controls Touché Lighting Controls (a Product of ESI Ventures)

Touché Lighting Controls (a Product of ESI Ventures)
A: 2085 Humphrey Street, Fort Wayne, IN 46803
T: 888.841.4356

W: ToucheControls.com

Documents / Resources



<u>Touch Controls CI-RS232 Serial Interface</u> [pdf] Installation Guide CI-RS232, CI-RS232 Serial Interface, Serial Interface, Interface

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.