

**Touché**  
LIGHTING CONTROL  
**DI-PS Partition  
Sensor**



## Touch Controls DI-PS Partition Sensor Instructions

[Home](#) » [Touch Controls](#) » Touch Controls DI-PS Partition Sensor Instructions 

### Contents

- [1 Touch Controls DI-PS Partition Sensor](#)
- [2 Product Specifications](#)
- [3 PARTITION SENSOR MOUNTING](#)
- [4 PARTITION SENSOR WIRING](#)
- [5 Installation](#)
- [6 Testing](#)
- [7 Compatibility](#)
- [8 Frequently Asked Questions](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)




**Touch Controls DI-PS Partition Sensor**




## Product Specifications

- Product Name: Partition Sensor
- Model Number: DI-PS
- Power Input: 12VDC
- Cable Types: CAT 5 (Minimum)
- Maximum SmartNet Length: 400


## PARTITION SENSOR MOUNTING

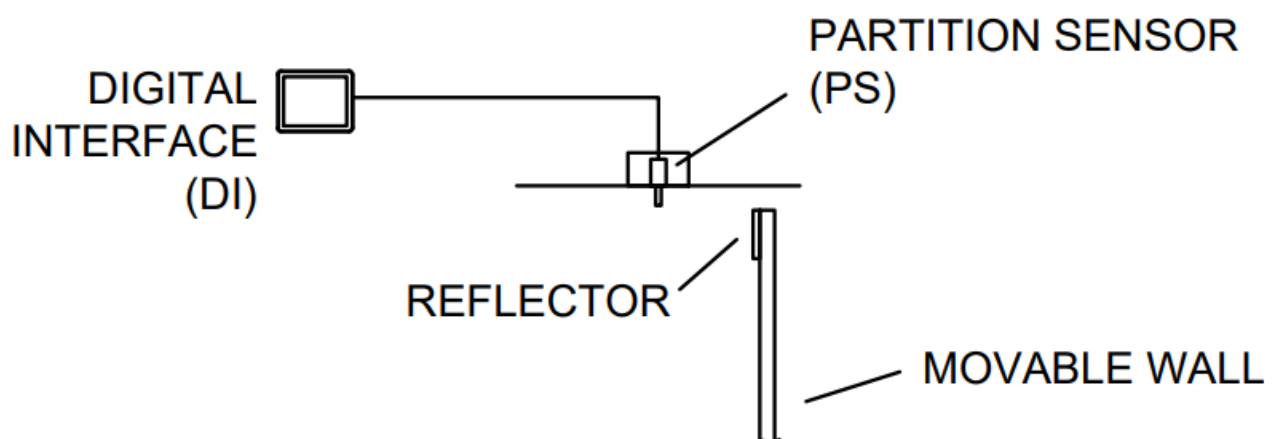

THE PARTITION SENSOR MUST BE IN LINE WITH THE REFLECTOR AND WITHIN 10' OR LESS.

CABLE TYPES			
LINE ID	DESCRIPTION	TYPE	NOTES
	SMART	CAT 5 (MIN)	TOTAL SMARTNET LENGTH NOT TO EXCEED 400'

### PARTITION SENSOR WIRING

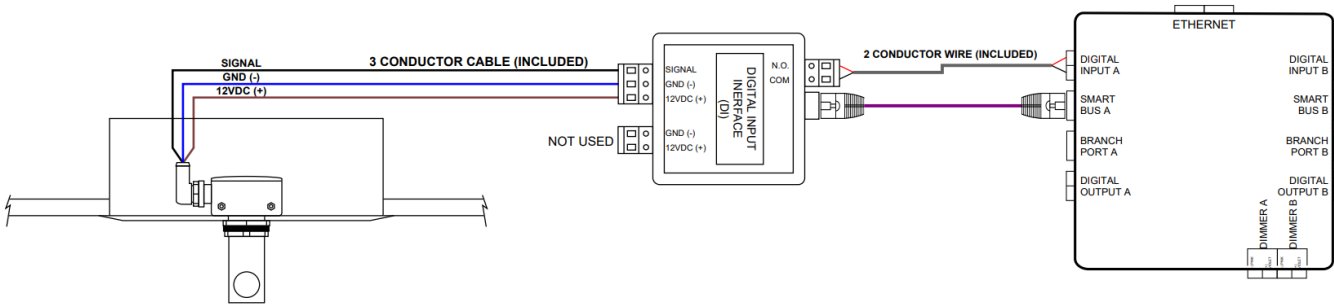

### TIPS / NOTES

- ONCE THE DIGITAL INPUT INTERFACE (DI) IS POWERED ON VIA THE SMARTNET, THE PARTITION SENSOR AND DI CAN BE TESTED.
- IF WIRED CORRECTLY THE PARTITION SENSOR WILL HAVE A VISIBLE RED LED.
- THE REFLECTOR CAN THEN BE MOVED IN FRONT OF THE SENSOR. THIS SHOULD CAUSE AN
- AUDIBLE CLICK INSIDE THE DI. IF CLICK IS NOT HEARD, VERFIY WIRING.
- PARTITION SENSOR ONLY FUNCTIONS WITH THE ROOM MANAGER.

### Installation

1. Ensure the Partition Sensor is mounted in line with the reflector and within 10 feet or less.
2. Connect the Digital Interface (DI) following the wiring instructions provided.
3. Power on the Digital Input Interface (DI) via SmartNet for testing.

### Testing

1. Once powered on, check for a visible red LED on the Partition Sensor.
2. Move the reflector in front of the sensor to trigger an audible click inside the DI.
3. If no click is heard, verify the wiring connections.

### Compatibility

The Partition Sensor only functions with the Room Manager system.

### Contact Information

For further assistance, contact Touche Controls at:  
 Telephone: 888.841.4356  
 Website: [ToucheControls.com](http://ToucheControls.com)

### Frequently Asked Questions

**Q: What should I do if the Partition Sensor LED does not light up?**


A: Verify the power supply and wiring connections to ensure correct installation.

**Q: Can the Partition Sensor be used without the Room Manager?**

A: No, the Partition Sensor requires the Room Manager system for functionality.

Touché Lighting Controls (a Product of ESI Ventures) A: 2085 Humphrey Street, Fort Wayne, IN 46803 T: 888.841.4356 W: [ToucheControls.com](http://ToucheControls.com)

**Documents / Resources**

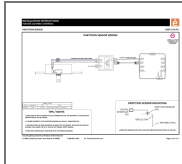

[Touch Controls DI-PS Partition Sensor](#) [pdf] Instructions  
DI-PS Partition Sensor, DI-PS, Partition Sensor

**References**

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.