

# **Touch Lighting Control C-XP-120 Interposing Contactor Instruction Manual**

Home » Touch Lighting Control » Touch Lighting Control C-XP-120 Interposing Contactor Instruction Manual








**PART # IC-XP-120 INSTALLATION INSTRUCTIONS TOUCHÉ LIGHTING CONTROLS** 

#### **Contents**

- 1 INTERPOSING CONTACTOR
- 2 Documents / Resources
  - 2.1 References

### INTERPOSING CONTACTOR

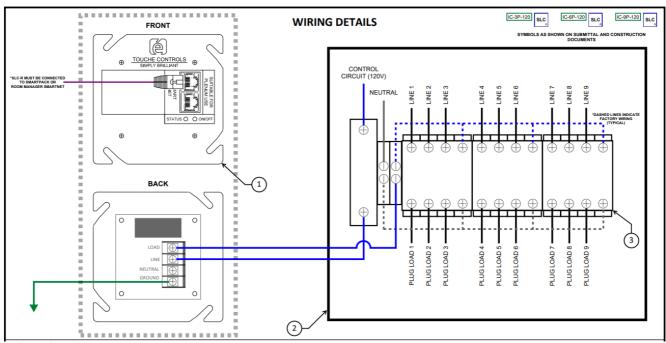

- TIPS / NOTES
- 1. SLC-R MODULE (INCLUDED WITH IC-XP-120)
- 2. IC-XP-120 ENCLOSURE IS INCLUDED (8X8X4 FOR IC-3P-120 AND 10X10X4 FOR IC-6P-120 AND IC-9P-120)
- 3. POLE CONTACTOR QUANTITY VARIES BASED ON MODEL NUMBER

**CONTROL POWER MUST BE 120V** 



Touché Lighting Controls (a Product of ESI Ventures) A: 2085 Humphrey Street, Fort Wayne, IN 46803 T: 888.841.4356

W: ToucheControls.com



# <u>Touch Lighting Control C-XP-120 Interposing Contactor</u> [pdf] Instruction Manual C-XP-120 Interposing Contactor, C-XP-120, Interposing Contactor

## References

## • User Manual

### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.