

Toyama
Power Products
TBT18SC25C
Pruning Scissors



Toyama TBT18SC25C Pruning Scissors Owner's Manual

[Home](#) » [Toyama](#) » Toyama TBT18SC25C Pruning Scissors Owner's Manual 

Contents

- 1 [Toyama TBT18SC25C Pruning Scissors](#)
- 2 [Product Information](#)
- 3 [Frequently Asked Questions](#)
- 4 [PREFACE](#)
- 5 [SAFETY SYMBOLS](#)
- 6 [SPECIFICATIONS](#)
- 7 [PRUNING SHEARS PARTS POSITION](#)
- 8 [CARES WHEN OPERATING YOUR EQUIPMENT](#)
- 9 [USING THE PRUNING SCISSORS](#)
- 10 [PRUNING SCISSORS LUBRICATION](#)
- 11 [CHANGE THE BLADE](#)
- 12 [WARRANTY TERM](#)
- 13 [Documents / Resources](#)
 - 13.1 [References](#)





Product Information

Specifications

- **Model:** TBT18HT500R
- **Type:** Cordless Pruning Scissors
- **Cutting Capacity:** 25 mm
- **Weight:** 1.36 kg (Tool only), 1.60 kg (Gross weight)

Frequently Asked Questions

Q: Can this product be used for cutting branches thicker than 25mm?

A: It is not recommended to use this product for cutting branches thicker than the specified cutting capacity of 25mm.

Q: How often should the blades be sharpened?

A: The blades should be sharpened regularly or when you notice a decrease in cutting efficiency. Refer to the maintenance section in the manual for guidance on blade sharpening.

PREFACE

Thank you for purchasing TOYAMA product.












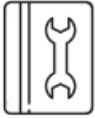




This manual covers the operation and maintenance of your product. The information and specifications included in this publication were in effect at the time of approval for printing. No part of this publication may be reproduced without written permission. This manual should be considered a permanent part of this product and should remain with it. The illustration may vary according to the model.

Keep this owner's manual handy, so you can refer to it at any time. This owner's manual is considered a permanent part of the product and should remain with the product if resold.

If a problem should arise, or if you have any questions about the product, consult you authorized TOYAMA dealer.

SAFETY SYMBOLS

The following symbols are intended to remind you of the safety precautions to be followed.

	READ MANUAL		WEAR EAR PROTECTORS
	WEAR RESPIRATORY PROTECTION		WEAR SAFETY GLOVES
	WEAR PROTECTIVE FOOTWEAR		EAR, EYE AND HEAD PROTECTION
	WARNING		ROTATING PARTS
	WARNING ELECTRICITY		RISK OF INJURY
	TIPOVER HAZARD		RISK OF SLIPPING
	KICKBACK		HIGH TEMPERATURE
	OBJECTS CAN BE THROWN		
	CHECK THE WORK CONDITIONS		

SPECIFICATIONS

MODEL	TBT18HT500R
TYPE	CORDLESS PRUNING SHEARS;
WIDTH	25 MM
NET WEIGHT	1,36 kg
GROSS WEIGHT	1,60 kg

 
PRUNING SHEARS PARTS POSITION



1. MOVABLE BLADE;
2. FIXED BLADE:
3. TRIGGER;
4. LED LIGHT INDICATOR;
5. BATTERY;

CARES WHEN OPERATING YOUR EQUIPMENT

- READ THE MANUAL CAREFULLY;

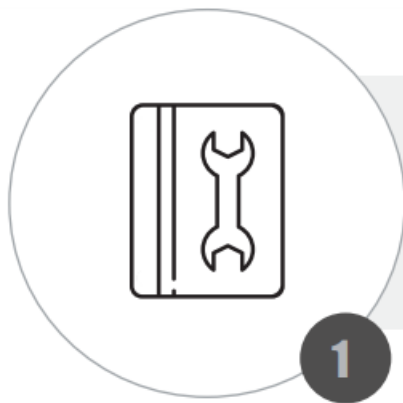

- NEVER USE THIS EQUIPMENT WHEN YOU ARE TIRED, SLEEPY, ON THE EFFECT OF ALCOHOL, DRUGS OR OTHER SUBSTANCES;



- NEVER USE THE PRODUCT UNDER THE FOLLOWING CIRCUMSTANCES:



 
- WARNING




- WHEN USING THE PRODUCT, MAKE SURE THAT CHILDREN, UNAUTHORIZED PERSONS OR ANIMALS ARE AT A SAFE DISTANCE AT LEAST 15 METERS AWAY FROM THE EQUIPMENT;



- BE SURE TO KEEP THIS MANUAL ACCESSIBLE SO THAT YOU CAN CONSULT ANY DOUBTS;

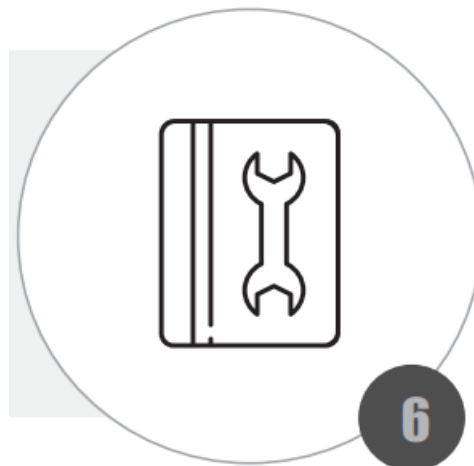

 
- ALWAYS MAKE SURE TO INCLUDE THIS MANUAL WHEN SELLING, LENDING, OR TRANSFERRING OWNERSHIP OF THIS PRODUCT;

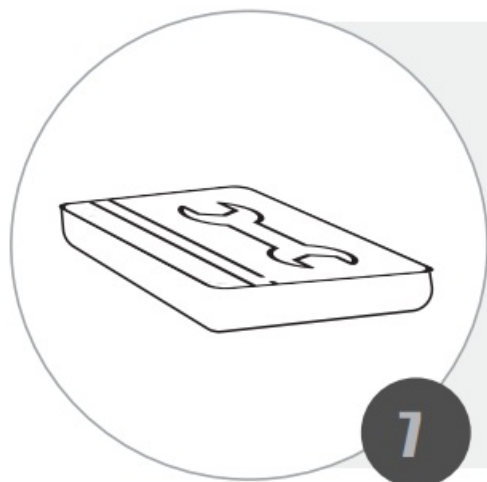


- NEVER ALLOW CHILDREN OR USERS WHO ARE UNABLE TO UNDERSTAND THE INSTRUCTIONS GIVEN IN THIS MANUAL TO USE THE PRODUCT;



 
- NEVER REMOVE THE DECALS THAT COME WITH THE PRODUCT;

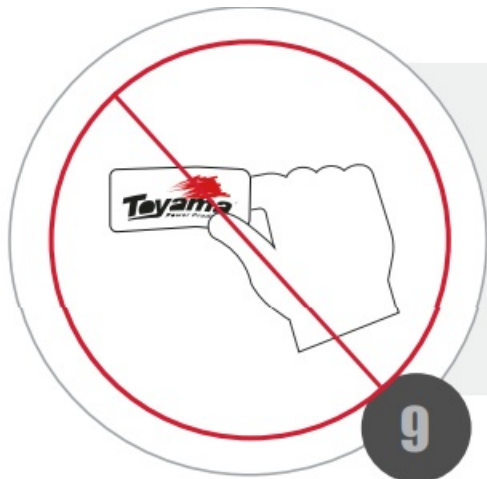

 
- NEVER REMODEL OR MODIFY THE PRODUCT. THESE ACTIONS RESULT IN LOSS OF WARRANTY;

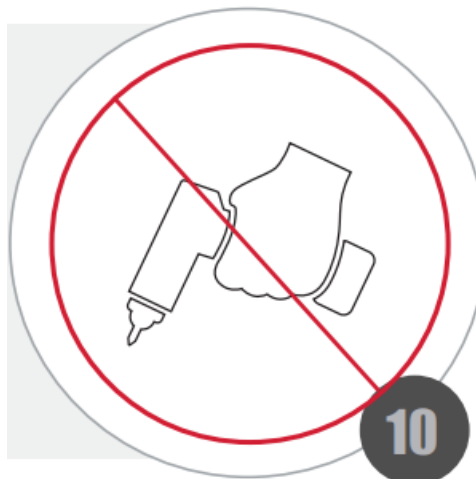

 - ALWAYS KEEP NEAR THE NECESSARY TOOLS FOR PERIODIC CHECKS OR MAINTENANCE;

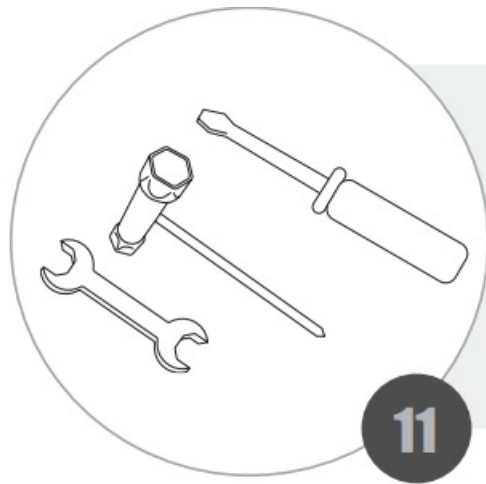

 - OPERATE WITH UPRIGHT POSTURE. MAINTAIN PROPER SUPPORT AND BALANCE AT ALL TIMES;

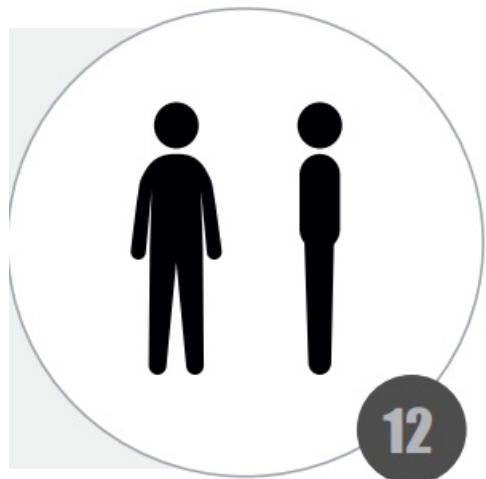

- NEVER WEAR WIDE CLOTHING, SHORTS, SHORTS, OPEN SHOES, LOOSE HAIR, ETC. ALWAYS USE THE RECOMMENDED PROTECTIVE EQUIPMENT;



- PAY ATTENTION TO WEAR AND OVERHEATING OF PARTS. IF THERE IS ANY ABNORMALITY OF THE MACHINE, STOP THE OPERATION IMMEDIATELY AND CHECK THE MACHINE WITH CARE. TAKE THE MACHINE TO AN AUTHORIZED DEALER IF NECESSARY. NEVER OPERATE A MACHINE THAT IS NOT IN GOOD WORKING ORDER;



USING THE PRUNING SCISSORS

- INSERT THE BATTERY INTO THE POWER CONNERCTOR OF THE PRUNER;



- SWITCH ON THE POWER SWITCH OF THE PRUNNER. DUE TO THE FIRST TIME USAGE THAT THE LED DISPLAY INDICATOR WILL BE GREEN AND THE BUZZER WILL BUZZ FOR 2 TIMES ;



 
- DOUBLE CLICK THE TRIGGER, THE PRUNER BLADES WILL AUTOMATICALLY OPEN;



- NORMAL PRUNING: PRESS TRIGGER TO CLOSE THE BLADES AND RELEASE THE TRIGGER TO OPEN BLADES;



- BLADE CLOSURE: CONTINUE TO PRESS THE TRIGGER, A CONTINUAL BUZZ ME-ANS THE BLADE WILL STAY CLOSED;

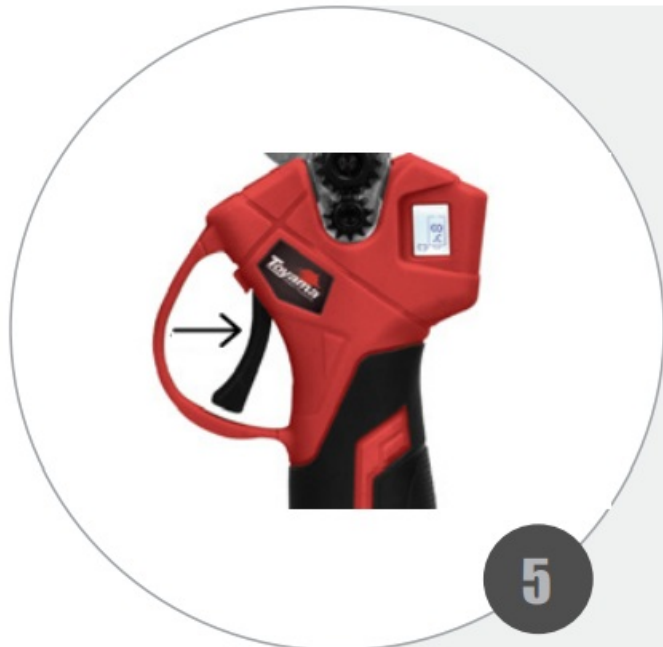

- BEFORE OPERATION, IN ORDER TO SEE IF THE PRUNER FUNCTIONS WELL, PLE-ASE PRESS THE TRIGGER TO CLOSE AND RELEASE THE TRIGGER TO OPEN THE BLADES WITHOUT CUTTING ANYTHING. REPEAT THIS FOR FEW TIMES;



PRUNING SCISSORS LUBRICATION

- THERE IS A OIL FILLING PORT AT THE REVERSE OF THE PRUNER, TAKE OUT THE COTTON;



- PLACE THE OIL BOTTLE NOZZLE IN THE LUBRICATING PORT. HOLD THE OIL BOTTLE UPRIGHT AND THEN LUBRIFIE;



- ONCE LUBRICATION IS COMPLETE, PLUG THE COTTON;



- OPERATE THE PRUNER, MAKE THE LUBRICATION IS WELL PROPORTIONED;



WARNING



CHANGE THE BLADE

- USING THE PHILIPS HEAD TIP ON THE TOOL, UNSCREW THE TOW SCREWS AND REMOVE COVER;



- USING THE OTHER TIP OF THE SPECIAL TOOL, REMOVE SCREW AND THE ELAS-TOMER WASHER;



- AGAIN USING THE SPECIAL TOOL, REMOVE LOCKED SCREW NUT AND REMOVE RESISTANCE WASHER;



- REMOVE THE BLADE AND REPLACE THE BLADE;



WARRANTY TERM

This product is guaranteed against defects in material and workmanship for a legal period of three (3) months from the date of issue of the respective Sales Invoice. We undertake to repair or replace, within the period mentioned, free of charge, parts that are recognized by the Technical Department as defective, upon approval of the Warranty Request. This warranty is limited and non-transferable, valid only for the first purchaser and covers only the product, all damages and losses resulting from misuse of the equipment are excluded. Any freight/insurance and other costs will be borne by the buyer.

The following shall be excluded from the guarantee:

- Defects caused by use not in accordance with the instructions contained in the Owner's Manual; accidents (falling, fire, etc.); use of non-original parts and repairs and / or maintenance carried out by unauthorized workshops and / or technicians.
- Spare parts and natural maintenance such as spark plugs, lubricants, filters, fuel cap, starting cord, handles, seals, gaskets, safety devices and similar items.
- Parts that suffer from natural wear and tear due to friction such as piston, cylinder, piston rings, bearings, pins,

rollers, connecting rod, crankshaft, springs, bushings, rotor and mechanical seals.


- Violated products.
- Products whose Certificate of Warranty is incorrectly filled in and / or without the Sales Invoice number.

NOTE: A breakdown during the warranty period does not entitle the buyer to stop payment, or discounts.

IMPORTANT: Keep the Sales Invoice, the Product Warranty Certificate and present them when you need technical assistance.

ATTENTION: Read the owner's instruction manual and all warnings of danger and attention before operating the equipment.

Documents / Resources

	<p>Toyama TBT18SC25C Pruning Scissors [pdf] Owner's Manual TBT18SC25C, TBT18HT500R, TBT18SC25C Pruning Scissors, TBT18SC25C, Pruning Scissors, Scissors</p>
-----------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [S_producto.la - producto Resources and Information.](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.