

TOYBOX 62100966F-2 Remote Control Stunt Vehicle



# TOYBOX 62100966F-2 Remote Control Stunt Vehicle Instruction Manual

[Home](#) » [TOYBOX](#) » TOYBOX 62100966F-2 Remote Control Stunt Vehicle Instruction Manual 

## Contents

- 1 TOYBOX 62100966F-2 Remote Control Stunt Vehicle
- 2 Product Specifications
- 3 Product Usage Instructions
- 4 Frequently Asked Questions
- 5 VEHICLE
- 6 REMOTE CONTROL
- 7 FCC Statement
- 8 HOW TO OPERATE
- 9 General Info
- 10 Documents / Resources
  - 10.1 References



## TOYBOX 62100966F-2 Remote Control Stunt Vehicle



### Product Specifications

- Product Name: Remote Control Stunt Vehicle
- Frequency: 49MHz
- Features: Flip Action, Double Sided, LED Lights, Rotation
- Power Source: Remote Control – 2 x AA batteries (not included), Vehicle – 4 x AAA batteries (not included)
- Age Recommendation: 5+

### Product Usage Instructions

#### Battery Replacement:

##### Vehicle:

1. Turn the power switch to the OFF position.
2. Use a Phillips screwdriver to loosen and remove the battery compartment door.
3. Remove old batteries and replace with 4 new 1.5V AAA batteries.
4. Replace the battery compartment door and tighten the screw.

##### Remote Control:

1. Use a Phillips screwdriver to loosen and remove the battery compartment door.
2. Remove old batteries and replace with 2 new 1.5V AA\ batteries.
3. Replace the battery compartment door and tighten the screw.

#### Battery Caution:

Use the recommended battery types (alkaline) to prevent damage to the unit. Do not mix different types or brands

of batteries, and do not attempt to recharge them.

### Operation Instructions:

- **Forward:** Push the left control stick upwards.
- **Backward:** Push the left control stick downwards.

**Spin Turn left forward:**

### Frequently Asked Questions


- **Q: What should I do if the vehicle does not respond to the remote control?**
  - A: Ensure that the batteries are properly installed in both the vehicle and remote control. Make sure the power switch is in the ON position and that there is no interference in the operating environment.
- **Q: Can I use rechargeable batteries with this product?**
  - A: It is recommended to use alkaline batteries with this product. Rechargeable batteries may not provide optimal performance.

### BATTERY REPLACEMENT

To replace batteries refer to the following directions:

#### VEHICLE

1. Turn the power switch to the OFF position.
2. Use a Phillips screwdriver to loosen and remove the battery compartment door as shown.
3. Remove old batteries and replace with 4 new 1.5V "AAA" batteries.
4. Replace the battery compartment door and tighten the screw.

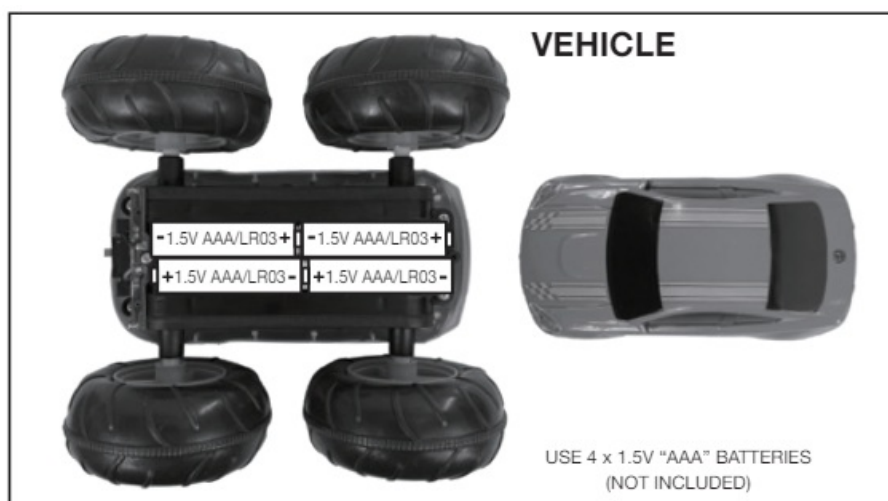

## REMOTE CONTROL



1. Use a Phillips screwdriver to loosen and remove the battery compartment door as shown.
2. Remove old batteries and replace with 2 new 1.5V "AA" batteries.
3. Replace the battery compartment door and tighten the screw.

### BATTERY CAUTION:

- Alkaline batteries are recommended.
- To avoid battery leakage: Do not mix old and new batteries or mix battery types (alkaline, standard or rechargeable batteries) or different brands.
- Do not use rechargeable batteries. Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended are to be used.
- Install batteries with the correct polarity (+ and -).
- The supply terminals are not to be short-circuited.
- If batteries are loose, bend out the contacts for a tight fit.
- Keep loose batteries out of reach of children.
- Do not use if battery compartment cover is loose or missing. Keep battery compartment cover secured with screw.
- Exhausted batteries are to be removed from toy. Immediately and safely dispose of any used batteries.
- Do not dispose of this product in fire, battery inside this product may explode or leak.
- When toy is not in use for an extended period of time, remove batteries to prevent possible leakage and damage to the unit.
- Check the product periodically for signs of damage to electrical parts; do not play with product until damage has been properly assessed.

If the unit malfunctions, please remove the batteries for one minute and reinstall again. If the malfunctions persist, please replace with new batteries.

MAKE SURE THE BATTERIES ARE PROPERLY INSTALLED AND INSERTED CORRECTLY AND ALWAYS FOLLOW BOTH THE PRODUCT AND BATTERY MANUFACTURER'S INSTRUCTIONS. TO ENSURE PROPER SAFETY AND OPERATION, BATTERY REPLACEMENT MUST ALWAYS BE DONE BY ADULT.

Never let a child use this product unless battery door is secured. Batteries are small objects and could be ingested. Keep all batteries away from small children. Don't forget to remove batteries from the vehicle and remote control

when you have finished operating your vehicle. Remove all packaging before giving toy to child. Please keep packaging for future reference. Color, contents and designs may vary.

## **FCC Statement**

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:








- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## HOW TO OPERATE

HOW TO OPERATE	
Forward 	Push the left control stick upwards.
Backward 	Push the left control stick downwards.
Spin 	To spin counterclockwise, keep pushing the right control stick to the left. To spin clockwise, keep pushing the right control stick to the right.
Turn left forward 	Push the left control stick upwards while pushing the right control stick left.
Turn right forward 	Push the left control stick upwards while pushing the right control stick right.
Turn left and back 	Push the left control stick downwards while pushing the right control stick left.
Turn right and back 	Push the left control stick downwards while pushing the right control stick right.

Do not put in trash. Recycle or manage as hazardous waste


- 392133-06695-729-050624
- DISTRIBUTED BY
- GREENBRIER INTERNATIONAL, INC.
- 500 VOLVO PARKWAY,
- CHESAPEAKE, VA 23320
- MADE IN CHINA

### General Info

- FLIP ACTION
- DOUBLE SIDED
- LED LIGHTS
- 360° ROTATION
- 49MHz



## Documents / Resources

	<p><b><a href="#">TOYBOX 62100966F-2 Remote Control Stunt Vehicle</a></b> [pdf] Instruction Manual          62100966F-2, 62100966F-2 Remote Control Stunt Vehicle, Remote Control Stunt Vehicle, Stunt Vehicle, Vehicle</p>
---	---

## References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.