



## TOZO Q1012/X8TW Drone Trouble Shooting Manual

[Home](#) » [TOZO](#) » TOZO Q1012/X8TW Drone Trouble Shooting Manual 

### TOZO Q1012/X8TW Drone Trouble Shooting

In order to make sure that you can smoothly use the TOZO drone, please kindly find below some important use instructions and possible trouble shootings.

If you have any questions, please kindly reply this email to contact us first. The seller TOZO would be happy to make it right.

### HOW TO TAKE OFF



1: Push the throttle lever up



2: Push the throttle lever down



3: Calibration



4: Unlock



5: Remove finger after unlock



6: Push up the left rocker to take off

#### NOTE 1:

The USB cable red light will be off during charging. The red light will be on after fully charge.

it can fly 5-7 mins after a fully charge, (recharge time: about 60 mins);


The drone led will flash when it is low power(it need to stop and replace the battery).

The similar LED light:





(The Q1012 drone come with a USB charger cable, the wall adapter not included)


Just need remove the 6 screws

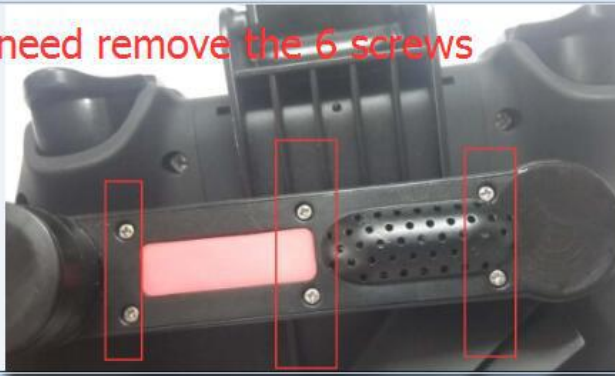


cut the end plastics  
of the new motor

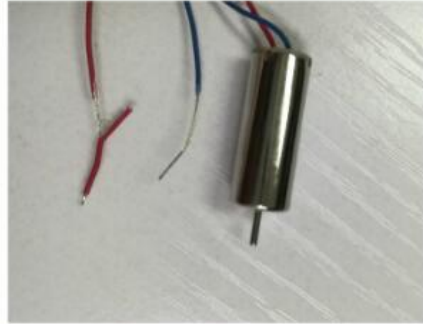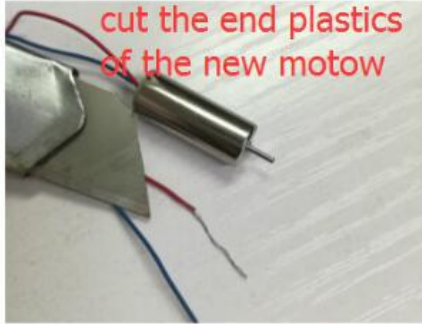

Remove the old motor,  
Connect the line  
red to red, blue to blue

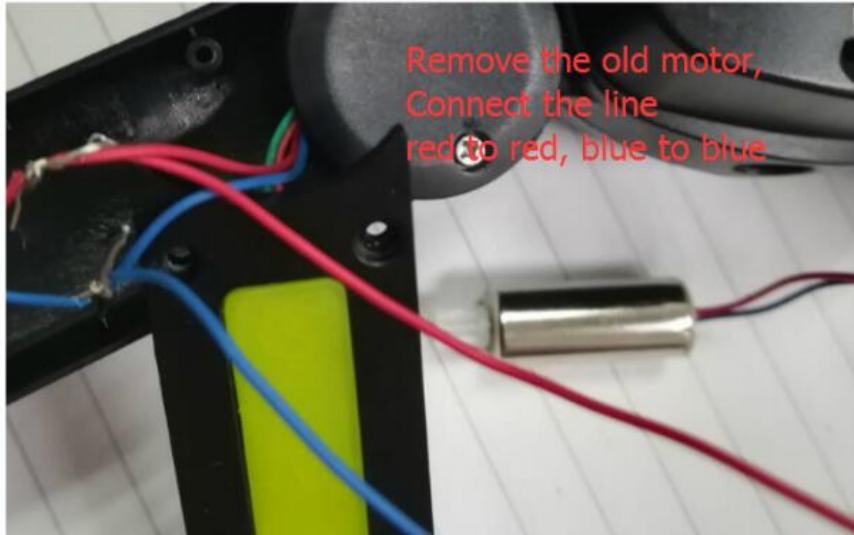

Avoid connection between  
different line

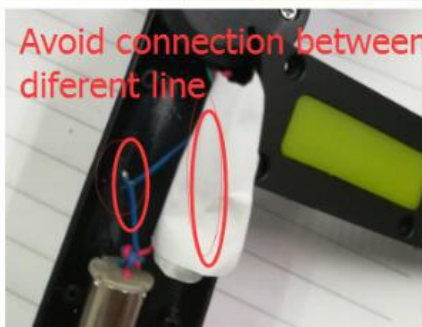

Restall



#### NOTE 2:


[Most of the parts are available at amazon, drone fans always Search [q1012 part] at amazon, so that they can find out the part

To upgrade their drones.

]

If one of the propellers can not work, or spin slowly, please check the motor and gear set, the new motor and gear set will help to make it work again.

Please refer the below step for how to replace the motor.

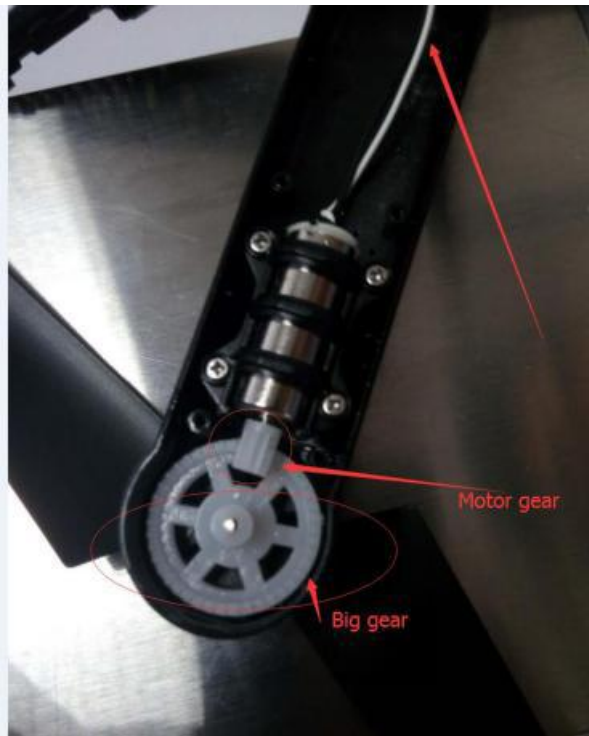

### NOTE 3: Emergency Stop

When out of control, Just press both L2 & R2 buttons down to an emergency stop to prevent more damage.

### Here are some friendly warm tips

- 1—. Attention: Please read through the manual and fully charged the battery before flight. And only use under adults supervision.
- 2—. It need to adjust the acceleration before a new flight. Please turn on the drone first, then turn on the controller later.
- 3—. Suitable for pilots teenage or older. Only use under adults supervision.
- 4—. No need TF card on this WIFI version drone. The photos and video will be stored on the Phone through APP (need scan the QR code that can be found on package and manual page 13 to download).
- 5—. Try best to prevent collisions, it may be knocked broken and the propeller would fly off. For this issue, a new set of below whole set of propellers will make it work again. (Search amazon<Q1012 part> )
- 6—. When out of control, just press both L2 & R2 button down to an emergency stop to prevent more damage
- 7—. It come with a USB charger cable (The adapter is not included). (USB cable red LED will be off while recharging, it'll turn red after fully charge)
- 8—. Fly time 5-7 mins, and need about 60-80 mins for a fully charge. RC drone fans always have the extra battery for more funds. The motors and circuit board and battery may heat up with use. Take a 10-minute cool-down break between flights and recharge to ensure your parts last as long as possible.
- 9—. After flight, drone LED flash means battery is closing to exhausted, please stop fly IMMEDIATELY. Otherwise, it would be out of control and damage the battery by over-discharge. RC drone fans always have the spare battery for more fun.

For any assistance, please contact email: [tozoservice@outlook.com](mailto:tozoservice@outlook.com)

**Or just reply this email** We would be happy to help you.

TOZO Q1012/X8TW Drone Trouble Shooting Manual – [Download \[optimized\]](#)

TOZO Q1012/X8TW Drone Trouble Shooting Manual – [Download](#)