



TP-Link 10 Gigabit PCI Express Network Adapter Installation Guide

[Home](#) » [tp-link](#) » TP-Link 10 Gigabit PCI Express Network Adapter Installation Guide


Contents [[hide](#)]

- [1 TP-Link 10 Gigabit PCI Express Network Adapter Installation Guide](#)
- [2 1. Hardware Connection](#)
- [3 2. Driver Installation](#)
- [4 LED Indicator](#)
- [5 Troubleshooting](#)
- [6 Support](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)


TP-Link 10 Gigabit PCI Express Network Adapter Installation Guide

1. Hardware Connection

- a. Turn off your computer, unplug the power cable and remove the case panel

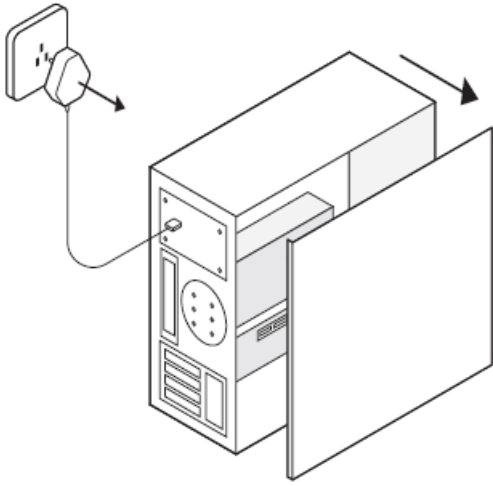


b. Locate an available PCI-E slot and carefully insert the adapter.

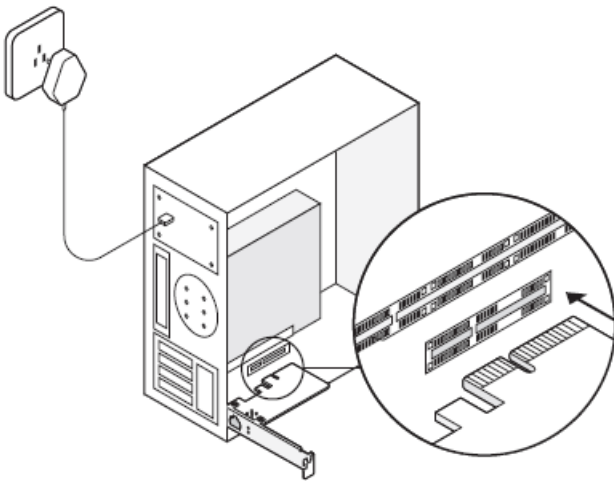

Note:

If the bracket is not suitable for your computer, detach it from the adapter's board and replace it with the low-profile bracket.

c. Replace the case panel, plug in the power cable and turn on your computer. Then connect the Ethernet cable to the adapter.

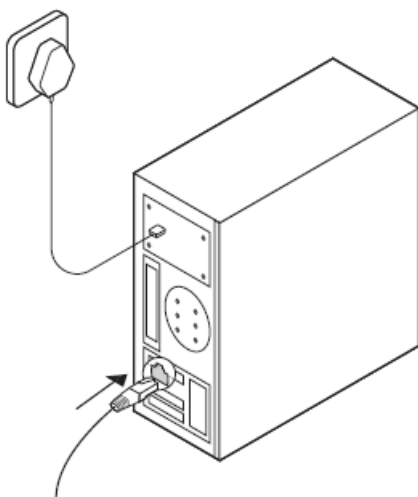

2. Driver Installation

a. Insert the CD and run the Autorun.exe.

Note:

- You can also download the driver or check the new release at

<https://www.tp-link.com/download-center>


- To install driver on Linux, refer to

<https://www.tp-link.com/faq-2868.html>

b. Select your adapter and follow the instructions to complete the installation.

Note:

If you can't install the driver successfully, disable the antivirus software and firewall, then try again.

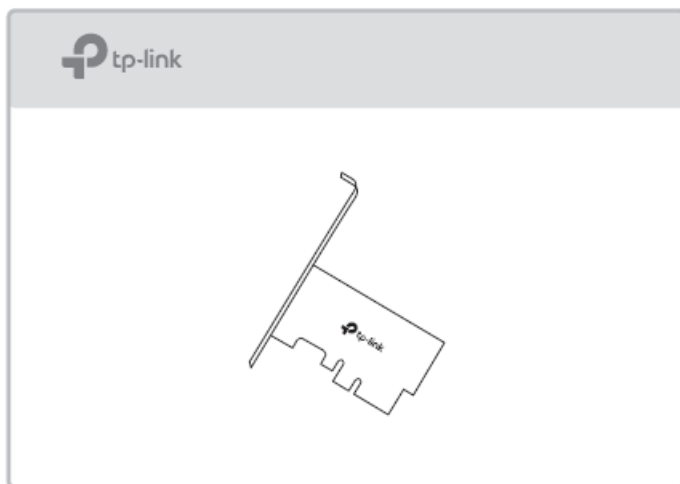

LED Indicator

LED	Status
10G Link	Flashing: The adapter is working at 10 Gbps. Off: No link or the adapter is working at a different speed.
Link	Flashing: The adapter is working at 5 Gbps/ 2.5 Gbps/ 1 Gbps/100 Mbps. Off: No link or the adapter is working at a different speed.

Note:

If neither LED flashes, check whether the adapter is detected by the computer or the driver is successfully installed.

Troubleshooting

Q1: How can I find the driver if the CD is lost or broken?

- You can find and download the driver at <https://www.tp-link.com/download-center>

Q2: How can I find the hardware version of the adapter?

- The hardware version (Ver:X.Y) is printed on the product label on the package or the adapter. The number X is the hardware version of the adapter.
- For more detailed instructions, please visit <https://www.tp-link.com/faq-46.html>

Q3: What should I do if my computer cannot find the new hardware?

- Restart your computer and try again.
- Power off the computer, then reinsert the adapter or try another PCI-E slot.
- If the problem persists, contact our Technical Support.


Support

For technical support, replacement services, user guides, and other information, please visit <https://www.tp-link.com/support>, or simply scan the QR code.

- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Keep the device away from water, fire, humidity or hot environments.

©2020 TP-Link 7106508928 REV1.0.1

Documents / Resources

	tp-link 10 Gigabit PCI Express Network Adapter [pdf] Installation Guide 10 Gigabit PCI Express Network Adapter
---	---

References

- [🔗 Download Center | TP-Link](#)
- [🔗 How can I install the driver of TX201&TX401 on Linux | TP-Link](#)
- [🔗 How to find the hardware version on a TP-Link device](#)
- [🔗 TP-Link Product Support - Wireless Networking Equipment Support](#)