



tp-link AP9635 Wireless Access Point Installation Guide

[Home](#) » [tp-link](#) » tp-link AP9635 Wireless Access Point Installation Guide 

Contents

- 1 [tp-link AP9635 Wireless Access Point](#)
- 2 [Hardware Overview](#)
- 3 [Via Web Browser](#)
- 4 [Safety Information](#)
- 5 [Documents / Resources](#)
 - 5.1 [References](#)
- 6 [Related Posts](#)



tp-link AP9635 Wireless Access Point



Product Information

The Wireless Access Point (AP) is a device that provides wireless network connectivity. It can be mounted to the ceiling, wall, or junction box using the screws provided. The AP requires heat dissipation through the metal bracket during use.

Hardware Overview

Front Panel: The front panel features an LED indicator that shows the status of the AP. The LED can indicate if the AP is working normally, initializing, upgrading, resetting, or in an isolated state.

Rear Panel: The rear panel includes a RESET button for restoring the device to factory default settings. It also has an Ethernet Port (PoE) for connecting to a router or switch for data transmission and Power over Ethernet (PoE).

Power Port: The power port is used to connect the power adapter to provide power to the AP.

Product Usage Instructions

1. Ceiling Mounting:

- Remove the ceiling tile larger than the AP.
- Place the mounting bracket in the center of the ceiling tile.
- Mark positions for the screw holes and a location for the Ethernet cable hole.
- Drill 4 mm diameter holes for the screws and a 25 mm diameter hole for the Ethernet cable.
- Secure the mounting bracket to the ceiling tile using pan-head screws, washers, and wing nuts.
- Feed the Ethernet cable through the hole and set the ceiling tile back into place.

2. Wall Mounting:

- If your Ethernet cable feeds through the wall, position the mounting bracket below the cable hole.
- Mark positions for the screw holes and drill 6 mm diameter holes.
- Insert the plastic wall anchors into the holes.
- Secure the mounting bracket to the wall using self-tapping screws.

3. Junction Box Mounting:

No specific instructions are provided for junction box mounting in the given text extract.

1. Connecting and Attaching the AP:


- Connect the Ethernet cable to the Ethernet port on the AP.
- Attach the AP to the mounting bracket by rotating it until it locks into place.

Note: The AP9650 is used as an example throughout the guide. The images displayed may differ from your actual product. The power adapter is not provided, so please refer to the label at the bottom of the product for power supply specifications.

Note: AP9650 is used as an example throughout the Guide. Images may differ from your actual product

Hardware Overview

Front Panel

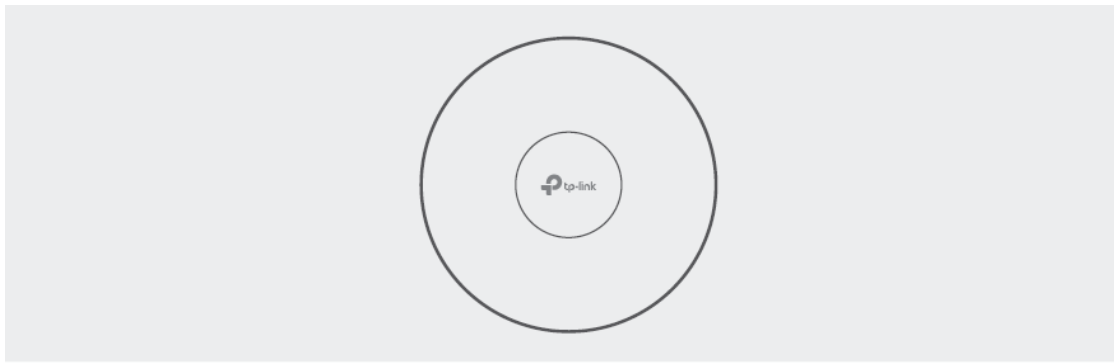

LED Indicator

On: Working normally/Initializing.


Off: Working abnormally/Power off/LED is turned off.

Flash

- Flash twice: Initialization is completed.
- Flash once per second: The AP is upgrading.
- Flash quickly: The AP is resetting or the controller is locating the AP*.
- Flash slowly: The AP is in an isolated state.

When the Locate feature is activated in the controller, the LED flashes quickly to locate and identify the device. The LED will flash for 10 minutes, or you can disable the feature manually to stop it flashing.

Rear Panel

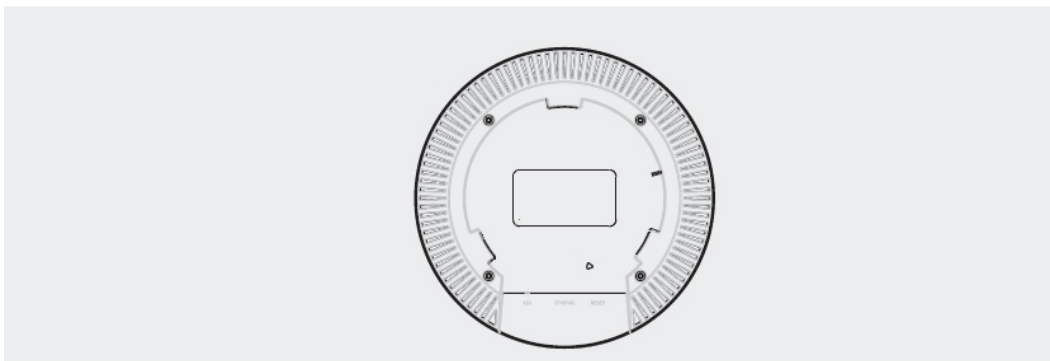

RESET

With the device powered on, press and hold the button for about 5 seconds until the LED flashes quickly. Then release the button. The device will restore to the factory default settings.

Ethernet Port (PoE)

The port is used to connect to a router or a switch to transmit data, or to a PSE (Power Sourcing Equipment), such as a PoE switch, for both data transmission and Power over Ethernet (PoE) through an Ethernet cable.

Power Port


Plug one end of the power adapter into this port and the other end into a standard electrical wall outlet to power the AP.

Note: Power adapter is not provided. For power supply specifications, please refer to the label at the bottom of the product.

Hardware Installation


The AP can be mounted to the ceiling, the wall, or in a junction box, using the screws in the package. Choose the appropriate mounting and installation steps below.

Note: This product requires heat dissipation through the metal bracket during use, please be careful not to touch the metal bracket in the heat dissipation.

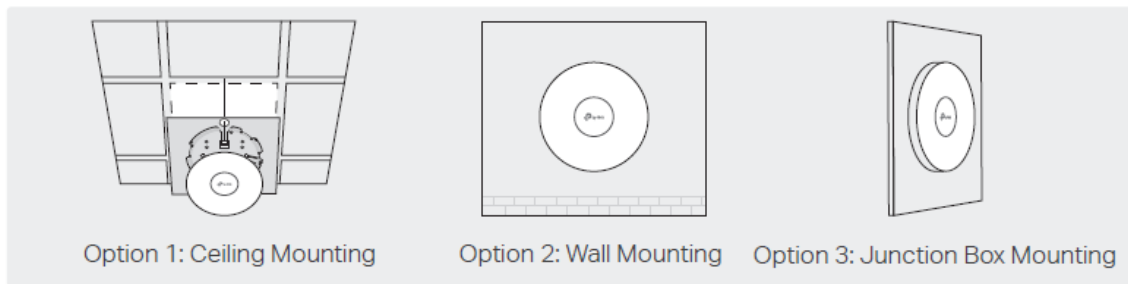


Option 1: Ceiling Mounting


Note: Make sure that the ceiling tile is larger than the AP.

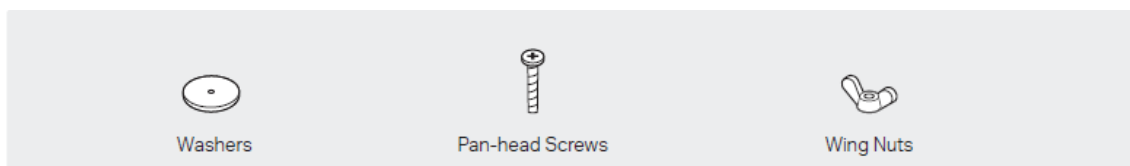

1. Remove the ceiling tile.

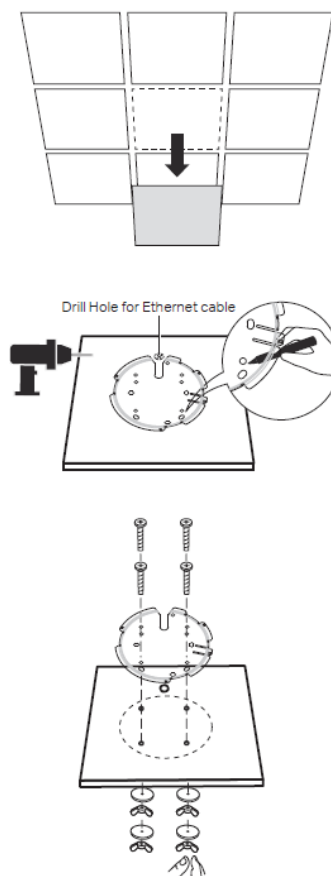


2. Place the mounting bracket in the center of the ceiling tile. Mark positions for the screw holes and a location for the Ethernet cable hole.
3. Drill 4 mm (5/32 in) diameter holes for the screws and a 25 mm (63/64 in) diameter hole for the Ethernet cable at the marked positions.
4. Secure the mounting bracket to the ceiling tile using pan-head screws, washers, and wing nuts, as shown on the left.

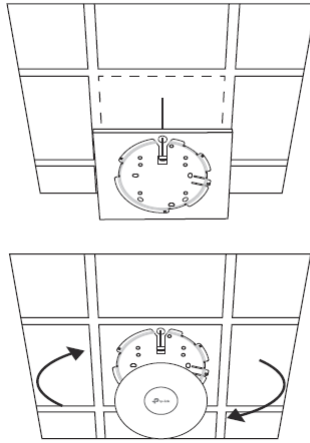


5. Feed the Ethernet cable through the hole and set the ceiling tile back into place.
6. Connect the Ethernet cable to the Ethernet port. Please pay attention to the triangle sign. Attach the AP to the mounting bracket, then rotate it until it locks into place, as shown on the left.



Option 2: Wall Mounting

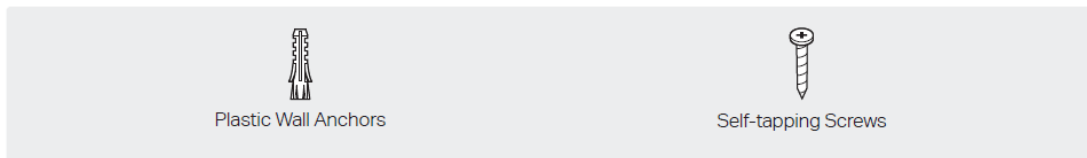


1. If your Ethernet cable feeds through the wall, position the mounting bracket below the cable hole. Mark positions for the screw holes and drill 6 mm (15/64 in) diameter holes at the marked positions.
 1. Insert the plastic wall anchors into the 6 mm diameter holes.

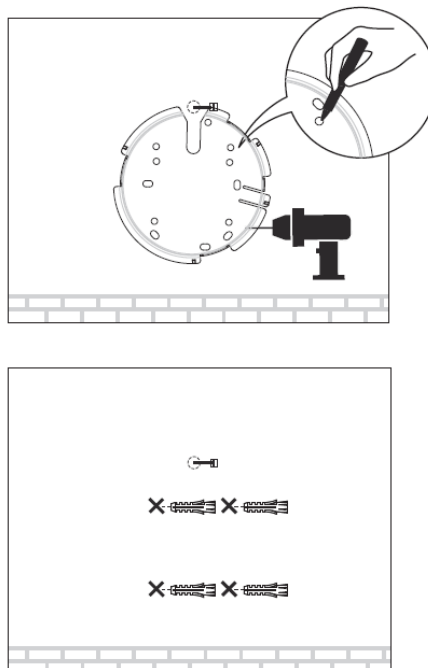


2. Secure the mounting bracket to the wall by driving the self-tapping screws into the anchors. Make sure that the shoulders of the mounting bracket are on the outside.
3. Connect the Ethernet cable to the Ethernet port on the AP.

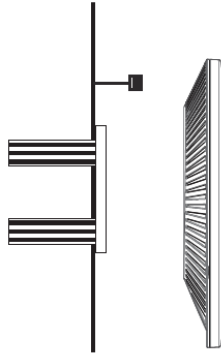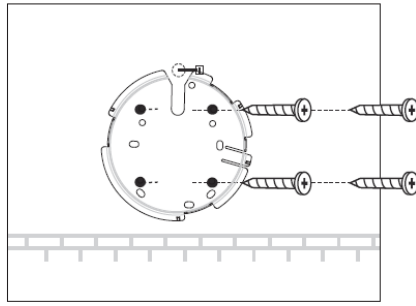

4. Attach the AP to the mounting bracket by rotating it until it locks into place, as shown on the left.

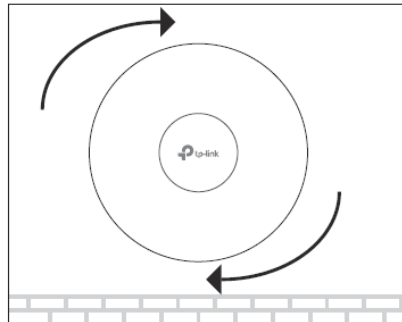

Option 3: Junction Box Mounting

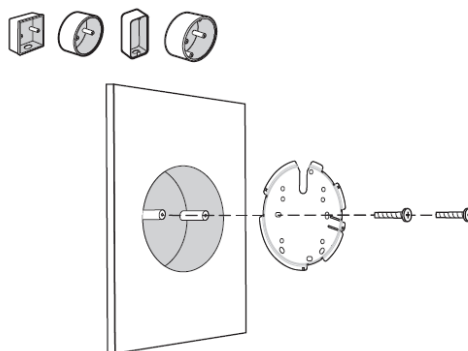

Prepare the cables and the junction box in advance. Ensure that the mounting holes align to your junction box.


Compatible wall junctions: Route the cables through the square cable hole on the mounting bracket, and secure the mounting bracket to the junction box using screws. Then follow Step 4 and Step 5 of Option 2 to complete the installation.

Power Supply

The AP can be powered via a power adapter or a PSE device (such as a PoE switch) which complies with Power Source Class 2 (PS2) or Limited Power Source (LPS) of IEC 62368-1.

Option 1: Via PoE Switch (Compliant with 802.3at)


Connect an Ethernet cable from the PoE switch to the Ethernet port of the AP.

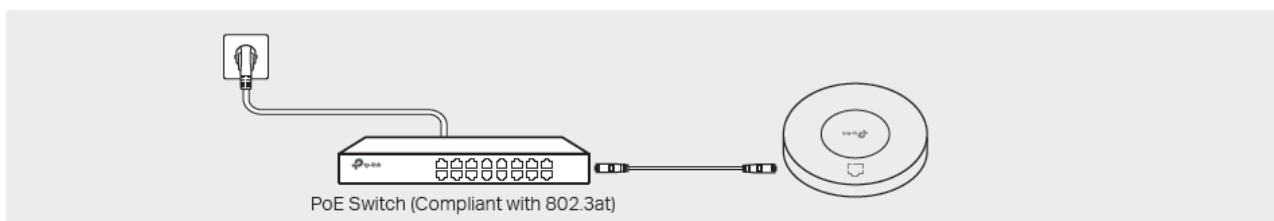

Option 2: Via Power Adapter

Plug one end of the power adapter into the power port of the AP and the other end into a standard electrical wall outlet.

Note: Power adapter is not provided. For power supply specifications, please refer to the label at the bottom of the product.

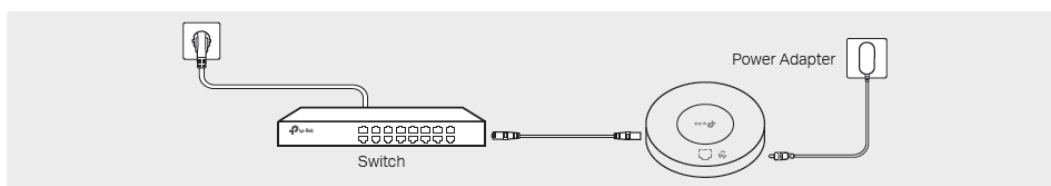


Software Configuration

Choose from the following methods to set up your APs:

Method 1: Standalone Mode

To configure and manage APs separately (Convenient for a small network with only a few devices)

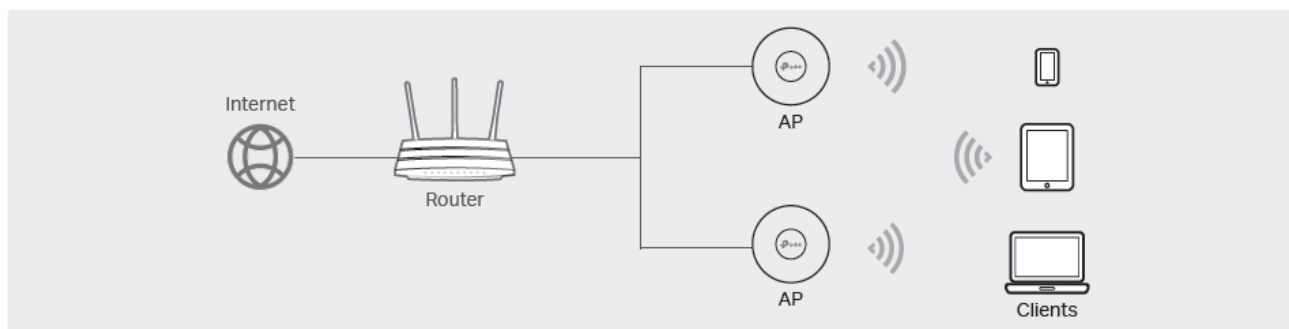

Method 2: Controller Mode

To configure and manage APs in batches on a central platform, namely the controller.

Method 1: Standalone Mode

- Before you start, be sure to power up and connect your devices according to the topology figure.
- A DHCP server (typically a router with a DHCP function)

Via Omada App



1. Download and install the TP-Link Omada app from the App Store or Google Play.
2. Connect your mobile device to the AP by using the default SSIDs printed on the label at the bottom of the product.
3. Open the Omada app, go to the Standalone Devices > APs page, and wait for the AP to appear. Tap on the AP to configure it.
4. The Omada app is designed to help you quickly configure common settings. If you want to configure advanced settings, use the web page of your AP or use Controller Mode.

Via Web Browser


1. Connect your device to the AP by using the default SSIDs printed on the label at the bottom of the product.
2. Launch a web browser and enter <http://tplinkeap.net> in the address bar. Use admin for both Username and Password to log in.
3. Set up a new Username and Password for secure management purposes. Then you can configure the AP. To configure other APs, connect your device to each AP by using the corresponding default SSIDs and repeat the steps above. You can configure some basic functions in Standalone Mode.
4. If you want to configure advanced functions, use Controller Mode

Method 2: Controller Mode

Choose a type of controller

Type 1: Omada Pro Software Controller

 If you want to use the software controller, get a PC with Windows or Linux OS, contact the sales staff to get the installation package of Omada Pro Software Controller, and then install and launch it. To manage your devices, the software controller needs to keep running on your computer. Licenses need to be purchased additionally.

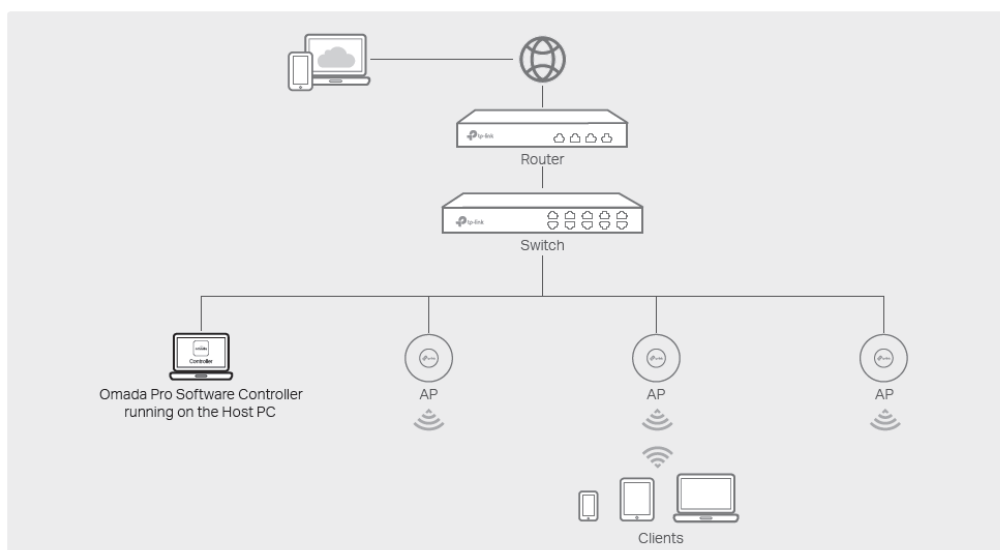

- Before you start, be sure to power up and connect your devices according to the topology figure.

- A DHCP server (typically a router with DHCP function enabled) is required to assign IP addresses to the APs and clients in your local network.
- The controller must have network access to your devices (the router, switch, and APs) in order to find, adopt, and manage them.

Via Omada App



1. Download and install the TP-Link Omada app from the App Store or Google Play.
2. Launch your Omada app and configure the controller at a local or remote site.

 
Local Management

- Connect your mobile device to the AP by using the default SSIDs printed on the label at the bottom of the product.
- Launch the Omada app and go to Local Access, tap the + button on the upper-right corner to add the controller. Then you can launch the controller to adopt and manage devices.

Remote Management

Note: Before you start, make sure that both your controller and mobile device can access the internet.

- Make sure that Cloud Access is enabled on your controller and that your controller has been bound with your TP-Link ID.
- Launch the Omada app and log in with your TP-Link ID. Then go to Cloud Access.
- A list of controllers that have been bound with your TP-Link ID will appear. Then you can launch the controller to adopt and manage devices.

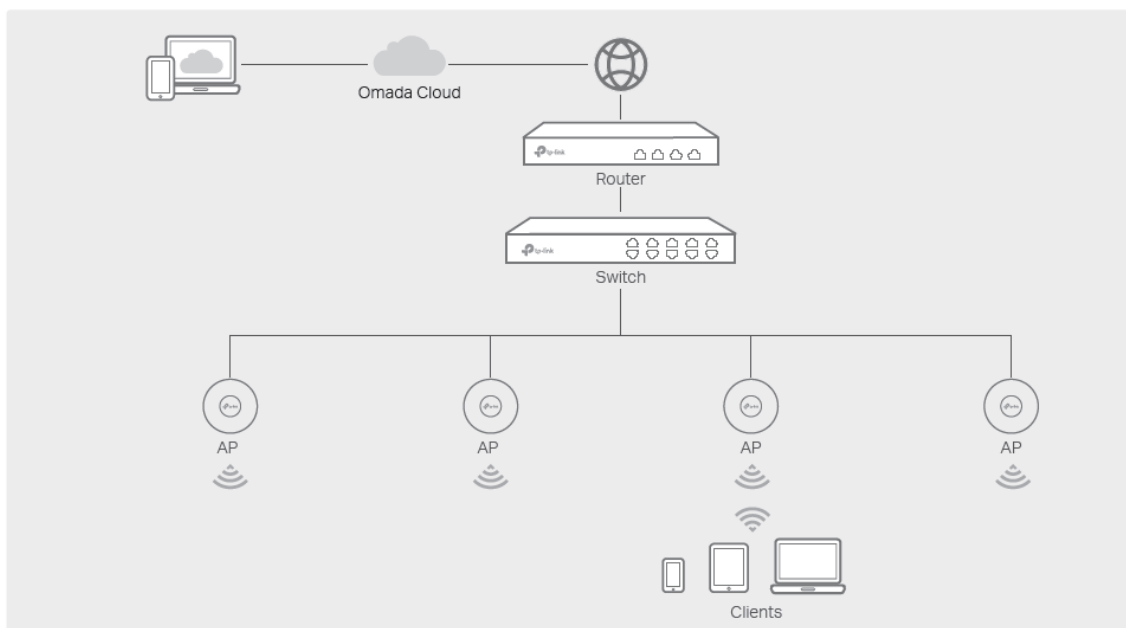

Via Web Browser



Local Management

- Launch the software controller on your PC. After the initiation process, the controller automatically opens its web page. If not, click Launch a Browser to Manage the Network.
- On the controller's web page, follow the wizard to complete the quick setup. Then you can launch the controller to adopt and manage devices.

Remote Management

Note: Before you start, make sure that both your controller and PC can access the internet.

- Make sure that Cloud Access is enabled on your controller and that your controller has been bound with your TP-Link ID.
- Launch a web browser and enter <https://omada.tplinkcloud.com> in the address bar. Log in with your TP-Link ID.
- A list of controllers that have been bound with your TP-Link ID will appear. Then you can launch the controller to adopt and manage devices.

Type 2: Omada Pro Cloud-Based Controller

Omada Pro Cloud-Based Controller is a good alternative without the need to install the software controller on a PC.

Licenses need to be purchased additionally

- Before you start, be sure to power up and connect your devices according to the topology figure.
- A DHCP server (typically a router with DHCP function enabled) is required to assign IP addresses to the APs and clients in your local network.

Web Configuration

1. Contact the sales staff to grant the Omada Pro Cloud-Based Controller permission.
2. Launch a web browser and enter <https://omada.tplinkcloud.com> in the address bar. Log in with your TP-Link ID.
3. Click + Add Controller and choose Cloud-Based Controller to add an Omada Pro controller.
Then you can launch the controller to adopt and manage devices.

Management via Omada App


After adding a controller, you can also use it via the Omada app. Download and install the TP-Link Omada app from the App Store or Google Play. For the detailed configurations, refer to the User Guide of the Controller and APs. The guides can be found on the download center of our official website: <https://www.tp-link.com/support/download/>. To ask questions, find answers, and communicate with TP-Link users or

engineers, please visit <https://community.tp-link.com> to join TP-Link Community. For technical support, the user guide, and other information, please visit <https://www.tp-link.com/support>, or simply scan the QR code.

Safety Information

- Keep the device away from water, fire, humidity, or hot environments.
- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Do not use the device where wireless devices are not allowed.
- Do not use a damaged charger or USB cable to charge the device.
- Do not use any other chargers than those recommended.
- The adapter shall be installed near the equipment and shall be easily accessible.

Documents / Resources

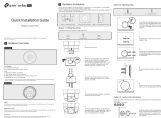	<p>tp-link AP9635 Wireless Access Point [pdf] Installation Guide AP9635, AP9650, AP9635 Wireless Access Point, Wireless Access Point, Access Point</p>
---	--

References

- [🔗 TP-Link Community](#)
- [📶 Omada Cloud](#)
- [🔗 TP-Link Product Support - Wireless Networking Equipment Support](#)
- [🔗 Download Center | TP-Link](#)