



tp-link C540 VIGI Wired Camera Web Interface User Guide

[Home](#) » [tp-link](#) » tp-link C540 VIGI Wired Camera Web Interface User Guide 

Contents

- [1 tp-link C540 VIGI Wired Camera Web Interface](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 About This Guide](#)
- [5 More Information](#)
- [6 Change Camera Settings](#)
- [7 Events](#)
- [8 Recording and Storage](#)
- [9 Network Management](#)
- [10 Cloud Service](#)
- [11 System Settings](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)
- [13 Related Posts](#)



tp-link C540 VIGI Wired Camera Web Interface



Product Information

- **Specifications**

- **Model:** VIGI C540 (V2)
- **Interface:** Wired Camera

- **About This Guide**

- This User Guide provides information for using and managing the VIGI camera via a web browser. It explains the functions of the VIGI camera and shows you how to configure them.

- **Conventions**

- When using this guide, please note the following:
- Features available in VIGI cameras may vary depending on your region, device model, and firmware version.
- All images, steps, and descriptions in this guide are for example purposes only and may not reflect your actual experience.

Product Usage Instructions

- **Login**

- **Connect the Camera to the Network**

- **To connect the camera to the network, follow these steps:**

- Ensure that your camera is properly connected to a power source.
- Connect an Ethernet cable from your camera to your router or switch.

- **Log In to the Web Interface**

- **To log in to the web interface, follow these steps:**

- Open a web browser on your computer.
- Enter the IP address of your camera in the address bar.
- Enter your username and password when prompted.

- **Live View**

- **To view the live feed from your camera, follow these steps:**

- After logging in to the web interface, you will be redirected to the live view page.
 - Adjust the camera angle or zoom level as desired.

- **View Device Information**

- **View System Logs**

- To view the system logs of your camera, follow these steps:
 - From the web interface, navigate to the device information section.
 - Select the system logs tab.

- **View Device Information**

- To view the device information of your camera, follow these steps:
 - From the web interface, navigate to the device information section.
 - Select the device information tab.

- **Change Camera Settings**

- **To change the settings of your camera, follow these steps:**

- From the web interface, navigate to the camera settings section.
 - Modify the desired settings, such as resolution, motion detection, or recording mode.
 - Save the changes before exiting the settings page.

- **PTZ Settings (Only for Pan&Tilt Camera)**

- **Park Settings**

- To configure the park settings of your Pan&Tilt camera, follow these steps:
 - From the web interface, navigate to the PTZ settings section.
 - Select the park settings tab.
 - Adjust the park position and speed as desired.

- **Target Track Settings**

- To configure the target track settings of your Pan&Tilt camera, follow these steps:
 - From the web interface, navigate to the PTZ settings section.
 - Select the target track settings tab.
 - Enable or disable target tracking and adjust the tracking sensitivity.

- **Events**

- **To manage events on your camera, follow these steps:**

- From the web interface, navigate to the events section.
 - View and configure event rules, such as motion detection or alarm triggers.

- **Recording and Storage**

- **Recording Schedule**

- To set up a recording schedule for your camera, follow these steps:
 - From the web interface, navigate to the recording and storage section.
 - Select the recording schedule tab.
 - Configure the desired recording time slots and storage options.

- **Storage Management**

- To manage storage on your camera, follow these steps:
 - From the web interface, navigate to the recording and storage section.
 - Select the storage management tab.

- View and manage the available storage options, such as local storage or cloud storage.

- **Network Management**

- **To manage the network settings of your camera, follow these steps:**

- From the web interface, navigate to the network management section.
 - Configure network settings, such as IP address, DNS, or port forwarding.

- **Cloud Service**

- **To set up and manage cloud services for your camera, follow these steps:**

- From the web interface, navigate to the cloud service section.
 - Follow the on-screen instructions to sign up for a cloud service account.
 - Configure cloud storage and other cloud-related settings as desired.

- **System Settings**

- **To configure the system settings of your camera, follow these steps:**

- From the web interface, navigate to the system settings section.
 - Adjust system settings, such as language, time zone, or firmware updates.

- **FAQ**

- **Q:** Why do features vary in VIGI cameras?
 - **A:** Features may vary depending on your region, device model, and firmware version.
 - **Q:** Are the images and descriptions in this guide applicable to my camera?
 - **A:** The images, steps, and descriptions in this guide are for example purposes only and may not reflect your experience.

About This Guide

This User Guide provides information for using and managing a VIGI camera via a web browser. It explains the functions of the VIGI camera and shows you how to configure them.

Conventions When using this guide, notice that:

- Features available in VIGI cameras may vary due to your region, device model, and firmware version. All images, steps, and descriptions in this guide are only examples and may not reflect your experience.
- The information in this document is subject to change without notice.
- Every effort has been made in the preparation of this document to ensure the accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.
- Users must take full responsibility for their application of any products.
- This guide uses specific formats to highlight special messages. The following table lists the conventions that are used throughout this guide.

More Information

- For technical support, the latest version of the User Guide, and other information, please visit <https://www.tp-link.com/support>.
- The Quick Installation Guide can be found where you find this guide or inside the package of the product.
- To ask questions, find answers, and communicate with TP-Link users or engineers, please visit <https://community.tp-link.com> to join TP-Link Community.

Login

This chapter guides you on how to log in to the web UI of the VIGI camera:


- Connect the Camera to the Network
- Log In to the Web Interface

After the cameras are added to the network, multiple methods are provided for you to monitor and manage cameras. You can manage and monitor the cameras remotely via the VIGI app or VIGI Security Manager, and you can also directly monitor and manage your camera via a web browser. Check the support page of the product for more manuals at www.tp-link.com.

Connect the Camera to the Network

The camera works with an NVR for easier batch access and management. You can add cameras to the network via an NVR.

1. Connect your cameras to the same network as your NVR (as shown below).
2. Power on your cameras.
3. Follow the NVR manual to add and activate your cameras.
 - **Note:** You can follow the Quick Start Guide included in the package to mount and add cameras to your network.

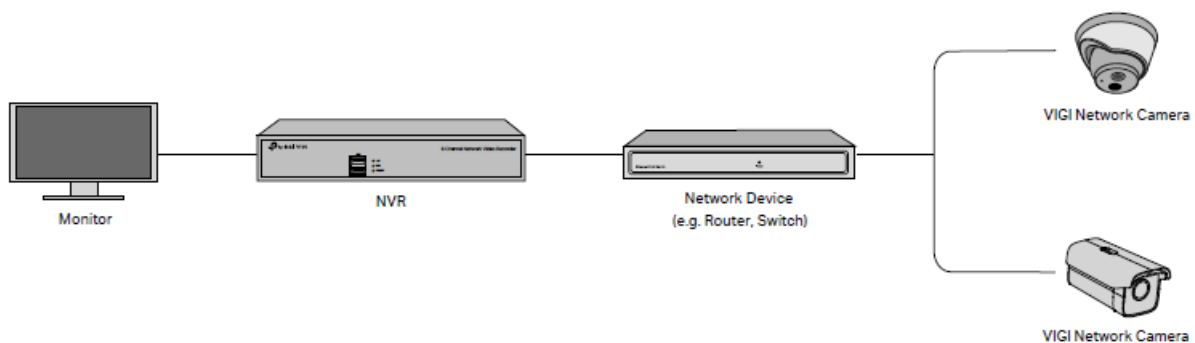

Log In to the Web Interface

With an intuitive user interface, it is easy to configure and manage the camera via a web browser. Follow the steps below to log in to the web UI of the camera for the first time.

1. Find the camera's IP address on your router's client page.
2. On your local computer, open a web browser and enter https://camera's IP address (<https://192.168.0.60> by default).
3. Select your Country/Region and Time Zone.

Initialize IPC

1 Set 2 Set Password

Country/Region Please Select

Time Zone Please Select

Language English

Power Line Frequency 50Hz

Next

4. Set a password to activate the camera. Click Finish.

Initialize IPC

1 Set 2 Set Password

Please set a password to activate the IPC and enter the email for password recovery.

User Name admin

Password *****

Confirm Password *****

Email vivi.luo@tp-link.com

Finish

Now, you can log in to the camera using the password set here.

Note:


1. For future logins, use the default username admin and the password you set for this camera.
2. If you forgot the password, click Forgot password? and follow the web instructions to reset the password.

Live View

You can monitor the camera in real time and respond to abnormal conditions with quick operations, such as zooming in the image, capturing screenshots.

1. Find the camera's IP address on your router's client page.
2. On your local computer, open a web browser and enter https://camera's IP address (<https://192.168.0.60> by default).
3. Log in with default user name admin and the password you set for this camera.
4. You can view the live video on the Preview page.

- **Note:** Here we use the page for VIGI C540 Outdoor Full-Color PT Network Camera.

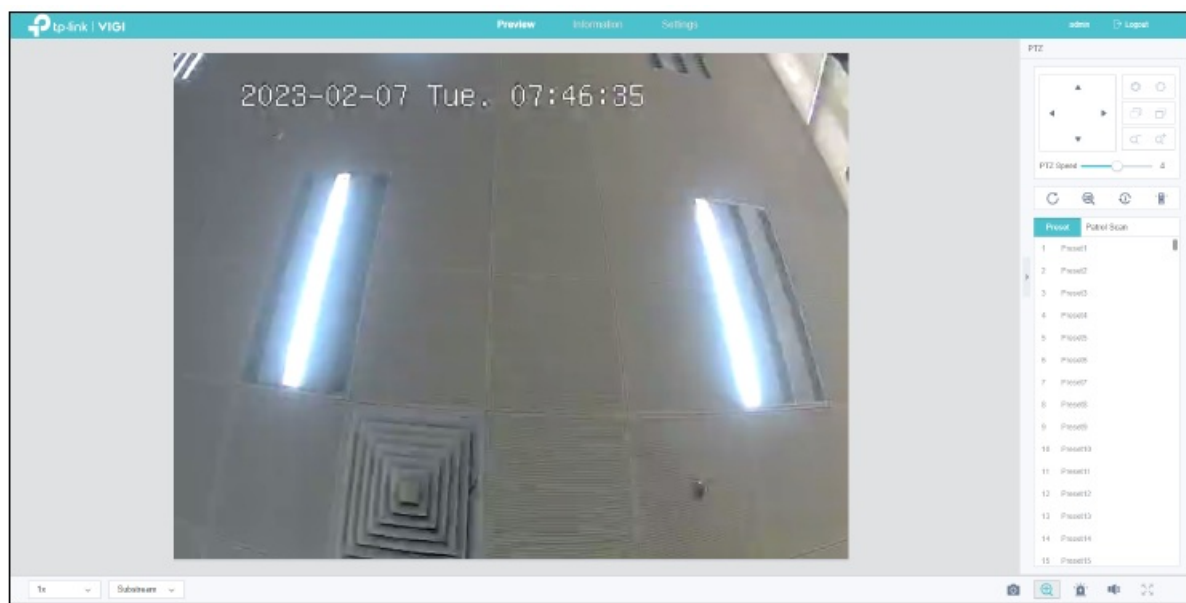

Click the corresponding buttons to change the image proportion.



Click to change the stream type.



Click to capture screenshots.



Click to zoom in/out the live image.



(Only for certain cameras) Click to trigger the sound alarm. It will last about 10 seconds.



(Only for certain cameras) Click to adjust the volume of the speaker.



Click to change to full screen.



(Only for the camera with Pan&Tilt) Click the arrow to adjust the PTZ direction.



(Only for the camera with Pan&Tilt) Drag to adjust the PTZ rotation speed.

Only for the camera with Pan&Tilt



Click to reset the PTZ position.



 
Click to start 3D positioning.



Click to start quick patrol.



Click to start quick park.



(Only for the camera with Pan&Tilt) Click Preset to set the preset PTZ position; click Patrol Scan to set or edit the patrol path.

View Device Information

This chapter introduces how to check the system logs and view your device information on the web UI.

This chapter contains the following sections:

- View System Logs

- View Device Information

View System Logs

The camera uses logs to record, classify, and manage the messages of the system and devices. You can search, view, and export the logs. Follow the steps below to search and export the logs.

1. Go to Information > System Log > System Log.
2. Specify the time range and log types and click Search. The filtered logs appear in the table.

The screenshot shows the 'System Log' interface. At the top, there are search filters: 'Start Time' (2022-09-14 13:46:37), 'End Time' (2022-09-21 13:46:37), and 'Log Type' (All). A 'Search' button is to the right. Below the filters, it says 'Current Log Type: All'. A table displays 8 log entries with columns 'No.', 'Recording Time', and 'Event'. At the bottom, there are 'Clear Logs' and 'Export Logs' buttons, and a pagination bar showing 'Total: 357', '1/45', 'Page 1', and a 'Go' button.

No.	Recording Time	Event
1	2022-09-21 13:46:36	ts package not finish, frame_length_left = 765...
2	2022-09-21 13:46:36	ts package not finish, frame_length_left = 260...
3	2022-09-21 13:46:24	ts package not finish, frame_length_left = 767...
4	2022-09-21 13:46:24	ts package not finish, frame_length_left = 260...
5	2022-09-21 13:46:16	[p2p dbg] "" http close client(local) session...
6	2022-09-21 13:46:16	Delete a minor stream, current minor stream p...
7	2022-09-21 13:46:16	CloseSession called, 0th in 1
8	2022-09-21 13:46:12	[CLOUDCOM]server(0)-90100 cloudCom d...

Start/End Time

Specify a time range to filter the logs based on the recording time.

Log Type

Select a type from the drop-down list to filter the logs.

All: All types of logs.

Alarm: Alarms triggered by events, such as tampering, line crossing, and area intrusion.

Exception: Abnormal events that may influence camera's functions, such as video signal lost and errors of hard drive.

Operation: Operations that take place on the camera, such as login and upgrade.

Information: Informational messages, such as local device information.

Clear Logs

Click to clear all logs.

Export Logs

Click to export logs to your local computer.

View Device Information

- You can view the basic information about the camera, including device model, firmware version, network information, stream information, and device QR code.
- Go to Information > Device Information > Device Information to view the details.

Device Information

Device Information

Current System Time	2022-09-21 14:10:35
Device Model	
Device Name	
Firmware Version	

Network Information

IP	192.168.0.60
MAC	9C-A2-F4-9A-6F-53

Stream Information

Resolution	2560*1440
Frame Rate	25

Device QR Code



Change Camera Settings

This chapter introduces how to change the camera display settings and camera streams settings. It contains the following sections:

- Camera Display Settings
- Camera Stream Settings


Camera Display Settings

You can change the camera display settings according to your needs.

Configure Image Settings

Follow the steps below to configure image settings.

1. Go to Settings > Camera > Display > Image.
2. Configure the following parameters.

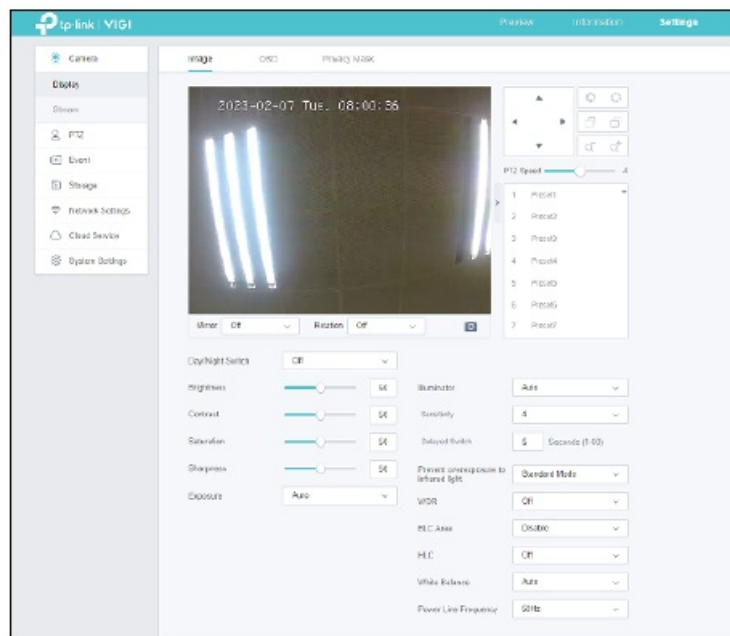

Mirror

Select a mirror mode. When you select **Off**, the image displays normally.

Rotation

Select a rotation angle. When you select **Off**, the image displays normally.

Day/Night Switch

Select a method to switch the image settings of day and night.

Off: The camera applies the same image settings in a day.

Auto: The camera switches the image mode of day and night automatically based on the light intensity.

Scheduled: The camera switches the image mode of day and night at specified time. If you select this method, adjust the slide bar to specify the switch time.


Brightness

Adjust the brightness of image. The image gets brighter when the value increases.

Contrast	Adjust the contrast of image. The image contrast gets stronger when the value increases.
Saturation	Adjust the saturation of image. The color of image gets richer when the value increases.
Sharpness	Adjust the sharpness of image. The image gets sharper when the value increases.
Exposure	<p>Select a exposure mode.</p> <p>Auto: The camera adjusts the exposure automatically. If you select Auto, specify the exposure scale. The image gets brighter when the scale increases.</p> <p>Manual: The image exposure is fixed. If you select Manual, adjust the slide bar of Gain to specify the exposure gain, and select a shutter speed. The image gets brighter when the gain increases or the shutter speed gets slower.</p>
Illuminator	<p>Select a mode to decide the usage of infrared light. The available options vary due to the mode you select in Day/Night Switch.</p> <p>Auto: The camera enables the infrared light automatically when it detects the environment turns dark, and disables when the environment is bright enough.</p> <p>Scheduled On/Off: Specify the time to enable and disable infrared light.</p> <p>Always On/Off: The camera enables/disables the infrared light all the time.</p>
Sensitivity	Specify Sensitivity to decide the light intensity that can trigger the switch of infrared light. The infrared light is easier to be triggered when the sensitivity decreases.
Delayed Switch	Decide how long the camera waits to enable or disable the infrared light when the environment reaches the light condition.
Prevent overexposure to infrared light	<p>Select standard mode or enhanced mode or manually adjust the brightness of image.</p> <p>Standard Mode: In this mode, the brightness of the infrared light will be automatically adjusted to prevent overexposure, but the exposure method will not be changed. When the brightness of the screen becomes higher, the infrared light will become brighter.</p> <p>Enhanced Mode: In this mode, the exposure mode will be optimized. The brightness of the fill light is generally lower in priority, because reducing the brightness will lead to a decrease in the brightness of the picture, the Gain value will introduce noise, and denoising will cause blur. Therefore, using this mode will change the exposure mode and bright areas are darkened and dark areas are brightened</p> <p>Manual: Manually adjust the brightness of image. The image gets brighter when the value increases.</p>

WDR	WDR (Wide Dynamic Range) can improve the image effects in backlit scenes. If you select On , the camera balances the light of the brightest and darkest areas automatically.
BLC Area	BLC (Backlight Compensation) can clear the dark area of the video. Select a position and the camera adjusts the exposure based on the light intensity in the area.
HLC	HLC (Highlight compensation) can compensate for brighter parts of your image, maintaining detail in brighter parts of the image that would otherwise be blown out.
White Balance	<p>Select a mode and the camera will adjust the color temperature to display the image approximated to the realistic vision effects.</p> <p>Auto: The camera adjusts the color temperature automatically.</p> <p>Daylight/Natural Light/Incandescent/Warm Light: The camera adjusts the color temperature to remove the color casts caused by the corresponding light.</p> <p>Current: The camera keeps the current color settings all the time.</p> <p>Custom: Adjust the slide bar to configure the color temperature, and the camera keeps the settings all the time.</p>
Power Line Frequency	Set the power line frequency.
Restore	Click to restore to factory default settings.

some models, you can edit the Fill Light Settings.

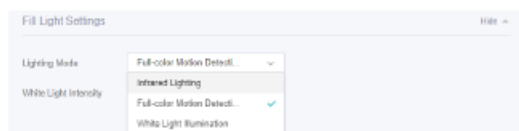


Lighting Mode	<p>Select the fill light mode which affects the anti-overexposure strategy and image.</p> <p>Infrared Lighting: The image is black and white.</p> <p>Full-color Motion Detection: When motion detection is detected, it will turn from black and white to full-color and the white light will be turned on at the same time. It includes three modes, standard, soft, and custom.</p> <p>White Light Illumination: The image is full-color and the white light will be turned on at the same time. It includes three modes, standard, soft, and custom.</p>
----------------------	--

Configure OSD Settings

You can configure OSD (On Screen Display) to edit the information displayed in Live View and recordings. Follow the steps below to configure OSD settings.

1. Go to Settings > Camera > Display > OSD.
2. Configure the following parameters, and click Save to save your settings.

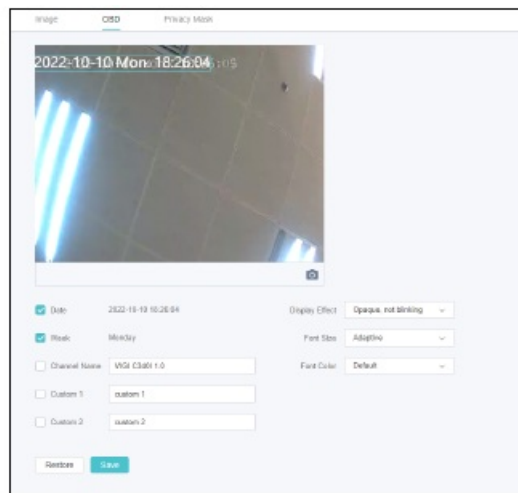


Date	Check to display the date on the image
Week	Check to display the week on the image.
Channel Name	Check to display the channel name on the image. You can also check Custom and specify a text to display.
Display Effect	Set the display effect of the image.
Font Size	Set the font size.
Font Color	Set the font color.
Restore	Click to restore to factory default settings.

Configure Privacy Mask

With Privacy Mask, you can set privacy area in the image. The area cannot be recorded and monitored. Follow the steps below to configure Privacy Mask.

1. Go to Settings > Camera > Display > Privacy Mask.
2. Enable Privacy Mask. Draw the privacy areas on the preview screen (the blue squares in the picture below). Use the mouse to adjust the size and location of areas. To remove a certain privacy area, select it and click Delete. To remove all privacy areas, click Clear. Click Save to finish the configuration.

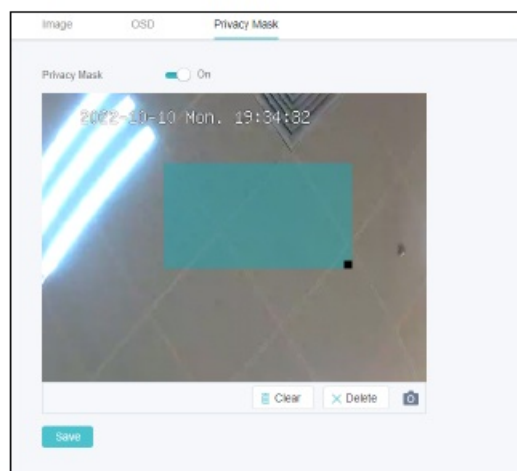

Camera Stream Settings

- In Stream Settings, you can configure video stream levels, change the audio output settings and ROI (Region of interest) level.

- Video stream levels decide the video quality in Live View and recording, and you can adjust the video quality of certain area by specifying the ROI level.

Configure Video Settings

Follow the steps below to configure video settings.

1. Go to Settings > Camera > Stream > Video.
2. Configure the following parameters, and click Save to save your settings.

VideoAudioROI

Stream Type

Main Stream

Video Encoding

H265

Resolution

2560*1440

Video Frame Rate

25

Bit Rate Type

VBR

Image Quality

Low

Medium

High

Smart Coding

On

Max Bit Rate

1536

Restore

Save

Stream Type	Two stream types are supported, main stream and substream. You can decide which stream is applied based on network bandwidth and device performance.
Video Encoding	Select the encoding type of the stream. Compared with H.264, H.265 is improved in reducing the file size and saving the bandwidth.
Resolution	Specify the resolution of the video stream. The screen displays images more clearly when the resolution increases.
Video Frame Rate	Specify the frame rate of videos. The video is more fluent when the rate increases.
Bite Rate Type	Select a type of bit rate. VBR: The bit rate changes with the image within Maximum Bit Rate. CBR: The bit rate is Maximum Bit Rate all the time.
Image Quality	When VBR selected as the bit rate type, set the video quality as high, medium, or low.
Smart Coding	Enable Smart Coding to improve compression performance.
Max Bit Rate	When VBR selected as the bit rate type, specify the upper limit of bit rate. When CBR selected as the bit rate type, specify the bit rate.
Restore	Click to restore to factory default settings.

Configure Audio Settings (only for some models)

Follow the steps below to configure video settings.

1. Go to Settings > Camera > Stream > Audio.
2. Configure the following parameters, and click Save to save your settings.

Video
Audio
ROI

Audio output settings

Mute
Off

Output Volume
80

System Volume
100

Audio input settings

Audio Coding
GT11A-law

Audio Input
MicIn

Input Volume
80

Noise Filtering
On

Audio Switch
On


Restore
Save

Mute	Toggle to mute the speaker of the camera.
Output Volume	Adjust the volume of the speaker.
System Volume	Adjust the volume of the sound alarm.
Audio Coding	Select the encoding type of the audio.
Audio Input	Select audio input device.
Input Volume	Adjust the volume of the microphone.
Noise Filtering	Enable noise filtering to remove the noise from the video.
Audio Switch	Turn on of the microphone.
Restore	Click to restore to factory default settings.

Configure ROI

In ROI, you can configure the interest level of a specified area in each channel. The level 1–6 is ranked from low to high. The higher the ROI level, the better image quality.

1. Go to Settings > Camera > Stream > ROI.
2. Select the stream type and enable ROI. Draw an area on the preview screen (the blue square in the picture below). Use the mouse to adjust the size and location of areas. Specify the ROI level and click Save.

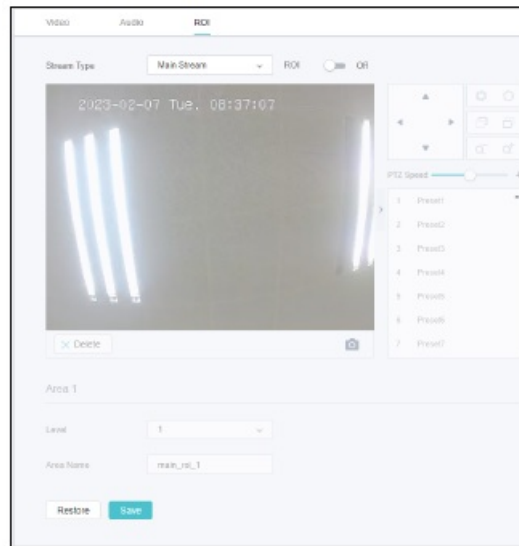

PTZ Settings (Only for Pan&Tilt Camera)


This chapter introduces how to change the PTZ settings. It contains the following sections:

- Park Settings
- Target Track Settings

Park Settings

When Park is enabled, the camera will perform the preset position, path, or pattern automatically if there is no operations in specified time. Follow the steps below to enable Park.

1. Go to Settings > PTZ > Park.

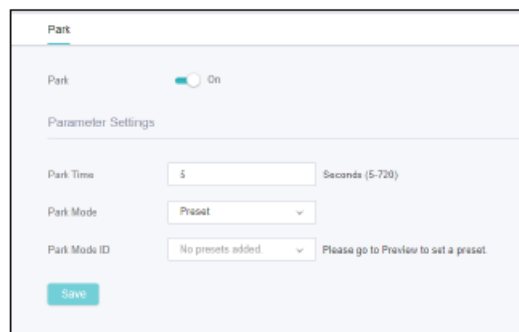


2. Enable Park, select a mode and a preset, and enter the park time.

Park Time	When there is no operations during this time, the camera will perform the preset.
Park Mode	Select a mode to decide what kind of preset the camera will perform.
Park Mode ID	Select a preset from the drop-down list. The presets in the list vary based on the selected park mode.

Target Track Settings

When Target Track is enabled, you can set the smart detection, then the camera will track the specific target type.

1. Go to Settings > PTZ > Target Track.

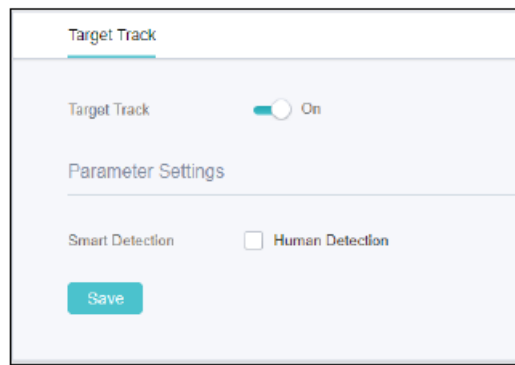

2. Enable Target Track, select the specific target type.

Events


This chapter guides you on how to configure the event settings and alarm actions when your cameras detect different types of events. VIGI camera monitors the user-defined areas and you'll be automatically alerted to any suspicious activity in your home and office. **This chapter includes the following sections:**

- Motion Detection
- Camera Tampering
- Line Crossing Detection
- Intrusion Detection
- Region Entering Detection
- Region Exiting Detection
- Object Abandoned/Removal Detection
- Vehicle Detection
- Human Detection
- Light Alarm (Only for some models)
- Sound Alarm (Only for some models)
- Exception Event

Motion Detection

Motion detection allows cameras to detect the moving objects in the monitored area and triggers alarm actions. You can customize the motion detection settings, select the triggered actions and set the alarm schedule for cameras. Follow the steps below to finish the configuration.

1. Go to Settings > Event > Basic Event > Motion Detection.

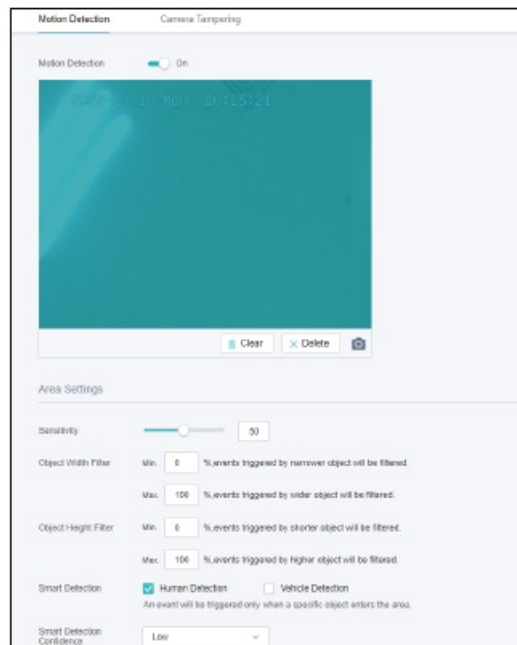

2. Enable Motion Detection.
3. Draw rectangles for motion detection on the preview screen. The whole region is selected by default. Then configure the motion detection settings.
 - **Note:** The maximum number of customized areas is 4.

Sensitivity	Adjust the value of sensitivity. A higher value can trigger alarm actions more easily.
Object Width Filter	Set the minimum and maximum object width to filter the corresponding events.
Object Height Filter	Set the minimum and maximum object height to filter the corresponding events.
Smart Detection	Select the detection type. It can be configured only for the cameras which support human detection and vehicle detection.
Smart Detection Confidence	Select the detection type. It can be configured only for the cameras which support human detection and vehicle detection.

4. Set the processing mode. Note that the process mode options vary by model.



5. Click Save to save the settings.

Camera Tampering

Camera tampering triggers alarm actions when an area of camera's lens is purposely blocked, obstructed or vandalized. You can customize the video tampering settings, select the triggered actions and set the alarm schedule for cameras. Follow the steps below to finish the configuration.

1. Go to Settings > Event > Basic Event > Camera Tampering.



2. Enable Camera Tampering.

- Set the sensitivity of video tampering. A higher value can trigger the alarm actions more easily.
- Set the processing mode. Note that the process mode options vary by model.




- Click Save to save the settings.

Line Crossing Detection

Line crossing detection triggers alarm actions when cameras detect that moving objects cross a customized virtual line. You can customize the line-crossing detection settings, select the triggered actions, and set the alarm schedule. Follow the steps below to finish the configuration.


- Go to Settings > Event > Smart Event, and select Line Crossing Detection from the drop-down list.

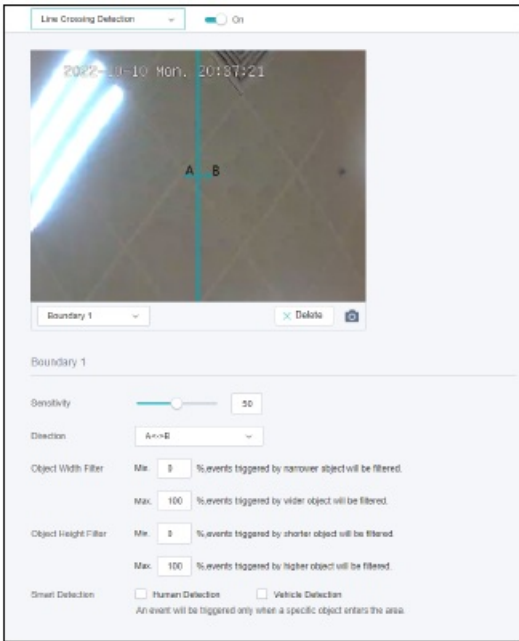

- Draw lines on the preview screen. Select the line and configure settings of line crossing detection.
 - Note:** The maximum number of customized lines is 4. You need to configure settings for each line.

Sensitivity	Set the sensitivity of line crossing detection. A higher value can trigger alarm actions more easily.
Line Crossing Direction	<p>A->B: Only the object crossing the configured line from the A side to the B side can be detected.</p> <p>B->A: Only the object crossing the configured line from the B side to the A side can be detected.</p> <p>A<->B: The object goes across the configured line with both directions can be detected.</p>
Object Width Filter	Set the minimum and maximum object width to filter the corresponding events.
Object Height Filter	Set the minimum and maximum object height to filter the corresponding events.
Smart Detection	Select the detection type. It can be configured only for the cameras which support human detection and vehicle detection.

- Set the arming schedule.

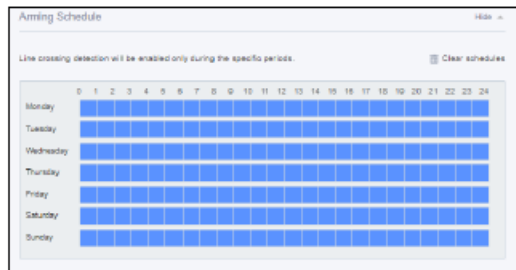

4. Set the processing mode. Note that the process mode options vary by model.




5. Click Save to save the settings.

Intrusion Detection

- Intrusion detection triggers alarm actions when cameras detect an intrusion in the specified areas.
- You can customize the intrusion detection settings, select the triggered actions and set the alarm schedule.
- Follow the steps below to finish the configuration.

1. Go to Settings > Event > Smart Event, select Intrusion Detection from the drop-down list.

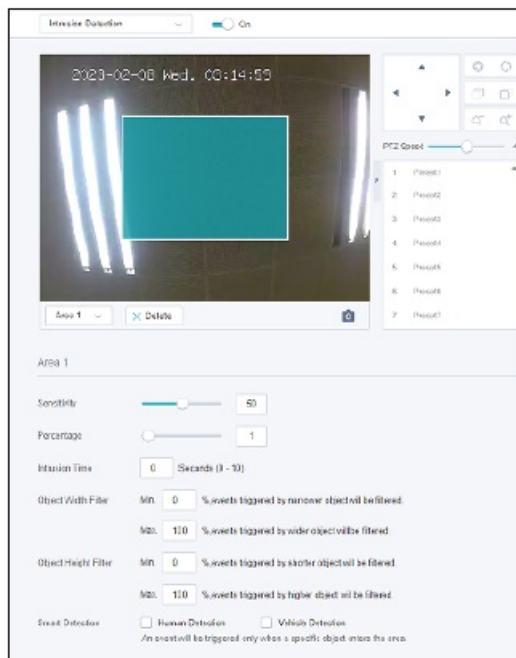


2. Draw intrusion areas on the preview screen. Select the area and configure the settings.

- **Note:** The maximum number of customized areas is 4. You need to configure settings for each area.

Sensitivity	Set the sensitivity of intrusion detection. A higher value can trigger alarm actions more easily.
Percentage	Set the percentage of intrusion detection. When an object takes up the specific percentage of the area, the alarm actions will be triggered.
Intrusion Time	Set the intrusion time. When an object intrudes this area for specific time, the alarm actions will be triggered.
Object Width Filter	Set the minimum and maximum object width to filter the corresponding events.
Object Height Filter	Set the minimum and maximum object height to filter the corresponding events.
Smart Detection	Select the detection type. It can be configured only for the cameras which support human detection and vehicle detection.

3. Set the arming schedule.

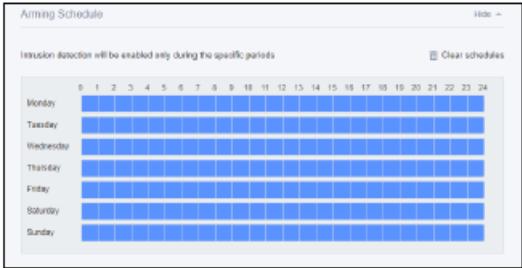

4. Set the processing mode. Note that the process mode options vary by model.




5. Click Save to save the settings.

Region Entering Detection

Region entering detection triggers alarm actions when cameras detect moving objects enter the specified regions. You can customize the region settings, select the triggered actions and set the alarm schedule. Follow the steps below to finish the configuration.

1. Go to Settings > Event > Smart Event. Select Region Entering Detection from the drop-down list.

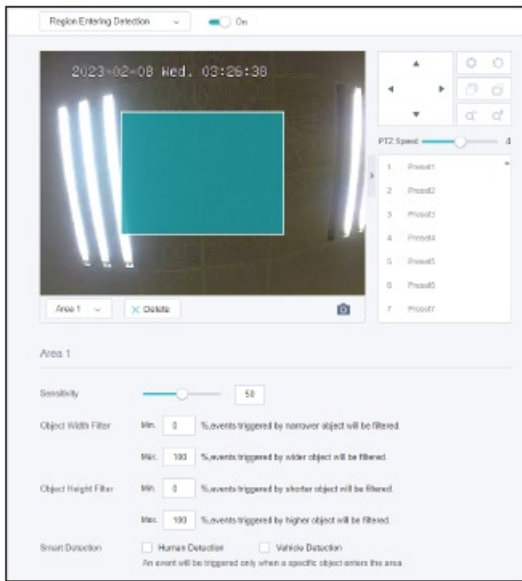

2. Enable Region Entering Detection.

3. Draw rectangles for area entrance detection on the preview screen.


- **Note:** The maximum number of customized areas is 4. You need to configure settings for each area.

Sensitivity	Adjust the value of sensitivity. A higher value can trigger alarm actions more easily.
Object Width Filter	Set the minimum and maximum object width to filter the corresponding events.
Object Height Filter	Set the minimum and maximum object height to filter the corresponding events.
Smart Detection	Select the detection type. It can be configured only for the cameras which support human detection and vehicle detection.

4. Set the arming schedule.



5. Set the processing mode. Note that the process mode options vary by model.

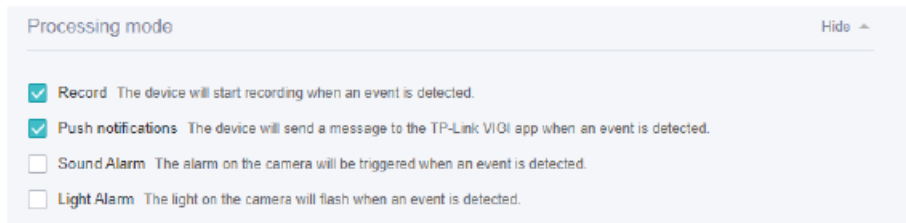


6. Click Save to save the settings.

Region Exiting Detection

Region exiting detection triggers alarm actions when cameras detect moving objects exit the specified regions. You can customize the region settings, select the triggered actions and set the alarm schedule. Follow the steps below to finish the configuration.

1. Go to Settings > Event > Smart Event, select Region Exiting Detection from the drop-down list.

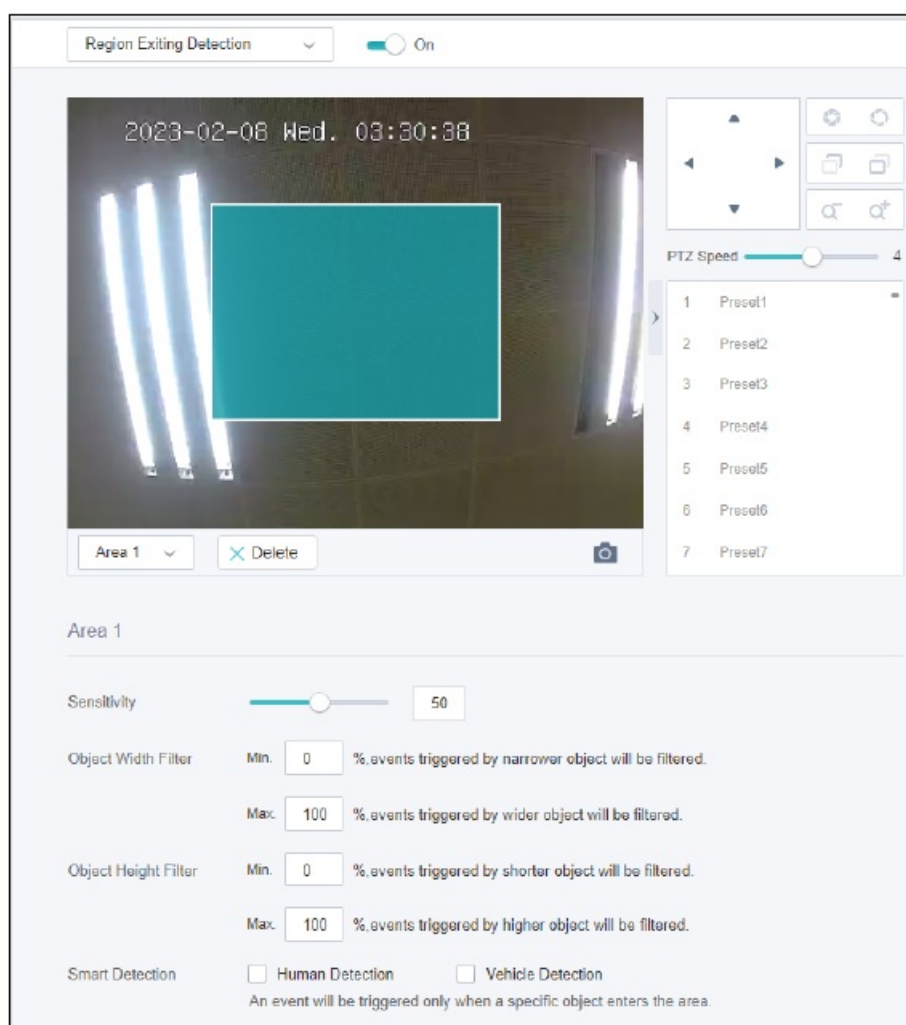

2. Enable Region Exiting Detection.

3. Draw rectangles for area exiting detection on the preview screen.

- **Note:** The maximum number of customized areas is 4. You need to configure settings for each area.

Sensitivity	Adjust the value of sensitivity. A higher value can trigger alarm actions more easily.
Object Width Filter	Set the minimum and maximum object width to filter the corresponding events.
Object Height Filter	Set the minimum and maximum object height to filter the corresponding events.
Smart Detection	Select the detection type. It can be configured only for the cameras which support human detection and vehicle detection.

4. Set the arming schedule.

The 'Arming Schedule' interface displays a 7-day grid (Monday to Sunday) with 24 columns representing hours (0 to 24). All cells in the grid are highlighted in blue, indicating that intrusion detection is enabled for the entire 24 hours of every day. A 'Clear schedules' button is located in the top right corner.

5. Set the processing mode. Note that the process mode options vary by model.

The 'Processing mode' interface lists four options, each with a checkbox and a description:


- ☒ **Record** The device will start recording when an event is detected.
- ☒ **Push notifications** The device will send a message to the TP-Link VIGI app when an event is detected.
- ☐ **Sound Alarm** The alarm on the camera will be triggered when an event is detected.
- ☐ **Light Alarm** The light on the camera will flash when an event is detected.

6. Click Save to save the settings.

Object Abandoned/Removal Detection

Object abandoned/removal detection triggers alarm actions when cameras detect objects are left behind or taken away in the specified areas. You can customize the area settings, select the triggered actions and set the alarm schedule. Follow the steps below to finish the configuration.

1. Go to Settings > Event > Smart Event, select Object Abandoned/Removal Detection from the drop-down list.

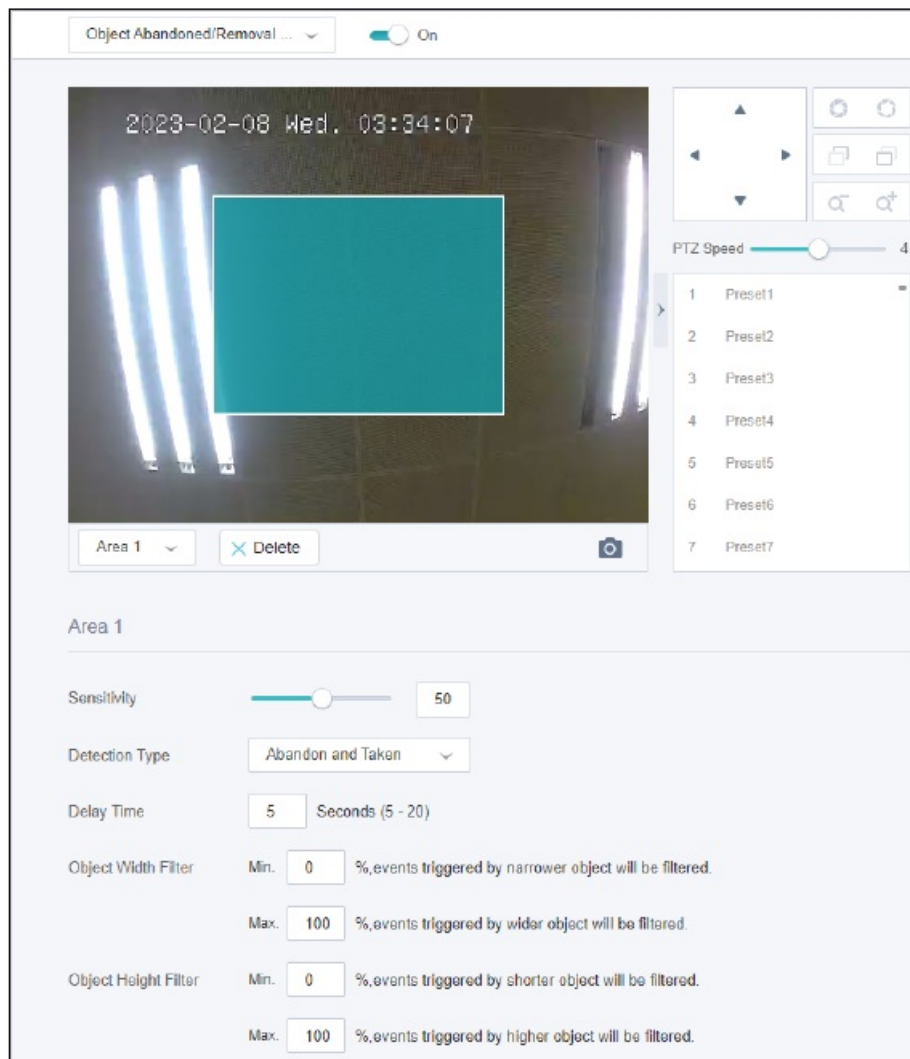

2. Enable Object Abandoned/Removal Detection.
3. Draw rectangles for area exiting detection on the preview screen.
 - **Note:** The maximum number of customized areas is 4. You need to configure settings for each area.

Sensitivity	Adjust the value of sensitivity. A higher value can trigger alarm actions more easily.
Detection Type	Select the detection type.
Delay Time	Set how long the object is left behind or taken away to trigger the event.
Object Width Filter	Set the minimum and maximum object width to filter the corresponding events.
Object Height Filter	Set the minimum and maximum object height to filter the corresponding events.

4. Set the arming schedule.

Arming Schedule Hide

Intrusion detection will be enabled only during the specific periods Clear schedules

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Monday																									
Tuesday																									
Wednesday																									
Thursday																									
Friday																									
Saturday																									
Sunday																									

5. Set the processing mode. Note that the process mode options vary by model.

Processing mode Hide

☒ **Record** The device will start recording when an event is detected.

☒ **Push notifications** The device will send a message to the TP-Link VIQI app when an event is detected.

☐ **Sound Alarm** The alarm on the camera will be triggered when an event is detected.

☐ **Light Alarm** The light on the camera will flash when an event is detected.

6. Click Save to save the settings.

Vehicle Detection

Vehicle detection triggers alarm actions when cameras detect vehicles are moving in the specified areas. You can customize the area settings, select the triggered actions and set the alarm schedule. Follow the steps below to finish the configuration.

1. Go to Settings > Event > Smart Event, select Vehicle Detection from the drop-down list.

Vehicle Detection On

2022-10-11 Tue. 19:23:33

Clear Delete Camera

Area Settings

Sensitivity 50

2. Enable Vehicle Detection.

3. Adjust the value of sensitivity. A higher value can trigger alarm actions more easily.

4. Set the arming schedule.

Arming Schedule Hide

Humanoid detection will be enabled only during specific periods. Clear schedules

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Monday																									
Tuesday																									
Wednesday																									
Thursday																									
Friday																									
Saturday																									
Sunday																									

5. Set the processing mode. Note that the process mode options vary by model.

Processing mode Hide

☒ Record The device will start recording when an event is detected.

☒ Push notifications The device will send a message to the TP-Link VIOI app when an event is detected.

☐ Sound Alarm The alarm on the camera will be triggered when an event is detected.

☐ Light Alarm The light on the camera will flash when an event is detected.

6. Click Save to save the settings.

Human Detection

Human detection triggers alarm actions when cameras detect persons are moving in the specified areas. You can customize the area settings, select the triggered actions and set the alarm schedule. Follow the steps below to finish the configuration.

1. Go to Settings > Event > Smart Event, select Human Detection from the drop-down list.

Vehicle Detection On

2022-10-11 Tue. 19:28:33

Clear Delete Camera

Area Settings

Sensitivity 50

2. Enable Human Detection.

3. Adjust the value of sensitivity. A higher value can trigger alarm actions more easily.

4. Set the arming schedule.

Arming Schedule Hide

Humanoid detection will be enabled only during specific periods. Clear schedules

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Monday																									
Tuesday																									
Wednesday																									
Thursday																									
Friday																									
Saturday																									
Sunday																									

5. Set the processing mode. Note that the process mode options vary by model.

Processing mode Hide

☒ Record The device will start recording when an event is detected.

☒ Push notifications The device will send a message to the TP-Link VIQI app when an event is detected.

☐ Sound Alarm The alarm on the camera will be triggered when an event is detected.

☐ Light Alarm The light on the camera will flash when an event is detected.

6. Click Save to save the settings.

Light Alarm (Only for some models)

Enable Light Alarm, then the light on the camera will flash when an event is detected. Go to Settings > Event > Alarm Device > Light Alarm. Enable Light Alarm, then schedule when the light alarm will be triggered.

Light Alarm Sound Alarm

Light Alarm ☒ On

Arming Schedule Hide

Light alarm will be triggered only during specific periods. Clear schedules

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Monday																									
Tuesday																									
Wednesday																									
Thursday																									
Friday																									
Saturday																									
Sunday																									

Save

Sound Alarm (Only for some models)

Enable Sound Alarm, then the alarm on the camera will be triggered when an event is detected. Go to Settings > Event > Alarm Device > Sound Alarm. Enable Sound Alarm, select the Alarm Type, then schedule when the sound alarm will be triggered.

Light Alarm **Sound Alarm**

Sound Alarm ☒ On

Sound Type Alarm Tone

Arming Schedule Hide

Sound alarm will be triggered only during specific period. Clear schedules

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Monday																									
Tuesday																									
Wednesday																									
Thursday																									
Friday																									
Saturday																									
Sunday																									

Save

Exception Event

Set the maximum login attempts to protect the security of your camera. The camera will be locked for 30 minutes if you enter the wrong password more than the specified attempts. Follow the steps below to finish the configuration.

1. Go to Settings > Event > Exception Event.

Access Exception

Login Error Detection ☒ On

Max Login Attempts Times (3-10)

Save

2. Enable Login Error Detection to limit the login attempts:
3. Set the maximum login attempts. The number should be between 3 and 10
4. Click Save to save the settings.
 - **Note:** To unlock the camera and try to log in again, power the camera off then power it on.

Recording and Storage

This chapter guides you on how to view and configure recording and storage settings on your camera. VIGI camera allows you to set your own recording schedules and parameters. This chapter includes the following sections:

- Recording Schedule
- Storage Management

Recording Schedule

Recording schedule section provides convenience and flexibility for the daily monitoring of your camera. You can customize the recording schedules. You can set different schedules for each day. In Advanced Settings page, you can set the pre-recording time and delay time for recording.

1. Go to Settings > Storage > Recording Schedule.

Recording Schedule

Recording Schedule ☒ On

☒ Continuous Recording ☐ Motion Detection [Clear schedules](#)

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Monday																									
Tuesday																									
Wednesday																									
Thursday																									
Friday																									
Saturday																									
Sunday																									

Advanced Settings

Pre-recording Time Seconds (The actual pre-recording time is slightly adjusted with the bit rate)

Delay Time Seconds (0-600)

[Cancel](#) [Save](#)

2. Enable Recording Schedule, select continuous recording or motion detection, then select the time.

Continuous Recording	The camera will record continuously.
Motion Detection	The camera will record when motion is detected.
Pre-recording Time	The time is set for cameras to record before the scheduled time or event. For example, the schedule for continuous recording starts at 10:00. If you set the pre-recording time as 5 seconds, the camera starts to record at 9:59:55.
Delay Time	The time is set for cameras to record after the scheduled time or event. For example, if you set the post-record time as 5 seconds, it records till 11:00:05 as motion detection ends at 11:00.

3. Click Save to save the settings.

Storage Management

In Storage Management, you can view the parameters and configure the properties and disk group of SD card. You can also enable the camera to overwrite the earlier recording files when the SD card is full.

1. Go to Settings > Storage > Storage Management.

The screenshot shows the 'HDD Management' interface. At the top, there's a header 'HDD Management'. Below it is a table with the following columns: 'Disk Number', 'Type', 'Attributes', 'Capacity/Remaining', 'Status', and an action column. The table contains one row for 'Disk Number 1', which is 'Local', 'Read-only', with a capacity of '476.20GB/0.00GB', and a status of 'Uninitial...'. The action column has a 'Format' link. Below the table is a section titled 'Advanced Settings'. It contains a toggle switch for 'Circular write of Disk', which is currently 'On'. At the bottom left of this section is a 'Save' button.

Disk Number	Type	Attributes	Capacity/Remaining	Status	
1	Local	Read-only	476.20GB/0.00GB	Uninitial...	Format

Advanced Settings

Circular write of Disk ☒ On

[Save](#)

2. You can view the details of the storage. If the SD card is not initialized, click Format to format the SD card.
3. Determine if you want to enable the camera to overwrite the earlier recording files when the SD card is full.
4. Click Save to save the settings.

Network Management

With proper network configurations, you can connect your camera to the internet, build up mapping between internal and external ports. This chapter contains the following sections:

- Configure Network Connection
- Configure Ports
- Configure Port Forwarding
- Configure IP Restriction
- Configure Multicast

Configure Network Connection

In Connection, you can view the connection status and configure the camera to obtain a dynamic or static IP address. Follow the steps below to configure the network settings.

1. Go to Settings > Network Settings > Connect.

Internet Connection

Status: Connected

Basic Settings

Mode

Static IP

IP Address

192.168.0.60

Subnet Mask

255.255.255.0

Gateway

192.168.0.1

Preferred DNS

192.168.31.1

Alternative DNS

0.0.0.0

Advanced Settings

MTU

1480

Adaptive IP

☐ Off

Save

Status Displays the current internet status.

Mode Configure the camera to obtain a dynamic or static IP address.

IP Address Specify an IP address for the camera. The IP address should be in the same segment as the gateway; otherwise, the camera cannot connect to the internet.

Subnet Mask Enter the subnet mask.

Gateway Enter the IP address of the gateway device to which the data packets will be sent. This IP address should be in the same segment as the camera's IP address.

Preferred / Alternative DNS Enter the IP address of the DNS server.

MTU	Specify MTU (Maximum Transmission Unit) to decide the largest size of data unit that can be transmitted in the network. A larger unit can improve the efficiency with more data in each packets, but it may increase the network delay because it needs more time to transmit. Therefore, if you have no special needs, it is recommended to keep the default value.
Adaptive IP	Enable this option if you want to set the camera's IP to change according to the network topology.

- **Note:** The cameras should be in the same segment with the NVR, so that the NVR can discover and manage them.

2. Click Save to save your settings.

Configure Ports

In Port, you can configure the HTTPS port and service port of NVR that can be used to access the NVR through the network. When managing and monitoring the devices via VIGI Security Manager or the VIGI app, the ports configured here are used for communications of corresponding protocols. Go to Settings > Network Settings > Port. Specify HTTPS port and service port. Click Save.

The screenshot shows a web interface titled 'Port'. It contains three rows of configuration options, each with a label and a text input field. The first row is 'HTTPS' with the value '443'. The second row is 'RTSP' with the value '554'. The third row is 'Video Service' with the value '8800'. Below these fields are two buttons: 'Restore' and 'Save'.

HTTPS	Specify a port for HTTPS protocol.
RTSP	Specify a port for RTSP protocol.
Video Service	Specify a port for protocols of video services

Configure Port Forwarding

Port Forwarding is used to establish the mapping between the internal port and external port. When Port Forwarding is enabled, you can access the device and watch the videos when accessing the external port remotely.

Note: The cameras should be connected to the internet, and Port Forwarding should be enabled on the gateway. Follow the steps below to configure Port Forwarding.

1. Go to Settings > Network Settings > Port Forwarding.
2. Enable Port Forwarding and specify a mapping type. If you select Auto as the mapping type, the mappings are established automatically. If you select Manual as the mapping type, click Edit to specify the external port.

Port Forwarding

Port Forwarding ☒ On

Mapping Type Manual

Port Type	Internal Port	External Port	Internal IP	Status	
HTTPS	443	443	192.168.0.60	Disabled	Edit
RTSP	554	554	192.168.0.60	Disabled	Edit
Video Service	8800	8800	192.168.0.60	Disabled	Edit

Restore Save

Port Type	Displays the protocol type.
Internal Port	Displays the port of the NVR to be converted.
External Port	Displays the external port opened by the gateway.
Internal IP	Displays the IP address of the NVR that needs to be converted.
Status	Displays the status of mapping.
Restore	Click to restore the settings to default factory settings.

3. Click Save.

With Port Forwarding enabled, you can remotely watch the videos with the URL `rtsp://A.B.C.D:Port/streamN`, for example, `rtsp://10.0.1.47:28736/stream1`. A.B.C.D is the WAN IP address of the gateway, and Port is the number of RTSP external port. N can be number 1 or 2 that indicates the stream, 1 for main stream and 2 for substream.

Configure IP Restriction

When IP Restriction is enabled, you can add IP addresses to the deny list or allow list to restrict the access to the camera. The IP address in the deny list cannot access the camera, while only the IP addresses in the allow list can access the camera. Follow the steps below to configure IP Restriction.

1. Go to Settings > Network Settings > IP Restriction.
2. Enable IP Restriction and specify the restriction rule. If you select Deny List, the devices with the IP addresses specified in the table will not be able to access the camera. If you select Allow List, only the devices with the IP addresses specified in the table can access the camera.

IP Restriction

IP Restriction ☒ On


Restriction Rule ☒ Deny List - Block the IP addresses on the list.
☐ Allow List - Allow only the IP addresses on the list.

Description	IP Address
-------------	------------

Delete the Selected Add

Restore Save

3. Click Add to add the desired IP address, give a description to identify this IP address, then click Save.

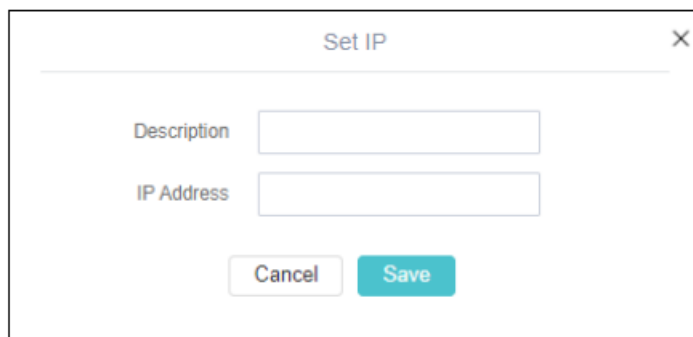


A dialog box titled "Set IP" with a close button (X) in the top right corner. It contains two input fields: "Description" and "IP Address". Below the input fields are two buttons: "Cancel" and "Save".

4. Click Save to save your settings.

Configure Multicast

When Multicast is enabled, you can watch videos using the multicast address and port. Follow the steps below to configure Multicast.

1. Go to Settings > Network Settings > Multicast. Select the stream type, then enable Multicast. For the multicast address and port, you can disable
2. Random IP Port and specify a static address and port, or enable it and use a random one. Click Save.

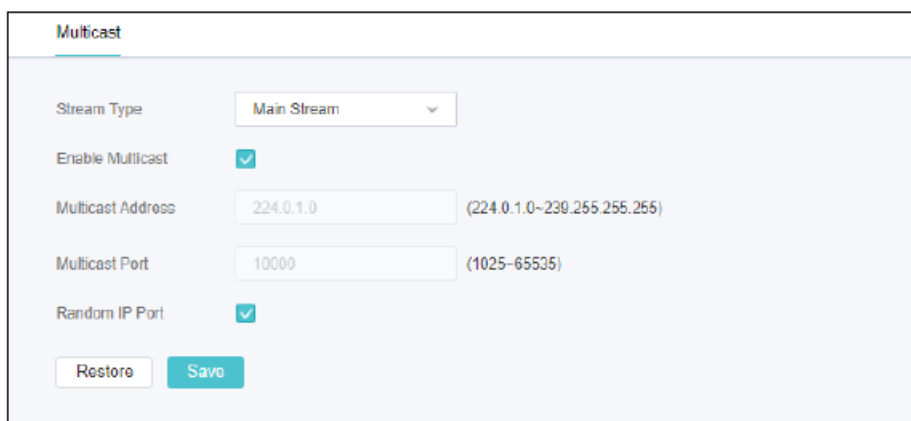

A configuration window titled "Multicast" with a close button (X) in the top right corner. It contains the following settings:

- Stream Type: Main Stream (dropdown menu)
- Enable Multicast: ☒
- Multicast Address: 224.0.1.0 (range: 224.0.1.0~239.255.255.255)
- Multicast Port: 10000 (range: 1025~65535)
- Random IP Port: ☒


At the bottom, there are two buttons: "Restore" and "Save".

After Multicast enabled, you can watch the video with the URL `rtsp://A:B:C: D/multicastStreamN`, for example, `rtsp://192.168.0.3/multicastStream1`. A.B.C.D is the IP address of the camera, and N can be number 1 or 2 that indicates the stream, 1 for main stream and 2 for substream.

Cloud Service

After connecting your camera to the internet, you can manage it remotely via Cloud Services. The camera supports remote management with the support of TP-Link Cloud Services. With a TP-Link ID bound, you can remotely monitor your areas on multiple platforms, including computers and mobile phones. Follow the steps below to bind your TP-Link ID to the camera and download the VIGI Security Manager or VIGI app.

1. Go to Settings > Cloud Service.
2. Click Go to Bind. Enter your TP-Link ID and password and click Bind. If you do not have a TP-Link ID, click Sign Up to register.

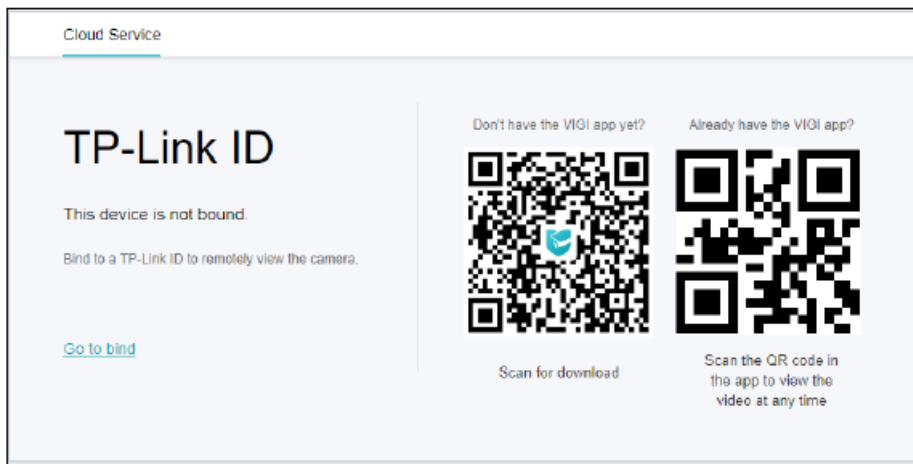

3. After binding your TP-Link ID, download VIGI Security Manager on the computer from the [Download Center](#), or download the VIGI app on your mobile phone by scanning the QR code below. Log in with your TP-Link ID. Then you can monitor the live view and manage the camera remotely on your computer or mobile phone.



4. If you want to unbind the TP-link ID, click Unbind on the same page and follow the web instructions to unbind the camera.

System Settings

This chapter guides you to configure the basic and advanced settings of your camera, export and import settings. You can create and modify administrator accounts based on your needs. This chapter includes the following sections:

- Configure Basic Settings
- Modify System Time
- Manage User Accounts
- System Management
- Upgrade Firmware
- Reboot Device Regularly

Configure Basic Settings

To configure the settings for your camera, go to Settings > System Settings > Basic Settings. You can view and change the name of your camera, turn on or off the status LED (only for some models).

Basic Settings

Date

Device Name

VIGI C540-W 2.0

Status LED

☒ On

Save

Modify System Time

VIGI camera provides two methods to modify the system time. NTP (Network Time Protocol) can automatically get the system time from the internet, or you can manually set the system time. You can also select the time zone according to your region, and configure the DST settings. To configure these settings, go to Settings > System Settings > Date.

Basic Settings

Date

Time Zone

(UTC-00:00) Dublin, Edinburgh, Lisbon, Lond... ▾


Device Time


2023-02-08 09:31:33

Time Settings

Manual ▾

Set Time

2023-02-08 

09:31:33 

Synchronize with computer

DST

☒ On

Start Time

Mar ▾

Last ▾

Sun ▾

01:00 ▾

End Time

Oct ▾

Last ▾

Sun ▾

02:00 ▾

DST Bias

60 mins ▾

Save

Manage User Accounts

You can modify the default user account (admin) based on your needs. The Administrator user name is admin and the password is set when you set up your camera for the first time. To configure these settings, go to Settings > System Settings > User Management.

User Management				
<input type="checkbox"/>	Username	Group Name	Remark	
<input type="checkbox"/>	admin	Administrator		Edit

Click Edit to change the settings.

Edit User

Username

admin

User Group

Administrator

Permission List

✓ Preview

✓ Playback

✓ Tool

✓ Camera

✓ Event

✓ Storage

✓ Network

✓ Cloud

✓ System

✓ PTZ

Change Password

☐

Remark

Reset Password Email

Cancel

Save

Select the Change Password checkbox to change the password.

Edit User

Username

admin

User Group

Administrator

Permission List

✓ Preview

✓ Playback

✓ Tool

✓ Camera

✓ Event

✓ Storage

✓ Network

✓ Cloud

✓ System

✓ PTZ

Change Password

☒

Old Password

New Password

Confirm Password

Remark

Reset Password Email

vivi.luo@tp-link.com

Cancel

Save

Enter the old password and set a new password. Click Save to save your settings, then you will need use the new password to log into the camera.

System Management

You can reset the camera to factory default settings, import and export the configuration file of your camera. To configure these settings, go to Settings > System Settings > System Management.

System Management

Upgrade Firmware

Reboot Device

Reset to Factory Default

Reset

Export configuration file

Export

Import configuration file

Browse

Import

To reset the camera, click the Reset button to reset the camera. To export the configuration file, click the Export button. To import the configuration file, click Browse to select your file, then click Import.

Upgrade Firmware

TP-Link aims at providing better network experience for users. We will inform you through the web management page if there's any update firmware available for your router. Also, the latest firmware will be released at the TP-

Link official website www.tp-link.com, and you can download it from the Support page for free.

Note:

- Backup your camera configuration before firmware upgrade.
- Do NOT power off the camera during the firmware upgrade.

Online Upgrade

1. Go to Settings > System Settings > System Management > Upgrade Firmware.
2. Click Check for Update to see whether the latest firmware is released.

Download Center'." data-bbox="218 232 789 409"/>

3. Focus on the Online Upgrade section, and click Upgrade if there is new firmware.
4. Wait a few minutes for the upgrade and reboot to complete.


Local Upgrade

1. Download the latest firmware file for the router from www.tp-link.com.
2. Go to Settings > System Settings > System Management > Upgrade Firmware.
3. Click Browse to locate the downloaded new firmware file, and click Update.
4. Wait a few minutes for the upgrade and reboot to complete.

Reboot Device Regularly

You can The Scheduled Reboot feature cleans the cache to enhance the running performance of the camera.

1. Go to Settings > System Settings > Reboot Device.
2. Enable Scheduled Reboot.
3. Select the day and time and click Save to save your settings. Then your camera will reboot regularly at a specific time.

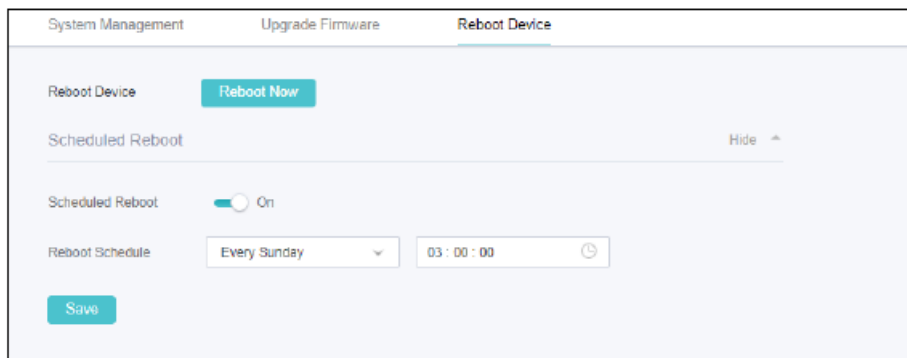

- **Note:** You can click Reboot Now to reboot the camera immediately.

This guide uses the VIGI C540 (V2) web page for demonstration. Features and pictures may differ from your actual product. © 2023 TP-Link 1910013302 REV1.0.0

Documents / Resources

 User Guide Wired Camera Web Interface <small>The guide is for the VIGI C540 (V2) Wired Camera Web Interface. It is not applicable to other models.</small>	tp-link C540 VIGI Wired Camera Web Interface [pdf] User Guide C540 VIGI Wired Camera Web Interface, C540 VIGI, Wired Camera Web Interface, Camera W eb Interface, Web Interface, Interface
---	--

References

- [🔗 WiFi Networking Equipment for Home & Business | TP-Link](#)
- [🔗 TP-Link Community](#)
- [🔗 Support | TP-Link United Kingdom](#)
- [🔗 Download Center | TP-Link](#)
- [User Manual](#)