



Tpyesss BA-02 Wireless TWS Portable Bluetooth Speaker User Manual

[Home](#) » [Tpyesss](#) » Tpyesss BA-02 Wireless TWS Portable Bluetooth Speaker User Manual 

Tpyesss

USER MANUAL



Contents

- 1 Matters Needing Attention
- 2 Precautions for the Charging
- 3 Speaker Connection
- 4 Jack Description
- 5 Speaker Connection
- 6 Basic Parameter
- 7 Technical Parameter
- 8 Package List
- 9 After-Sales Service
- 10 Documents / Resources
 - 10.1 References

Matters Needing Attention

In order to use the player correctly and ensure that performs well, please read and observe carefully

1. Do not hit the host severely.
2. Do not touch benzene, thinners and other chemicals.
Please keep away from strong magnetic and electric fields.
3. Please avoid direct light or heating appliances.
4. Do not disassemble, repair, or modify by yourself.
5. Please sort and properly dispose of waste packaging, batteries, and old electronics.
6. Do not expose the product to rain or damp rings to prevent fire or electric shock.


Precautions for the Charging

1. Insert one end of the power cord into the [5V] socket of the machine, and insert the other end of the USB into a matching plug or computer. The “red light” is on when charging, and it goes out when it is fully charged.
2. It is recommended that the product try not to play while charging, so as not to charge for a long time and shorten the battery life.
3. Do not put water containers next to the charger, so as to avoid water splashing and causing short circuit of the charger, resulting in overheating, leakage and malfunction.
4. Do not put heavy objects on the power cord or try to modify the power cord, otherwise it may cause electric shock or fire.
5. When charging, please use the charger not exceeding 5V/2A, otherwise it may shorten the battery life or damage the machine.
6. The speaker has a built-in charging protection circuit, which can be connected to a computer or charger for a long time, about 3-4 hours fully charged. Usually, the battery life is between 16-18 hours, the duration will vary depending on the time of LED light usage and volume playback level.
7. When the battery power is low, the system will automatically shut down. Please charge in time. If you do not use the machine for a long time, please charge it at least once a month to protect the battery and prolong its life.

Speaker Connection


1. Wireless speaker connection: Turn on the speaker device, turn on the wireless connection function of the mobile phone, and search for the wireless device "BA-02". (No need to enter a password, connect directly).
2. **TWS connection:**
 - 2.1. When the new machine is dualconnected for the first Time, you need to long press the TWS button(∞ logo) for both machines, when you hear "TWS cleared", it means pairing is in progress. When the pairing is successful, you will hear "TWS paired". (under normal circumstances, the pairing is successful within 6 seconds, but the greater the environmental interference, the longer the pairing Time)
 - 2.2 If the two devices have been connected, turn off and on again, the machine will automatically interconnect, no need to re-connect.
 - 2.3 TWS is disconnected or reconnected, the host needs to be operated (the host means: the one that can be controlled by Bluetooth is the host, and the one that needs to be paired is the slave).
3. **Other connections:** The machine automatically detects and recognizes the external device when it is turned on, and enters the wireless connection AUX mode ater it is turned on.The TF card or USB is inserted and automatically recognizes the playback. The latter has the priority principle, and the playback mode can also be switched by itself; the audio signal line does not switch automatically through [M] Key to switch to play in AUX mode.



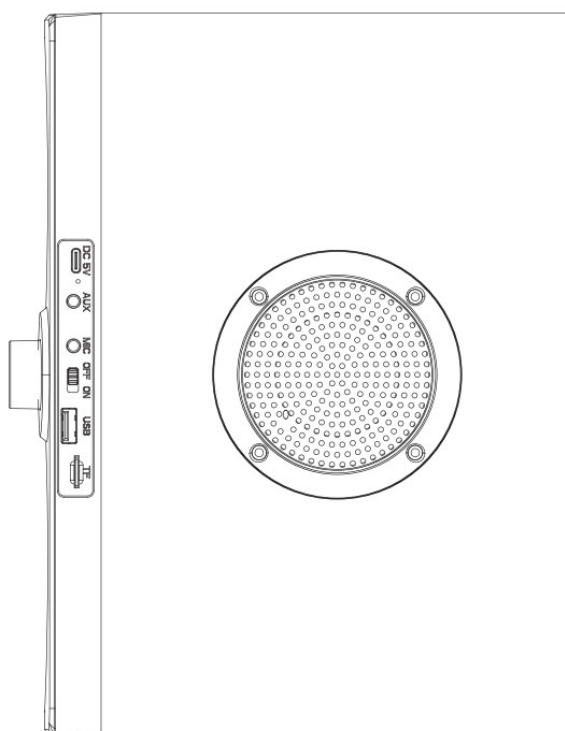




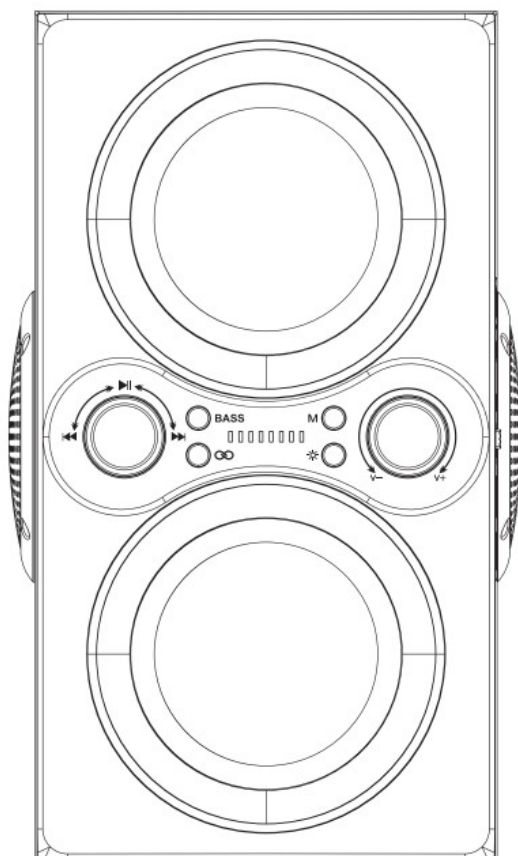


Jack Description



| | |
|---------------|---------------------------|
| MIC | Microphone Interface Ø3.5 |
| DC 5V | Power Port |
| TF | TF Card Port |
| AUX | 3.5mm Auxiliary Audio |
| USB | USB Type-C Port |
| ON/OFF | Speaker On/Off Switch |

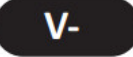Speaker Connection



| | |
|--|---------------------------------|
|  | Turn on/off the BASS |
|  | Change lighting effect |
|  | Battery level display |
|  | Turn right, increase the volume |
|  | Turn left, increase the volume |
|  | Play previous song |
|  | Play next song |
|  | Pause playback |
|  | Long press, turn on the TWS |
|  | Change playback mode |

Basic Parameter

| | | | |
|-----------------|--|--------------------|-------------------|
| Speaker type | Portable Wireless Speaker | Item Weight | 7.21b |
| Exterior design | Cuboid | Item Color | Black |
| Light Type | RGB/LED | Charging Cable | USB Type-C |
| Active/Passive | Active | Product Dimensions | 10.9*6*7.9 inches |
| Control Method | Knobs and Buttons | Soundtrack System | 1.0 |
| Features | Wireless Connection Electronic Devices, Support TF Card,AUX,USB,MP3 Music Playback | | |

Technical Parameter

| | | | |
|-----------------------|--------------------------|--------------------------|--------|
| Frequency Response | 45Hz-20KHz | Signal-to-Noise Ratio | 100db |
| Output Power | 80W (Peak) | Impedance | 40 |
| Speaker Unit | 4 inches*2 3 inches*2 | Distortion | 1% |
| Transmission Distance | 33 Foot | Play Time (50%volume) | 16-18h |
| Power Supply | DC5V/2A Lithium Battery | LED Light Play Time | 12-14h |
| Battery Capacity | 5000mAh /7.4v | Charging Time | 5-6h |
| Audio Interface | 3.5mm AUX | Connection Version | 5.0 |

Package List

- 1 x Wireless Portable Speaker
- 1 x AUX 3.5mm Audio cable
- 1 x USB Type-C cable
- 1 x User manual

key to switch AUX mode. 3.Whether the volume of the external audio source device is turned on." image-4="" headline-5="p" question-5="Q: Why doesn't the product establish a Bluetooth connection automatically?" answer-5="A: 1. The automatic connection only occurs with the previously paired devices. 2.If the stereo is turned on and no Bluetooth device is detected within 10 seconds (e.g. the Bluetooth mode is not activated on a smartphone), it won't establish an automatic connection. " image-5="" headline-6="p" question-6="Q: What are the possible causes for the lack of sound in Bluetooth mode?" answer-6="A: 1. Firstly, ensure that the wireless Bluetooth connection has been successfully established. 2. Secondly, make sure to simultaneously activate the volume on both the Bluetooth device and the speaker." image-6="" count="7" html="true" css_class=""]

After-Sales Service

We promise that if the product has quality problems, it will be returned for half a year, guaranteed for one year, and free consultation for life. Welcome your consultation.

If you are satisfied with our service, please comment on our service. Thank you for your participation and recognition. This will be our greatest motivation.

If the product or service you are not satisfied, please contact us in Time so that we can know the specific problem you encounter and provide you with a better solution.

We are happy to help you answer any questions of the product.

Welcome to write to us and scan the QR code for consultation.

of course, you can also come to our official website to browse, we will provide friendly support.

We and other buyers really need your sincerely advice of our products, If time permits, please share your thoughts . We will prepared some surprise for you as well.

Tpyesss

Thanks again

Enterprise Mailbox btspeakerservice@gmail.com

Documents / Resources

| | |
|---|---|
| <div><div>Tpyesss</div><div>USER MANUAL</div><div></div></div> | <div><div>Tpyesss BA-02 Wireless TWS Portable Bluetooth Speaker [pdf] User Manual</div><div>BA-02 Wireless TWS Portable Bluetooth Speaker, BA-02, Wireless TWS Portable Bluetooth Speaker, TWS Portable Bluetooth Speaker, Portable Bluetooth Speaker, Bluetooth Speaker, Speaker, Wireless TWS Portable Speaker, Speaker BA-02</div></div> |
|---|---|

References

- [User Manual](#)