



Contents [[hide](#)]

- [1 TRACEABLE 5001 100 Hour Timer](#)
- [2 TIME-OF-DAY CLOCK SETTING](#)
- [3 COUNTDOWN ALARM TIMING – SINGLE CHANNEL](#)
- [4 COUNT-UP TIMING – SINGLE CHANNEL](#)
- [5 COUNTDOWN ALARM TIMING – 1-4 CHANNELS](#)
- [6 COUNT UP TIMING – 1-4 CHANNELS](#)
- [7 ALL OPERATIONAL DIFFICULTIES](#)
- [8 BATTERY REPLACEMENT](#)
- [9 WARRANTY](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)


TRACEABLE®

TRACEABLE 5001 100 Hour Timer



TIME-OF-DAY CLOCK SETTING

1. Press and HOLD the CLOCK Button for 3 seconds.
2. Time-of-day will flash on the display. The display will continue to flash during the setting.
3. Press HR (hours), MIN (minutes), or SEC (seconds) button to set desired time of day. Press and hold HRS, MIN, or SEC to advance the setting rapidly. AM or PM will appear on right side of display.
4. To change to 24-hour format, press CLEAR while the display is still flashing in clock mode. To return to AM/PM format, press CLEAR again.
5. Press CLOCK to save settings

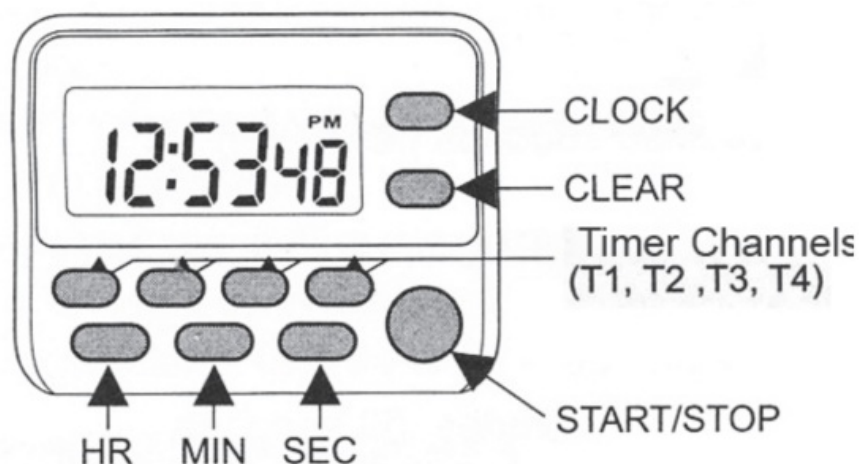

COUNTDOWN ALARM TIMING – SINGLE CHANNEL

1. Select a Timing Channel between T1 – T4.
2. Set HR, MIN, and SEC to the desired time.
3. Press the START/STOP button to begin timing.
4. When time is up, a flashing Alarm Clock symbol and COUNT UP will appear at top of the display.
5. The alarm will sound for one minute and turn off automatically. Alarm Clock symbol will flash for one minute or until the alarm is turned off manually.
6. The timer will continue to count up until turned off manually. Press START/STOP to turn off the timer.
7. To turn off the alarm manually, press START/STOP.
8. Press CLEAR to return the display to 0:00 00.

COUNT-UP TIMING – SINGLE CHANNEL

1. Select a Timing Channel between T1 – T4.
2. Press START/STOP to begin counting up.
3. When timing is complete, press START/STOP. Press CLEAR to return the display to 00:00 00.

COUNTDOWN ALARM TIMING – 1-4 CHANNELS

1. Press T1, T2, T3, or T4 button.
2. Press HRS, MIN, or SEC to advance the setting to the desired countdown time.
Press and hold HRS, MIN, or SEC to advance the setting rapidly.
3. Press START/STOP to start the countdown.
4. When time is up, the alarm will sound and an Alarm Clock symbol will flash for one minute. The alarm will turn off automatically after 1 minute.
5. To turn off the alarm manually, press START/STOP.
6. Press START/STOP. T1, T2, T3, and T4 will flash on the left side of the display. Only the channel showing on the display will not flash.
7. When time is up, the alarm will sound and an Alarm Clock symbol will appear at the top of the display. Each channel has a unique sounding alarm. (T1 beeps once. T2 beeps twice. T3 beeps three times. T4 beeps four times.) If more than one channel

has reached zero and is sounding, only the alarm for the channel showing on the display will be heard.

8. Press START/STOP to turn off the alarm.

NOTE: When time is up in countdown mode, T1, T2, T3 or T4 will not begin to count up.

COUNT UP TIMING – 1-4 CHANNELS


1. Press T1, T2, T3, or T4 button.
2. Press CLEAR to return the setting to 00:00 00.
3. Press START/STOP to begin timing up. The timer will begin counting up.
4. Press START/STOP to end timing.
5. To count up on all four channels simultaneously, clear all channels. Press T1, then CLEAR, then START/STOP. Press T2, then CLEAR, and then START/STOP. Press T3, then CLEAR, and then START/STOP. Press T4, then CLEAR, and then START/STOP. The display will show T1, T2, T3, and T4 on top of the display. The channel currently on display will not flash.
6. To stop timing for T1, T2, T3, and T4, desired channel, and then press START/STOP.

ALL OPERATIONAL DIFFICULTIES

If the timer does not function properly, please replace the battery with a new battery (see “Battery Replacement” section). Low battery power can occasionally cause any number of “apparent” operational difficulties. Replacing the battery with a fresh new battery will solve most difficulties.

BATTERY REPLACEMENT

An incorrect display, no display or operational difficulties indicate that the batteries should be replaced. Slide open the battery cover on the back of the timer. Insert two (2) new AAA batteries. Make certain to note the proper polarity as indicated by the diagram in the battery compartment. Replace the battery cover.

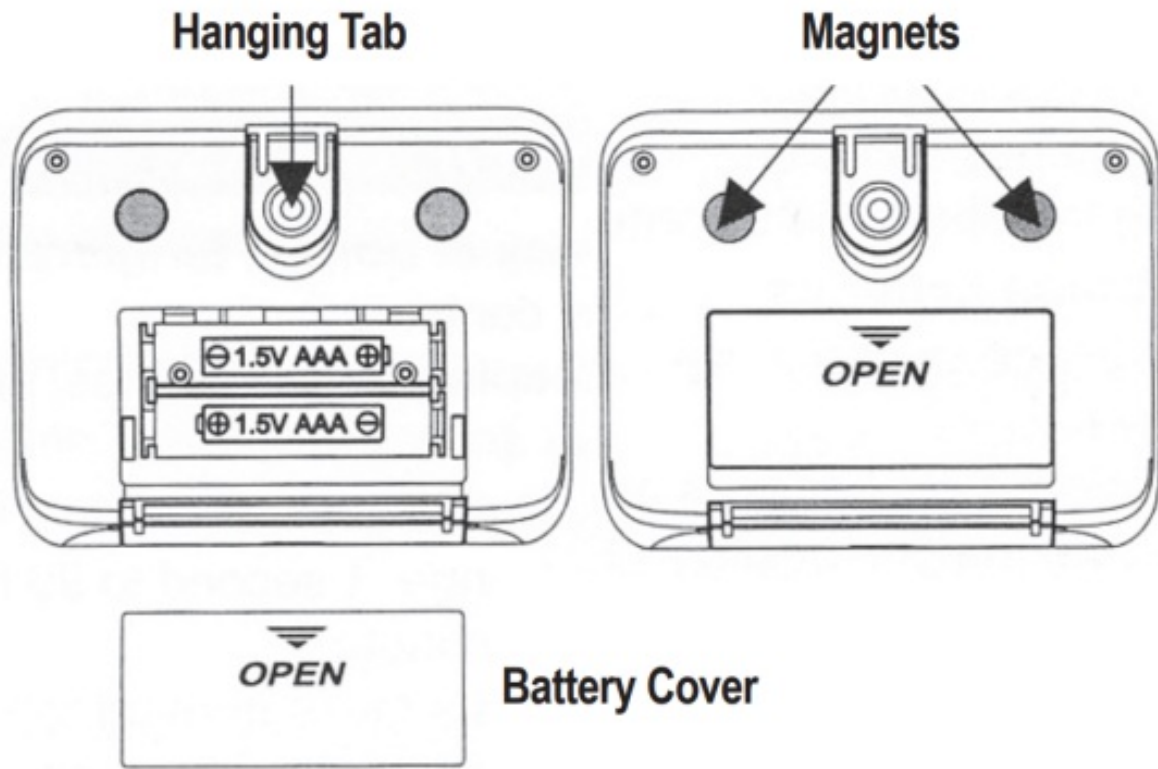

WARRANTY

WARRANTY, SERVICE, OR RECALIBRATION For warranty, service, or recalibration, contact:

TRACEABLE® PRODUCTS

12554 Old Galveston Rd. Suite B230

Webster, Texas 77598 USA

Ph. 281 482-1714 • Fax 281 482-9448

E-mail support@traceable.com • www.traceable.com

Traceable® Products are ISO 9001:2015 Quality- Certified by DNV and ISO/IEC 17025:2017 accredited as a Calibration Laboratory by A2LA.

Cat. No. 5001

Traceable® is a registered trademark of Cole-Parmer. ©2020 Traceable® Products. 92-5001-00 Rev. 4 092524

Documents / Resources



[TRACEABLE 5001 100 Hour Timer \[pdf\]](#) Instruction Manual

5001 100 Hour Timer, 5001, 100 Hour Timer, Timer

References

- [User Manual](#)

📄 100 Hour Timer, 5001, 5001 100 Hour Timer, Timer,

📁 TRACEABLE TRACEABLE

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.