

Traceable 5667 4 Channel Timer User Guide

Home » TRACEABLE » Traceable 5667 4 Channel Timer User Guide 🖫

Contents

- 1 Traceable 5667 4 Channel
- **Timer**
- **2 SETTING A TIMER**
- **3 STARTING A TIMER**
- 4 Traceable® 4-Channel Timer
- **5 INITIAL SETUP**
- 6 Documents / Resources
 - **6.1 References**
- 7 Related Posts

Traceable®

Traceable 5667 4 Channel Timer



WARRANTY, SERVICE, OR RECALIBRATION


Traceable® Products are ISO 9001:2018 Quality- Certified by DNV and ISO/IEC 17025:2017 accredited as a Calibration Laboratory by A2LA

• Item No. 56000-16

• Model No. 5667

©2022 1065T9_M_92-5667-00 Rev. 0 09022022


SETTING A TIMER

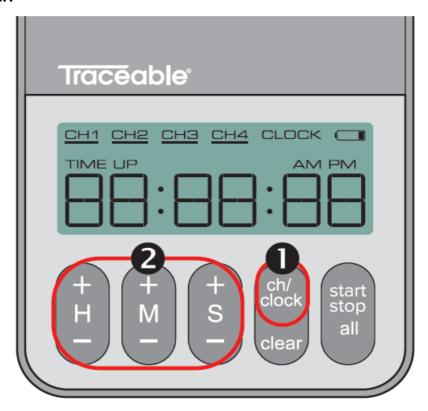

- 1. Press CH/CLOCK button until the desired channel is solid (not flashing) on the screen.
- 2. Use the H/M/S buttons to configure timer.


Note: To clear and start over, press CLEAR button

STARTING A TIMER

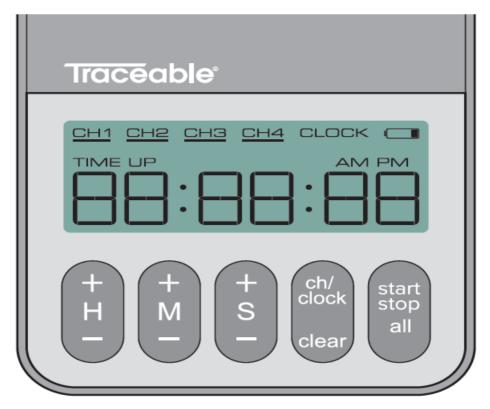


- When starting/stopping an individual timer, navigate to that timing channel using the CH/ CLOCK button and then press START/STOP ALL.
- $\bullet\,$ To start/stop all timers, press the START/STOP ALL button from the clock screen.
- Timers which are counting down will lash quickly.
- Timers which are counting up will lash slowly.
- · Timers which have expired will lash rapidly

Traceable® 4-Channel Timer

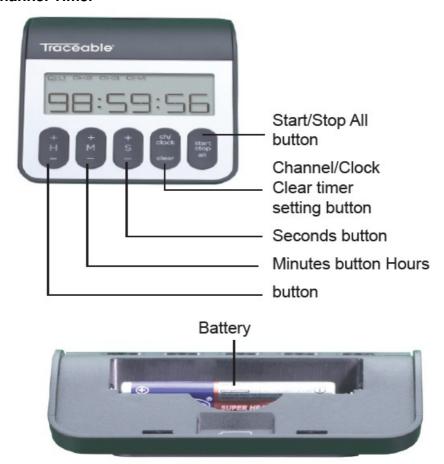

INITIAL SETUP

1. Remove battery cover and insert batteries

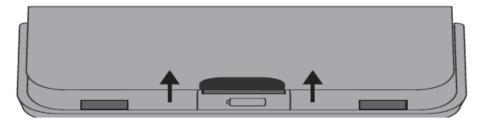

- 2. Replace battery cover
- 3. Press CH/CLOCK button until clock appears on top row of display.



4. Hold CH/CLOCK until there is an audible beep and the time flashes



5. To adjust 12/24 hour clock, press and hold START/ STOP ALL button.



6. Use H/M/S buttons to adjust the time



- 7. Pressing Seconds button will round to the nearest minute.
- 8. Press the CH/CLOCK button to exit setup

1.888.610.7664 www.calcert.com sales@calcert.com

Documents / Resources



References

• **Calcert**

Manuals+,