

# tracer Stripe TWS Bluetooth Speaker Instruction Manual

Home » Tracer » tracer Stripe TWS Bluetooth Speaker Instruction Manual

## **Contents**

- 1 tracer Stripe TWS Bluetooth **Speaker**
- 2 Points for attention
- **3 SPECIFICATION**
- **4 OVERVIEW**
- **5 BLUETOOTH MODE**
- 6 Documents / Resources



# tracer Stripe TWS Bluetooth Speaker



## Points for attention

• Do not hit or crush it seriously.

- · Do not contact benzene, diluent, and other chemicals.
- Do not use a nearby strong magnetic field or electric field. Avoid direct rays or heating appliances.
- Do not disassemble, repair or modify.
- Do not listen at large volume for long periods of time, so as not to injure the hearing.
- Do not clean the speaker with water and don't immerse the speaker in the water. This speaker only has a water pray prevention function. I use the speaker not by the right way and cause any quality problems, not support warranty. Kindly note the above! Please clean the speaker with a slightly damp cloth.
- When using cycling, driving a car or motorcycle, Please don't stand in the rain for a long time.
- When using at low voltage, it may cause distortion of sound and please charge it in time.
- Bluetooth is compatible with common smartphones and tablets, but depending on the device or application you use, may not be able to support a particular feature.

## **SPECIFICATION**

• Product Name: Bluetooth Sneaker

Model: Tracer Striae TWSProduct size: 190×0 90 mm

• Product weight: 505g

• Bluetooth transmission: 2: 10m


• Playtime: 5h

• Charging time: 2,3 h

• Battery capacity: 3,7V/12 00mAh

Input: USB-C 5 V / 500 mA

## **OVERVIEW**

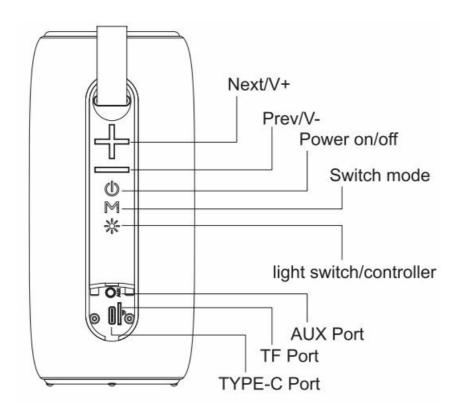

• Bidetotti version. 3.0 supports H3F, Til F, AZDF, AVNOF.
• ON/OFF: Long press , to turn On/Off the speaker.
• Bluetooth pairing: When blue light blinks fast, the speaker is ready for pairing, search for Todi on your phone
and pair it. blue light becomes stable after successful pairing.
<ul> <li>Long press  in order to disconnect bluetooth.</li> </ul>
TWS
• Long press  each one to enter TWS mode.
TF CARD MODE:
When the TF Card is inserted in the TF card slot, the speaker will switch to TF card mode automatically. Or
short press M to switch to TF card mode.
Blue light keeps blinking slowly while music is being played.
Short press
<ul> <li>Long press ⊕ / ⊖ control the volume.</li> </ul>
USB PLAYBACK MODE:
• The speaker will switch to USB playback mode automatically after inserting USB. Or short press (M) to switch
to USB playback mode.
The blue light keeps blinking while music is being played.
Short press  for PREV /NEXT.
Long press ⊕ / ⊖ control the volume.
LIGHT EFFECT
Short press  Turn on the light, then press to turn off the light.
Long press Toggle Lighting Effects (11 effects).
AUXIN MODE:
<ul> <li>Plug in the 3.5mm audio cable lo enter Aux-in mode, or short press</li></ul>
Blue light keeps blinking slowly while music is being played
FM MODE:
Long press ⊕ / ⊖ control the volume.
Short press  to switch to FM mode.
Short press  for PREV /NEXT.

Przycisk	Działanie
4	Long press for Next, Short press for V+
	Long press for Prev, Short press for V-
(1)	Long press for switch Short press for play/pause
M	Short press switching mode Lona Press: disconnect Bluetooth connection
	Short press to switch for candle blinking light and stable light
	Type C charging port

# **Documents / Resources**



<u>tracer Stripe TWS Bluetooth Speaker</u> [pdf] Instruction Manual 47182, Stripe TWS Bluetooth Speaker, Stripe TWS, Bluetooth Speaker, Tracer Stripe TWS

Manuals+,