





TRADER S COPP4G 4 Gang Fixed Power Point Instructions

Home » TRADER S » TRADER S COPP4G 4 Gang Fixed Power Point Instructions

Contents

- 1 TRADER S COPP4G 4 Gang Fixed Power Point
- **2 Product Specifications**
- 3 Product Usage Instructions
- 4 Frequently Asked Questions
- 5 Documents / Resources
 - **5.1 References**



TRADER S COPP4G 4 Gang Fixed Power Point



Product Specifications

• Product Name: Puma 4 Gang Power Points

Model: Trader's Puma 4 Gang Fixed Power Point

• Order Codes: COPP4G (White), COPP4GBK (Black)

• Dimensions: 215mm x 75mm x 13mm

• Depth: Same as PUPP2G

· Features: Supplied with mounting bracket and prewired tails

· Warranty: 10 years

Product Usage Instructions

- 1. **Mounting:** Attach the custom mounting bracket to the desired location using suitable screws.
- 2. Wiring: Connect the prewired tails to the electrical supply following standard wiring practices.
- 3. Installation: Secure the 4 gang fixed power point onto the mounting bracket.
- 4. **Testing:** After installation, test the power point to ensure proper functionality.

Frequently Asked Questions

Q: What is the warranty period for the Puma 4 Gang Power Points?

A: The product comes with a 10-year warranty from the manufacturer.

Q: What are the common applications for the 4 Gang Fixed Power Point?

A: The power point is suitable for use in kitchens, bedrooms, offices, entertainment areas, and workshops.

The Puma – Trader's range of familiar power points & switches, now including 4 gang power points with custom mounting bracket for your next install. Standard range is White.

Also available in Black.

Same depth as PUPP2G



Trader's Puma 4 Gang Fixed Power Point is another range of power point and switches ready for use by Australian Electrical Contractors.

We believe our 4 Gang range serves the consumer expectations of Australians that are building or renovating, and useful for many other commercial installs. So many jobs need that extra fixed gang power point in Kitchens, Bedrooms, Offices, Entertainment Areas and Workshops.

Kitchen – Oven, Toaster, Kettle, Thermomix, Phone Charger. **Bedroom** – Clock Radio, Phone Charger, Electric Blanket, Two Lamps. **Living Room** – Television, DVD Player, MP3 Player, PlayStation, Sound Bar. **Office** – Computer, Printer, Fax Machine, Phone Charger, Lamp. **Workshop** – Power Drill, Computer, Phone Charger, Bar Fridge, Stereo.

- 183mm mounting centres
- · Supplied 2 gang wall bracket
- Pre-wired for easy installation to suit 1 power circuit
- 13mm thick
- · Single Pole switched
- 10A 250V
- Covers, plates and dollies are made from UV stabilised polycarbonate to avoid discolouring to yellow.
- Approved to AS/NZS3112.
- Uses brass tunnel terminals that have the screws backed out for easier installation of cabling. Power Point terminals have 5.8mm bore to suit 4 x 2.5mm2 cable.
- · Suits plasterboard installations only.
- · Standard colour is White. Also available in Black- please check availability





Supplied with mounting bracket and prewired tails.







Documents / Resources



TRADER S COPP4G 4 Gang Fixed Power Point [pdf] Instructions

COPP4G, COPP4GBK, COPP4G 4 Gang Fixed Power Point, COPP4G, 4 Gang Fixed Power Point, Fixed Power Point, Point

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.