

TRANE TECHNOLOGIES KIT13631 Inducer Limit Switch Kit Installation Guide

Home » Trane Technologies » TRANE TECHNOLOGIES KIT13631 Inducer Limit Switch Kit Installation Guide 1



Contents

- 1 TRANE TECHNOLOGIES KIT13631 Inducer Limit Switch
- 2 Inducer Limit Switch Kit
- 3 Installing the Inducer Limit Switch
- **4 Verification of Proper Operation:**
- **5 Documents / Resources**
 - **5.1 References**



TRANE TECHNOLOGIES KIT13631 Inducer Limit Switch Kit



Inducer Limit Switch Kit

WARNING: HAZARDOUS VOLTAGE - DISCONNECT POWER BEFORE SERVICING

ALL phases of this installation must comply with NATIONAL, STATE AND LOCAL CODES

IMPORTANT- This Document is customer property and is to remain with this unit. Please return to service information pack upon completion of work.

Kit components:

WIRE HARNESS A342647P01 SCREW N193P1306B (qty. of 2) LIMIT SWITCH B342017P02 (qty. of 1) GASKET A341575P01 (qty. of 1)


• Application: All 90% downflow models

WARNING

- Disconnect power to the unit before removing the blower door. Failure to follow this warning could result in personal injury from moving parts.
- The cabinet must have an uninterrupted or unbroken ground according to National Electrical Code, ANSI/NFPA
 70 "latest edition" and Canadian Electrical Code, CSA C22.1 or local codes to minimize personal injury if an
 electrical fault should occur. A failure to follow this warning could result in an electrical shock, fire, injury, or
 death.
- This product can expose you to chemicals including lead, which are known to the State of California to case cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.


Removing the Existing Inducer Limit Switch:

- 1. Turn the thermostat to the off position.
- 2. Disconnect all electric power and shut off the gas supply to the furnace.
- 3. Remove the burner & blower door.
- 4. Disconnect the limit switch from the inducer housing. Discard the inducer switch and screws.

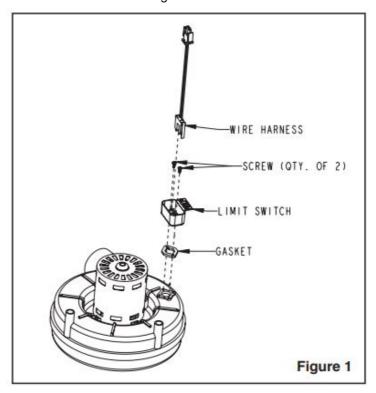

Installing the Inducer Limit Switch

- 1. Attach the gasket (A341575P01) to the base of the limit switch (B342017P02).
- 2. Attach the limit switch to the inducer housing using the enclosed screws (N193P1306B).
- 3. Attach the wire harness (A342647P01) to the limit switch (B342017P02).
- 4. Connect the wire harness (A342647P01) to the existing wire harness of the unit.
- 5. Reinstall the blower & burner door.
- 6. Reconnect all electric power and turn on the gas supply to the unit.

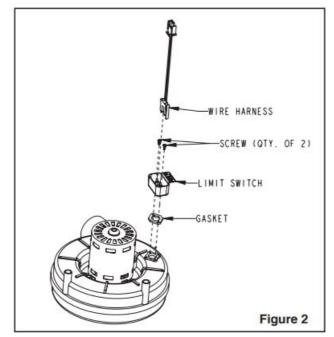

Verification of Proper Operation:

- 1. Place the thermostat in the heating mode.
- 2. Initiate a call for heat by raising the thermostat setting 5 degrees above the room temperature.
- 3. Observe the furnace: If properly wired, the following start-up sequence should be observed:
 - The red LED on the IFC should start a fast flash sequence.
 - The draft inducer should energize, and then the igniter should start to glow.
 - After the igniter heat up time has expired, the gas valve should be energized listen for the "click", the
 gas will then ignite.
 - After 45 seconds the main blower will turn on.

About Trane and American Standard Heating and Air Conditioning Trane and American Standard create comfortable, energy-efficient indoor environments for residential applications. For more information, please visit www.trane.com or www.americanstandardair.com

The manufacturer has a policy of continuous data improvement and it reserves the right to change design and specifications without notice. We are committed to using environmentally conscious print practices.

- 18-CH110D1-1A-EN 18 Apr 2023
- Supersedes X342695P01 (July 2005)

Documents / Resources



TRANE TECHNOLOGIES KIT13631 Inducer Limit Switch Kit [pdf] Installation Guide KIT13631 Inducer Limit Switch Kit, KIT13631, Inducer Limit Switch Kit, Limit Switch Kit, Switch Kit, Kit

References

- American Standard® | Air Conditioning and Heating | HVAC Systems
- **P65Warnings.ca.gov**
- Trane Heating & Air Conditioning

Manuals+,