


**X3964132001 SC Plus
System Controller**



TRANE X3964132001 SC Plus System Controller Instruction Manual

[Home](#) » [Trane](#) » TRANE X3964132001 SC Plus System Controller Instruction Manual 

Contents

- [1 TRANE X3964132001 SC Plus System Controller](#)
- [2 Product Usage Instructions](#)
- [3 FAQ](#)
- [4 Packaged Contents](#)
- [5 Specifications](#)
- [6 Wiring and Applying Power](#)
- [7 Service Parts](#)
- [8 Key software licenses](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)



TRANE X3964132001 SC Plus System Controller



Product Usage Instructions

Only qualified personnel should install and service the equipment. Follow all precautions in the literature and on the tags, stickers, and labels attached to the equipment.

- Hook the top half of the Tracer SC+ onto the DIN rail.
- Gently push on the lower half of the Tracer SC+ until the release clip snaps into place.
- All field wiring **MUST** be performed by qualified personnel to avoid FIRE and ELECTROCUTION hazards. Follow requirements for field wiring installation and grounding as described in NEC and your local/state/national electrical codes.
- Technicians must wear proper PPE to protect themselves from potential hazards. Follow precautions in the manual and on tags, stickers, and labels.
- Release tension on the slotted release clip using a screwdriver or by hand.
- Lift the Tracer SC+ upward to remove or reposition.
- If repositioning, push on the Tracer SC+ until the slotted release clip snaps back into place.

FAQ

- **Q:** What should I do if I encounter a potentially hazardous situation?
- **A:** If you encounter a potentially hazardous situation, stop immediately and seek assistance from qualified personnel. Do not attempt to resolve the issue yourself.
- **Q:** Can I use a different power supply module with the product?
- **A:** It is recommended to use the specified PM014 power supply module for optimal performance and safety. The use of other power supply modules may void the warranty and pose risks.

Packaged Contents

- One (1) Tracer® SC+ module
- Two (2) 4-position terminal block plugs
- Six (6) 3-position terminal block plugs
- One (1) Installation sheet

SAFETY WARNING

Only qualified personnel should install and service the equipment. The installation, starting up, and servicing of heating, ventilating, and air-conditioning equipment can be hazardous and require specific knowledge and training. Improperly installed, adjusted or altered equipment by an unqualified person could result in death or serious injury. When working on the equipment, observe all precautions in the literature and on the tags, stickers, and labels that are attached to the equipment.

Warnings, Cautions, and Notices

Read this manual thoroughly before operating or servicing this unit. Safety advisories appear throughout this manual as required. Your safety and the proper operation of this machine depends upon the strict observance of these precautions.

The three types of advisories are defined as follows:

WARNING Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

It could also be used to alert against unsafe practices.

NOTICE Indicates a situation that could result in equipment or property damage only accidents.

Important Environmental Concerns

Scientific research has shown that certain man-made chemicals can affect the earth's naturally occurring stratospheric ozone layer when released to the atmosphere. In particular, several of the identified chemicals that may affect the ozone layer are refrigerants that contain Chlorine, Fluorine, and Carbon (CFCs) and those containing Hydrogen, Chlorine, Fluorine and Carbon (HCFCs). Not all refrigerants containing these compounds have the same potential impact to the environment. Trane advocates the responsible handling of all refrigerants.

Important Responsible Refrigerant Practices

Trane believes that responsible refrigerant practices are important to the environment, our customers, and the air conditioning industry. All technicians who handle refrigerants must be certified according to local rules. For the USA, the Federal Clean Air Act (Section 608) sets forth the requirements for handling, reclaiming, recovering and recycling of certain refrigerants and the equipment that is used in these service procedures. In addition, some states or municipalities may have additional requirements that must also be adhered to for responsible management of refrigerants. Know the applicable laws and follow them.

WARNING

Proper Field Wiring and Grounding Required!

Failure to follow the code could result in death or serious injury. All field wiring **MUST** be performed by qualified personnel. Improperly installed and grounded field wiring poses **FIRE** and **ELECTROCUTION** hazards. To avoid these hazards, you **MUST** follow requirements for field wiring installation and grounding as described in NEC and your local/state/national electrical codes.

WARNING

Personal Protective Equipment (PPE) Required!

Failure to wear proper PPE for the job being undertaken could result in death or serious injury. Technicians, to protect themselves from potential electrical, mechanical, and chemical hazards, **MUST** follow precautions in this manual and on the tags, stickers, and labels, as well as the instructions below:

- Before installing/servicing this unit, technicians **MUST** put on all PPE required for the work being undertaken (Examples; cut-resistant gloves/sleeves, butyl gloves, safety glasses, hard hat/bump cap, fall protection, electrical PPE and arc flash clothing).
- **ALWAYS** refer to appropriate Safety Data Sheets (SDS) and OSHA guidelines for proper PPE.
- When working with or around hazardous chemicals, **ALWAYS** refer to the appropriate SDS and OSHA/GHS (Global Harmonized System of Classification and Labeling of Chemicals) guidelines for information on allowable personal exposure levels, proper respiratory protection, and handling instructions.

- If there is a risk of energized electrical contact, arc, or flash, technicians MUST put on all PPE under OSHA, NFPA 70E, or other country-specific requirements for arc flash protection, before servicing the unit.
- NEVER PERFORM ANY SWITCHING, DISCONNECTING, OR VOLTAGE TESTING WITHOUT PROPER ELECTRICAL PPE AND ARC FLASH CLOTHING. ENSURE ELECTRICAL METERS AND EQUIPMENT ARE PROPERLY RATED FOR INTENDED VOLTAGE.

WARNING

Follow EHS Policies!

- Failure to follow the instructions below could result in death or serious injury.
- All Trane personnel must follow the company's Environmental, Health and Safety (EHS) policies when performing work such as hot work, electrical, fall protection, lockout/tagout, refrigerant handling, etc. Where local regulations are more stringent than these policies, those regulations supersede these policies.
- Non-rane personnel should always follow local regulations.

NOTICE

Risk of Battery Exploding!

Failure to follow the instructions below could cause the battery to explode resulting in equipment damage. Do NOT use a non-compatible battery with the controller! A compatible battery must be used.

Copyright

This document and the information in it are the property of Trane, and may not be used or reproduced in whole or in part without written permission. Trane reserves the right to revise this publication at any time, and to make changes to its content without obligation to notify any person of such revision or change.

Trademarks

All trademarks referenced in this document are the trademarks of their respective owners.

Revision History

- Updated Tracer SC+ specifications table.
- Updated 24 Vdc current draw per component on an SC+ table.
- Updated USB port current draw table.
- Added Isolated Comm 3 Module CM3I information in the Accessories table.

Note: Compatible battery – BR2032.

Required Tools

- 5/16 in. (8 mm) slotted screwdriver
- 1/8 in. (3 mm) slotted screwdriver

Specifications

Table 1. Tracer® SC+ specifications

Power Requirements	
24 Vac @ 30 VA Class 2	
Tracer® plug-in power supply with single barrel connector- Output: 0.75A max at 24 Vdc @ 50C. Polarity: outer ground, inner 24 Vdc	
PM014 power supply module through inter-module-communication bus (IMC) – Output: 1.4A max @ 24 Vdc @ 70C	
Min/Max Ratings 24VAC +/- 15%, 24VDC +/- 10%	
Storage	
Temperature:	-40°C to 70°C (-40°F to 158°F)
Relative humidity:	Between 5% to 95% (non-condensing)
Operating Environment	
Temperature:	<p>-40°C to 70°C (-40°F to 158°F) when powered with 24Vdc and maximum USB current draw of 500 mA.</p> <p>-40°C to 50°C (-40°F to 122°F) with a maximum USB current draw of 1000 mA for all other configurations.</p>
Operating Environment	
Humidity:	Between 10% to 90% (non-condensing)
Product weight:	1 kg (2.2 lb.)
Altitude:	Maximum 2,000 m (6,500 ft.)
Installation:	Category 3
Pollution	Degree 2


Mounting the Tracer SC+

- The mounting location must meet the temperature and humidity specifications as outlined in Table 1.
- Do not mount on a flat surface, such as on a floor or top of a table. Mount in an upright position with the front facing outward.

To mount the Tracer® SC+:

1. Hook the top half of the Tracer SC+ onto the DIN rail.
2. Gently push on the lower half of the Tracer SC+ until the release clip snaps into place.

Figure 1. Mounting the Tracer® SC+

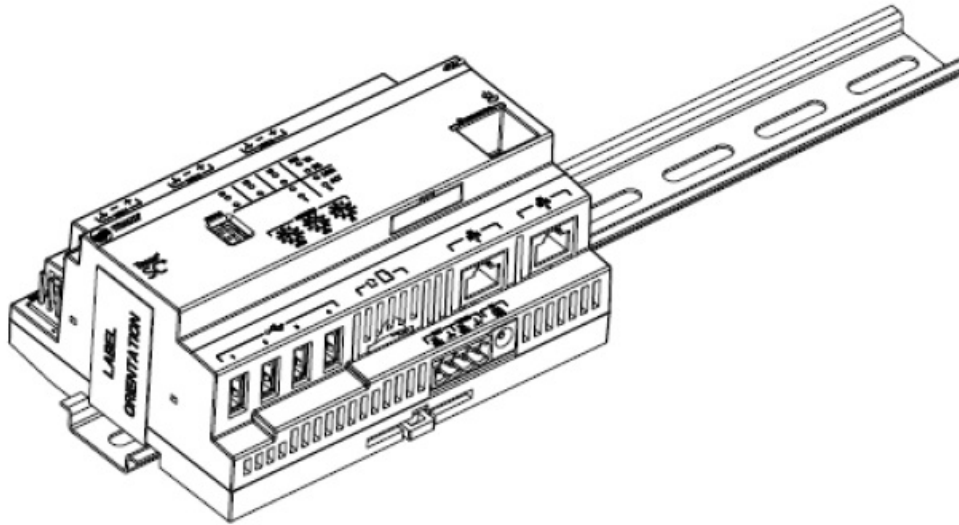


Removing or Repositioning the Tracer® SC+

To remove or reposition the Tracer® SC+ from a DIN rail:

1. Insert a screwdriver into the slotted release clip and gently pry upward on the clip with the screwdriver, OR;
If the screwdriver fits the slot size, insert the screwdriver into the slotted release clip and rotate it to the left or right to release tension on the clip.
2. While holding tension on the slotted release clip, lift the Tracer SC+ upward to remove or reposition.
3. If repositioning, push on the Tracer SC+ until the slotted release clip snaps back into place.

Figure 2. Removing the Tracer® SC+

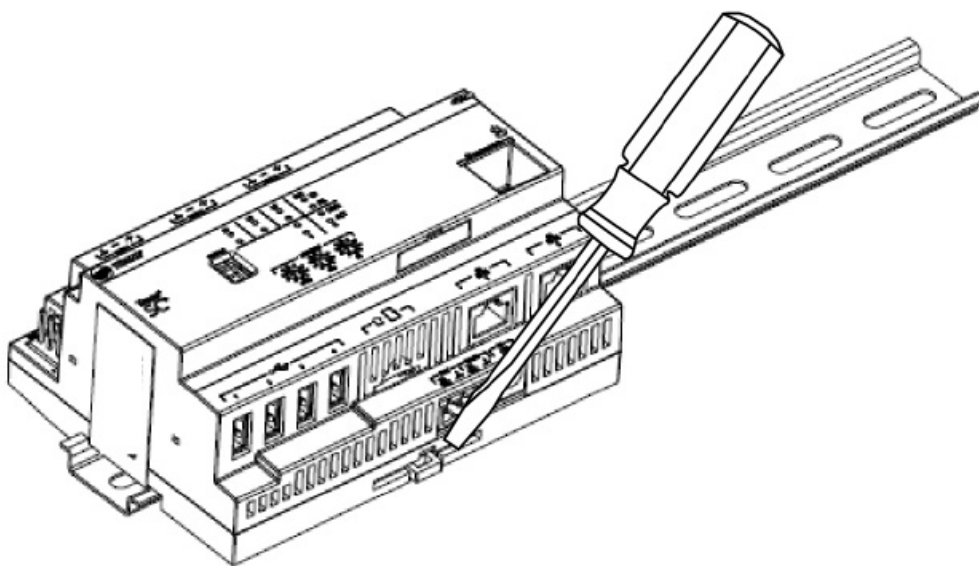

Wiring and Applying Power

The Tracer® SC+ controller can be powered in one of three ways:

- 24 Vac @ 30 VA Class 2 connected to the 4-position terminal block.
- Tracer® plug-in power supply with single barrel connector.
- Output: 0.75 A max at 24 Vdc @ 50 C. Polarity: outer ground, inner 24Vdc
- PM014 power supply module through an inter-module-communication bus(IMC).
- Output: 1.4A max @ 24 Vdc @ 70C. See Power Supply Module PM014 Installation, Operation, and Maintenance (BAS-SVX33*-EN).

Direct Current Requirements for SC+ and Peripherals

Tracer® SC+ output is 24 Vdc. Table 2 provides the current draw per component for DC power budgeting.

Table 2. 24 Vdc current draws per component on an SC+

Component	Current draw
SC+ Controller	150 mA
WCI	10 mA
XM30	120 mA
XM32	100 mA

Table 3. USB port current draw

Component	5 Vdc Current draw	24 Vdc Current draw
Each USB Port	500 mA Max	125 mA
Trane Wi-Fi Module (X13651743001)	250 mA	63 mA
Trane U60 LON Adapter	110 mA	28 mA
Trane USB Cellular Module (Version, USA)	500 mA	125 mA
Trane Isolated Comm 3 Module CM3I (X13651812001)	50 mA	13 mA

Tracer® SC+ DC Power Budget

Depending on the power source, Tracer® SC+ has a maximum current available for peripheral devices. Perform a power budget if you have more than 3 external devices connected through the IMC.

AC powered

- The preferred power method is to provide 24 Vac from a transformer.
- Using the values from Table 2, add together the current draw for all the components connected to the SC+. If the sum exceeds 600mA, use a PM014 module or a plug-in power supply.

Tracer® plug-in power supply

- Using the values from Table 2, add together the current draw for all the components connected to the SC+. The sum cannot exceed 0.75A. If the sum exceeds 750mA, use a PM014 module.

PM014 powered

- Using the values from Table 2, add together the power draw for all the components connected to the SC+. The sum cannot exceed the 1.4A.

Transformer (Preferred Method)

This procedure involves wiring 24Vac to the XFMR pins of the 4-position terminal block on the Tracer® SC+ controller. See Figure 3 for details.

1. Using the provided 4-position terminal block, wire the 24 Vac input connection of the Tracer SC+ to a dedicated 24 Vac, Class 2 transformer.
2. Ensure that the Tracer SC+ is properly grounded.

Important: This device must be grounded for proper operation! The factory-supplied ground wire must be connected from any chassis ground connection on the device to an appropriate earth ground. The chassis ground connection can be the 24 Vac transformer input at the device, or any other chassis ground connection on the device.

Note: The Tracer SC+ is NOT grounded through the DIN rail connection.

3. Apply power to the Tracer SC+ by pressing the power button. All status LEDs illuminate and the following sequence flashes on the 7-segment display: 8, 7, 5, 4, L, dancing dash pattern. The dancing dashes continue while the Tracer SC+ is operating normally.

Tracer® Plug-in Power Supply with Single Barrel Connector

1. Connect the power supply to a standard power receptacle, such as a wall outlet.
2. Connect the barrel end of the power supply to the 24 Vdc input of the Tracer® SC+.
3. Ensure that the Tracer SC+ is properly grounded.

Important: This device must be grounded for proper operation! The factory-supplied ground wire must be connected from any chassis ground connection on the device to an appropriate earth ground.

Note: The Trace SC+ is NOT grounded through the DIN rail connection.

4. Apply power to the Tracer SC+ by pressing the power button. All status LEDs illuminate and the following sequence flashes on the 7-segment display: 8, 7, 5, 4, L, dancing dash pattern. The dancing dashes continue while the Tracer SC+ is operating normally.

PM014 Power Supply Module through IMC Bus

This procedure involves connecting the SC+ to the PM014 power supply using an IMC cable. See Figure 4 for details.

Note: For complete instructions and more information, refer to the Power Supply Module PM014 Installation, Operation, and Maintenance (BAS-SVX33*-EN).

1. Connect one end of the provided IMC power cable to the IMC connection on the Tracer® SC+. Connect the other end of the IMC power cable to the IMC connection on the power supply module.

2. Wire the 24 Vac input connection on the PM014 power supply to a dedicated Class 2 transformer.
3. Ensure that the Tracer SC+ and the PM014 power supply are properly grounded through the DIN rail connection.

Important: This device must be grounded for proper operation! The factory supplied ground wire must be connected from any chassis ground connection on the device to an appropriate earth ground. The chassis ground connection can be the 24 Vac transformer input at the device or any other chassis ground connection on the device.

Note: The Tracer SC+ is NOT grounded through the DIN rail connection.

4. Apply power to the Tracer® SC+ by pressing the power button. All status LEDs illuminate and the following sequence flashes on the 7-segment display: 8, 7, 5, 4, L, dancing dash pattern. The dancing dashes continue while the Tracer® SC+ is operating normally.

Figure 3. Apply power using a class 2 transformer


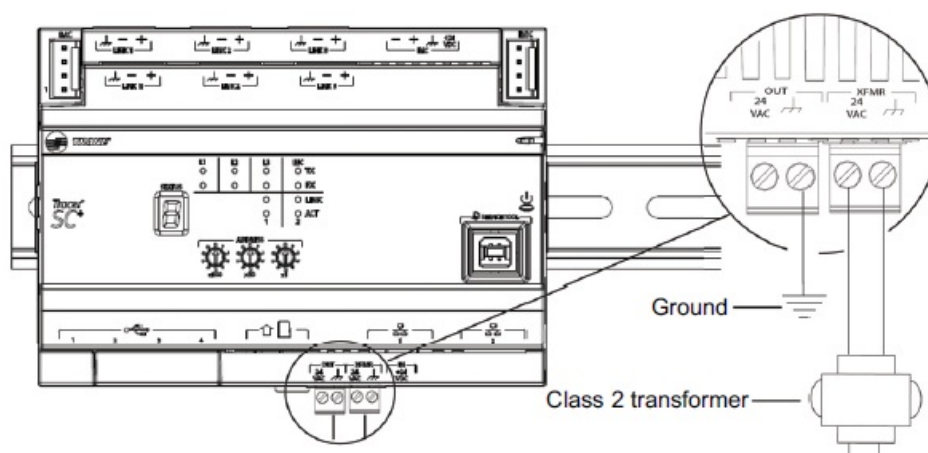


Figure 4. Apply power using a PM014 power supply module

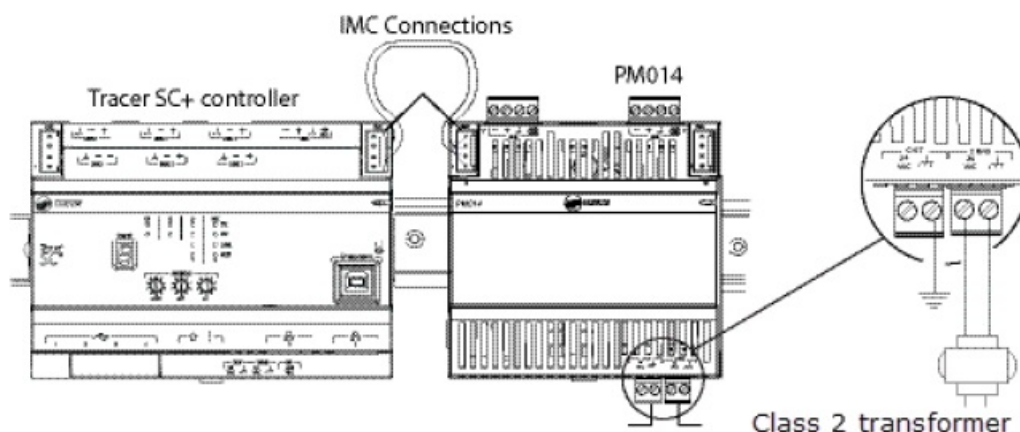

Service Parts

Table 4. Hardware and bundles

Service Part #	Part Number	Description
KIT18461(a)	X13651695001	Tracer® SC+ Hardware

- Includes 18 months software maintenance plan.

Table 5. Accessories

Service Part #	Part Number	Description
MOD01702	X13651538010	PM014 24 Vac to 1.4A 24 Vdc
PLU1323	X13770352001	Plug-in Power Supply
KIT18458	X13651698001	Tracer® USB Lon Module
MOD01786	X1365152401	Trane BACnet Terminator (TBT)
MOD03121	X13651743001, 2	Tracer® USB Wifi Module
KIT18459	X13690281001	Micro SD Card
N/A	X13651812001	Isolated Comm 3 Module CM3I
N/A	BMCL100US0100000	Tracer® USB Cellular Module, NB, 1M Cable
N/A	BMCL100USB100000	Tracer® USB Cellular Module, 1M Cable
N/A	BMCL100USB290000	Tracer® USB Cellular Module, 2.9M Cable

Table 6. Enclosures

Service Part #	Part Number	Description
N/A	X13651559010	Medium Enclosure (120 Vac, 1 outlet)
N/A	X13651699001	Medium Enclosure (120 Vac, 3 outlet)
N/A	X13651560010	Medium Enclosure (230 Vac, 0 outlet)

Key software licenses

Table 7. Key software licenses


Service Part #	Part Number	Description
N/A	BMCF000AAA0DB00	15 Dev Core App License
N/A	BMCF000AAA0BH00	CPC App License
N/A	BMCF000AAA0DA00	240 Dev Demo License
N/A	BMCF000AAA0EA00	1 Year SMP
N/A	BMCF000AAA0EB00	3 Year SMP
N/A	BMCF000AAA0EC00	5 Year SMP
N/A	BMCF000AAA0ED00	Expired SMP

Tracer BACnet Terminator

A Tracer® BACnet® terminator is placed at the end of each communication link to decrease communication signal degradation.

Refer to the BACnet® MS/TP Wiring and Link Performance Best Practices and Troubleshooting Installation, Operation, and Maintenance (BAS-SVX51*-EN).

Figure 5. BACnet terminator (wiring)

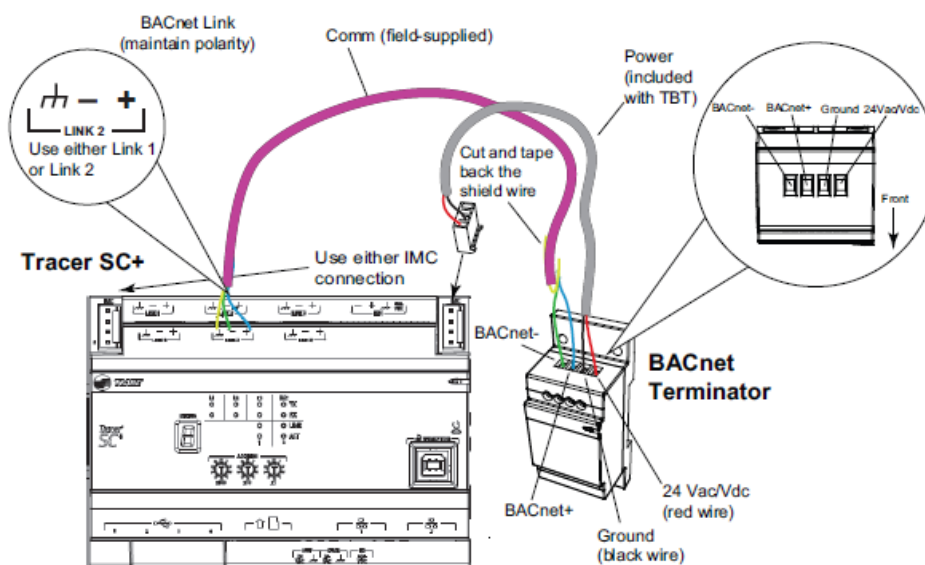

Agency Listings and Compliance

The European Union (EU) Declaration of Conformity is available from your local Trane® office.

Trane – by Trane Technologies (NYSE: TT), a global climate innovator – creates comfortable, energy-efficient indoor environments for commercial and residential applications. For more information, please visit trane.com or tranetechnologies.com. Trane and American Standard create comfortable, energy Trane Trane and American Standard have a policy of continuous product and product data improvement and reserve the right to change design and specifications without notice. We are committed to using environmentally conscious print practices.

BAS-SVN037E-EN 30 Jun 2024

Supersedes BAS-SVN037D-EN (May 2023)

Documents / Resources



[TRANE X3964132001 SC Plus System Controller](#) [pdf] Instruction Manual
BAYECON089A, BAYECON090A, X3964132001 SC Plus System Controller, X3964132001, SC
Plus System Controller, System Controller, Controller

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.