



Transcend MiniCPAP Software V1.0.10 Instructions

[Home](#) » [Transcend](#) » Transcend MiniCPAP Software V1.0.10 Instructions 

Contents

- [1 Instructions to Install MiniCPAP Software](#)
- [2 Drivers Install Instructions](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

Instructions to Install MiniCPAP Software

1. Go to <https://transcend.minicpapsoftware.com>
2. Click Software Installer

The following prerequisites are required:

- Windows Installer 4.5
- Microsoft .NET Framework 4 (x86 and x64)
- VCP Driver for communicating with your CPAP [Click Here to Install](#)

 
If these components are already installed, you can [launch](#) the application now. Otherwise, click the button below to install the prerequisites and run the application.

[Software Installer](#)

If your install does not work, please try the alternate install: [install via setup.exe](#)

[Somnetics Customer Support](#) :: [ClickOnce and .NET Framework Resources](#)

3. It will download the MiniCPAP Application

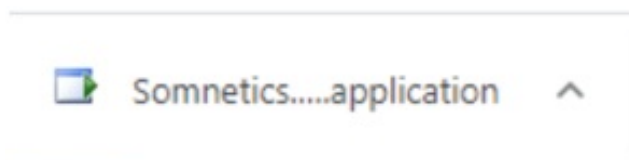


4. Click the downloaded file to begin install (if you do not see it on the lower bar, go to your downloads folder and double click it)

5. Follow the prompts to install the software (choose yes, next, finish as needed)
6. Your computer should automatically restart (if not, restart it)
7. Once your computer is restarted, click on the MiniCPAP icon to open the software (if you do not see it on the desktop, you can use the search in the lower left, just type MiniCPAP)



 8. If prompted, selected Run

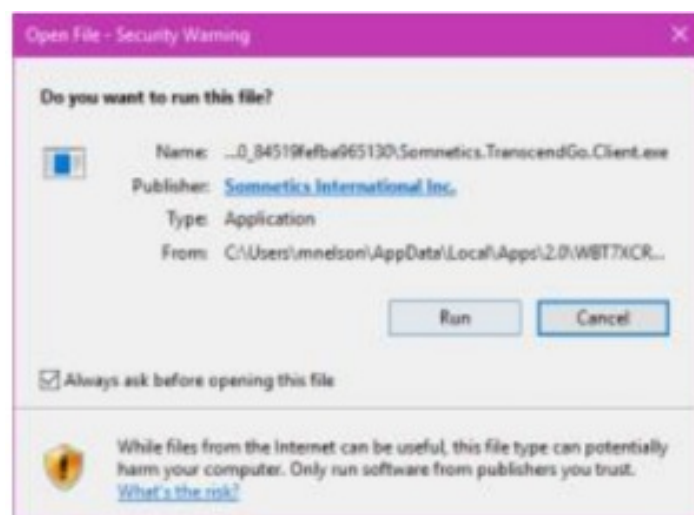

9. Plug your CPAP device into power (wall outlet) and the PC using the USB cable
10. The boxes in the software should become colored, if they do not follow the driver steps below.



Drivers Install Instructions

Prior to installing the driver make sure that the CPAP is unplugged from the computer

1. You will only need to do these steps, if the boxes do not become colored when plugging in your CPAP

2. Go to <https://www.silabs.com/developers/usb-to-uart-bridge-vcp-drivers>


3. On this page you'll select downloads



The screenshot shows the 'Downloads' tab of the Silicon Labs VCP Drivers page. It includes a navigation bar with 'OVERVIEW', 'DOWNLOADS', 'FAQ/FAQS', and 'COMMUNITY & SUPPORT'. The main heading is 'VCP Drivers Features and Benefits'. The text explains that CP210x USB to UART bridge virtual COM Port (VCP) drivers are required for device operation as a virtual COM Port to facilitate host communication with CP210x products. It also mentions that these devices can also interface to a host using the direct board driver. A note states that the CP210x Manufacturing DLL and Runtime DLL have been updated and must be used with v10.0 and later of the CP210x Windows VCP Driver. Application Note Software downloads affected are AN1144SW.zip, AN202SW.zip, and AN122SW.zip. If you are using a 5.x driver and need support, you can download Legacy OS Software.


4. Download the CP210x Universal Windows Driver by clicking on it

Software • 10

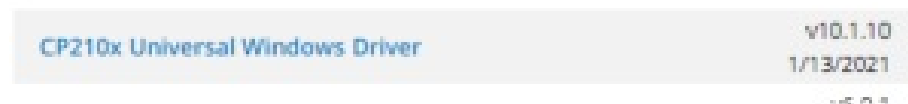


The screenshot shows a button for the 'CP210x Universal Windows Driver' with the version 'v10.1.10' and the date '1/13/2021'. There are also icons for download, share, and other actions.

 
5. Go to your downloads folder and double click on the file



 
6. Click Extract All

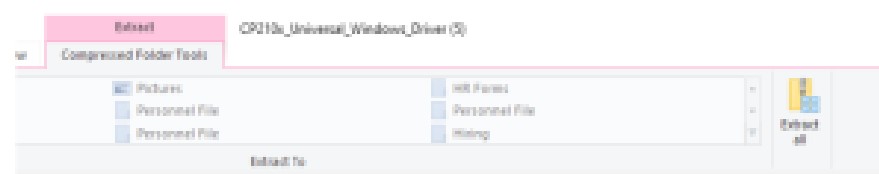

 7. Leave the default folder and click extract

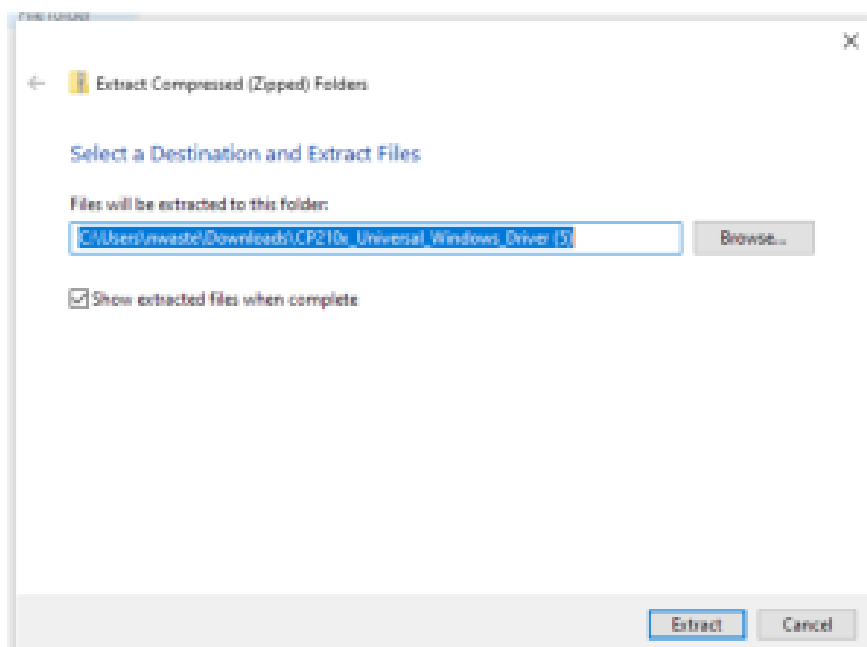

 8. It will open a new folder, double click the driver installer for your computer (most likely _x64) and follow the prompts to install the driver



9. Once completed it will say driver installed successfully




10. Reset the computer, open the MiniCPAP software and plug in the device

11. The boxes should turn colors, if they remain gray, reinstall the driver, reset the computer and try again

12. Contact customer service at support@phoenixsleepsolutions.com if you have any issues or questions.

Documents / Resources

	<p>Transcend MiniCPAP Software V1.0.10 [pdf] Instructions</p> <p>MiniCPAP Software V1.0.10</p>
---	--