TRANSFORMERS TF-Y17 Bluetooth Speaker



## **TRANSFORMERS TF-Y17 Bluetooth Speaker Instruction Manual**

Home » TRANSFORMERS » TRANSFORMERS TF-Y17 Bluetooth Speaker Instruction Manual



#### **Contents**

- 1 TRANSFORMERS TF-Y17 Bluetooth Speaker
- **2 Product Usage Instructions**
- 3 Packing list
- 4 Product specification
- 5 Keys and functions
- **6 Product operation instructions**
- 7 Common problems and solutions
- 8 The name and content of harmful substances in the earbuds
- 9 Warranty Service
- 10 FCC
- 11 Documents / Resources
  - 11.1 References
- 12 Related Posts

# TRANSFORMERS

**TRANSFORMERS TF-Y17 Bluetooth Speaker** 



## **Product Specifications**

Effective distance: 10MHorn diameter: 45mm

• Impedance: 4

• Signal to noise ratio: 83dB

• Distortion: 5%

• Frequency response: 20Hz-10KHz

• Rated input: 5V 500mA

• Rated capacity of lithium battery: 1200mAh

• Rated power: 3W

Charging time: approximately 3 hoursUsage time: approximately 8 hours

## **Product Usage Instructions**

## **Tips for Product Usage:**

- 1. Do not disassemble or replace any parts.
- 2. Avoid water contact as the product is not waterproof.
- 3. Disconnect if liquid enters the product accidentally.
- 4. Avoid using near heat or fire sources.
- 5. Avoid strong electromagnetic environments.

## **Keys and Functions:**

- Function indicator light:
  - Long press: 2-4 seconds to turn on/off.
  - Click: Play/Pause; Long press: TWS pairing/disconnection;
  - Click: Answer/End call (in call mode); Long press: reject phone calls; Double click: Callback call.
  - Click: Volume increase; Long press: Next song.
  - Click: Volume decrease; Long press: Previous song.

- Click: Mode switch BT-TF.
- · Charging indicator light
- · TF card slot
- Type-C charging port

## **Product Operation Instructions:**


- 1. **BT use method:** Press and hold the key for about 3 seconds to power on. Follow the BT pairing instructions.
- 2. Indicator status: Check the different indicator light statuses for BT mode, pairing, and charging.


#### **FAQ - Common Problems and Solutions**

- Problem: Failed to pair multiple connections
- Solution: Turn off the speaker, restart, or check for password requirement (0000).
- Problem: The music plays staccato
- **Solution:** Ensure the connection distance is within range without obstacles.
- Problem: Play without sound / Unable to boot / The power light is off
- **Solution:** Check battery level, charge if needed, and restart the speaker.

TF-Y17 QC: Instruction manual

## **Packing list**

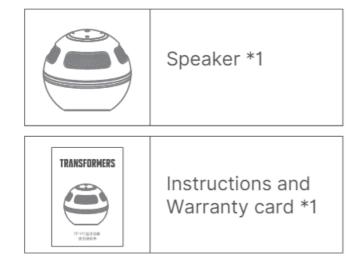

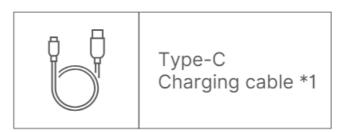

## **Product specification**

Effective distance: ≥ 10M
Horn diameter: φ 45mm

Impedance: 4 Ω

Signal to noise ratio: ≥ 83dB

• Distortion: ≤ 5%

• Frequency response: 20Hz-10KHz

• Rated input: 5V 500mA

Rated capacity of lithium battery: 1200mAh

· Rated power: 3W


Charging time: approximately 3 hours

· Usage time: approximately 8 hours

#### **Tips**

- 1. Except for the operation methods specifically marked in the manual, please do not try to disassemble or replace any parts in the earbuds.
- 2. Don't put the earbuds in the water or any others liquid. The earbuds are not waterproof.
- 3. If any liquid enters the product by accidentally, please disconnect and remove the connection immediately.
- 4. Please make sure that there is no water on your hands when Installing or uninstalling the product to avoid electric shock.
- 5. Do not put the product near by the heat source or expose it to the fire source directly.
- 6. Do not put the product in the environment with strong electromagnetic force, otherwise it will cause product malfunction.

## Keys and functions

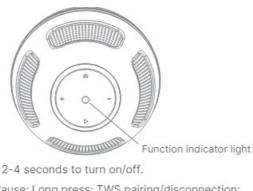

Long press: 2-4 seconds to turn on/off.


Click: Play/Pause; Long press: TWS pairing/disconnection;

Click: Answer/End call (in call mode); Long press: reject phone calls; Double click: Callback call.

Click: Volume increase; Long press: Next song.

Click: Volume decrease; Long press: Previous song.

Click: Mode switch BT-TF. Charging indicator light

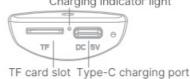

**Power off:** When the speaker is not in use, long press the "U" key to power off to prevent power loss. Low power alarm and automatic shutdown function: when the battery power is less than 10%, the speaker will sound a prompt tone, and the speaker should be charged in time, when the power is less than 3%, the machine will automatically shut down.

## **Product operation instructions**

#### 1. BT use method

• Press and hold the "" key for about 3 seconds to power on. The prompt sound will sound and the blue light will flash quickly. Open BT device Settings, search for Bluetooth connection

name "TF-Y17" and click Connect, Bluetooth connection success prompt sound, blue light long on; When you use the speaker again, turn on the BT between the speaker and the smart device, and it will automatically connect back.

• BT automatic connection function: After successful BT connection, when the effective distance is exceeded, it will be automatically disconnected, and after returning to the effective distance, the BT speaker and smart device will be automatically connected.

#### 2. Indicator status

- BT mode: Connected state, the blue light is on for a long time, and the blue light blinks slowly when playing music.
- · Pairing status: The blue indicator blinks quickly.
- Charging indicator: charging red light on, full red light off.

## **Common problems and solutions**

breakdown	solution		
Failed to pair multiple connections	Turn off the speaker and restart it or require password: 0000		
The music plays staccato	Whether the connection distance is out of range or there is an obstacle between the speaker and the phone		
Play without sound	Check that the speaker is at its lowest		
Unable to boot	Check whether the built-in battery of the speaker is charged		
The power light is off	Check that the charging port is plugged in		

#### The name and content of harmful substances in the earbuds

Part Names	Harmful Substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Printed circuit assembly	0	0	0	0	0	0
Small structural parts such as shell	0	0	0	0	0	0

- This form is compiled in accordance with SJ/T 11364
- O: Indicates that the content of the hazardous substance in all homogeneous materials of the part is in below the limit required by
- GB/T 26572.

- X: Indicates that the hazardous substance at least in a certain homogeneous material of the part exceeds The limit requirements specified in GB/T 26572.
- The parts marked with "X" on the form are all harmful due to the limitations of global technological development. Substitution of substances
- Printed circuit board components:
   Including printed circuit boards and their parts, electronic components, etc. and depending on the product model, the earbuds you purchased may not contain all the above components.
- Does not contain 6 kinds of toxic and harmful substances or contains but is less than the limit
  value, the letter "e" stands for the English letter electronic; The initials of electrical and environment; The curved
  arrows around it indicate recyclability.



#### **Disclaimer**

- This user manual does not have any form of guarantee, position expression or other implication, The
  mentioned products, specifications and information are for reference only, and the content will also be updated
  on the web at any time without additional separate notice
- · Warranty statement:
- The product attached to this document is guaranteed as follows: the product is twelve (12) months from the date of purchase("Warranty Period"),under normal conditions of use due to quality defects damaged, can be repaired. Free repair; free replacement if the manufacturer confirms that it cannot be repaired; repaired or replaced product. Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days). Purchased by sale the ticket date shall prevail; if the purchase date cannot be determined, the warranty period shall be 13(13) months
- If you apply for a warranty, please call the product service hotline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete nod clearly filled out valid sales invoice.

The above guarantee does not apply to the following situations:

- 1. Exceeding the validity period of the three packs:
- 2. Altering the warranty card and product code does not match the product body.
- Causes caused by misuse, abuse or improper transportation, use, maintenance or storage obstacles or damage;
- 4. Failure or damage caused by force majeure (such as earthquake, war, disaster, etc.) or accident bad;
- 5. The zipper and tower buckle are damaged due to excessive force;
- 6. Disconnection or tearing caused by excessive load;

- 7. Any damage caused by sharp objects;
- 8. Products with signs of burning of flooding;
- 9. Damage caused by unauthorized disassembly;
- 10. Aging, discoloration, abrasion, rupture and other losses that occur during the normal use of the product.
- 11. If the original identification label of the product is changed or damaged, this guarantee will become invalid.

The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee. You should check on the spot and raise objections to any discrepancies.

The above guarantees are all guarantees we make regarding the products, and are only applicable in mainland China. Nothing in this document affects consumer rights that cannot be excluded or restricted under the law profit. **Service supervision hotline**: 400-885-8808

## **Warranty Service**

Dear user, this warranty card is the proof of your future warranty application, please cooperate with the seller to fill it out and keep it for future use!

User into						
User name		Email				
Contact number		Postal code				
Mailing address						
Product infor	mation					
Product name		Product number				
Product barcode / Serial number / Batch number						
Vendor information						
Name						
Address						
Contact number		Postal code				
Sales date		Invoice number				
Remark						



#### **FCC**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

- If this equipment does cause harmful interference e to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different f rom that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

#### **Documents / Resources**

FESHER-F

TRANSFORMERS TF-Y17 Bluetooth Speaker [pdf] Instruction Manual 2BAQF-TF-Y17, 2BAQFTFY17, TF-Y17 Bluetooth Speaker, TF-Y17, Bluetooth Speaker, TF-Y17 Speaker, Speaker

#### References

User Manual

Manuals+, Privacy Policy