

Transmitter SOLUTIONS i-WR Spider Controllers User Manual

Home » Transmitter SOLUTIONS » Transmitter SOLUTIONS i-WR Spider Controllers User Manual

Contents

- 1 Transmitter SOLUTIONS i-WR Spider
- **Controllers**
- **2 Product Usage Instructions**
- 3 FAQ
- **4 Product Description**
- **5 Key Benefits**
- **6 Various PAL Spider Models**
- 7 Spider Wiegand 26
- 8 Spider i-WR
- 9 Spider B-WR
- 10 wiring connection
- 11 Product Specifications
- **12 Contact Ratings**
- 13 PalGate App
- 14 Documents / Resources
 - 14.1 References



Transmitter SOLUTIONS i-WR Spider Controllers



Specifications:

• Product Name: Spider Controllers

· Network: 4G

· Connectivity: Bluetooth

· Control Options: Dedicated application, Web interface

• Integration: Electric gates, doors, lighting systems, appliances

Product Description:

The Spider Systems IoT units are 4G network-based systems, enhanced with Bluetooth for access and management control. Users can control the unit via a dedicated application or an easy-to-use web interface. It seamlessly integrates with electric gates, doors, lighting systems, or other appliances for remote control and management.

Key Benefits:

- · Control via application or web interface
- · Integration with various systems
- · Remote management capabilities

Product Usage Instructions

Spider i-WR:

• Output Relays: 1 (N.O./N.C.)

• Control: IOS & Android application, Web interface

· User Definition: Nearby only or unlimited distance

• Features: Excel import/export, schedule management control, supports smart remote control & wireless vehicle

detector

• Max Users: 10,000

• Size & Weight: 3.3 x 2.3 x .87 in., 3.06 oz

FAQ

- Q: How do I know if the system is booting?
 - A: The SIM/Network LED will fast flash.
- Q: What does it mean if the LEDs are flashing slowly?
 - A: The module is searching for a cellular network.

Product Description

The Spider Systems IoT units are 4G network-based systems, enhanced with Bluetooth for access and management control. Through on-board relays, users can control the unit via either a dedicated application or an easy-to-use web interface. This device seamlessly integrates with electric gates, doors, lighting systems, or any other appliance that would benefit from remote control and management.


Key Benefits

- Remote Access Complete and secure control of the unit anytime, and from anywhere.
- Peace of mind Ensures access even during rare cellular network downtimes.
- "Nearby only" Feature Allows specific users to operate the unit only when in proximity, "Nearby only" feature.
- Automatic opening PalGate App can operate the gate automatically when arriving at the gate by car, this
 feature will work only when the PalGate app is connected to a vehicle's multimedia system via Bluetooth.
- Compact Size The unit has a small footprint, measuring just 80X53 mm.
- Management and control using the free "PalGate" App and an easy to use management WEB portal.
- Visual Indicators Features 4 LED lights (1 to indicate that the SIM is active and 3 to indicate reception strength).
- Customizable Access Ability to set up multiple administrators and authorized users for tailored access and control.
- Real-time notifications Receive instant email or push notifications to the PalGate App.
- Voice Control Voice-controlled operation via Siri or Google Assistant.
- Customization Ability to set timers, events, astronomic clocks and more.
- User Management Easily import and export data using Excel. Programmable relay pulse width

Various PAL Spider Models

Model	Spider i-WR	Spider B-WR	Spider - Wiegand 26
	TRUE WE PAL	STEER PARE	THE STATE OF THE S
Control with application IOS & Android	>	>	✓
Control by WEB interface	~	>	✓
User definition Nearby only or unlimited distance	~	>	*
Excel import/export	✓	>	~
Schedule management control	~	>	>
Supports smart remote control & wireless vehicle detector	10,000	10,000	10,000
Output (N.O/N.C)	1	2	1
Input (N.O/N.C)	1	2	1
Max users	20,000	20,000	20,000
Wiegand 26-bit reader	-	-	~
Size and Weight of package	3.3 x 2.3 x .87 in. 3.06 oz	3.3 x 2.3 x .87 in. 3.06 oz	3.3 x 2.3 x .87 in. 3.06 oz
Part Number	PALSPREC-101I	PALSPREC-20	PALSPRECWIE

Spider Wiegand 26

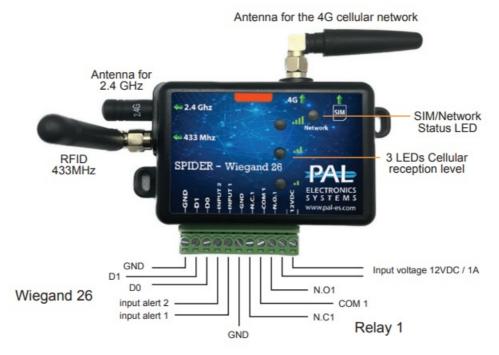


- 1 output relays (N.O./N.C.)
- 2 input channels with real- time notifications to Email and push to PalGate App


All PAL units have the following features:

- Unlimited PAL Gate App Users
- Multiple opening methods: Proximity, App, Dialing, Siri, and Google Assistant
- Wireless receiver 433Mhz
- · Allows customization of opening distance
- Manage with a free application or user-friendly web interface*
- API integration available*
- · Provides unlimited logs*
- · Features timers and event scheduling
- Equipped with a programmable astronomical clock
- · Capability to import and export data via Excel files
- · Adjustable relay pulse width
- · Compatible with 4G networks
- · Operates on an input voltage of 12VDC
- Compact dimensions: 53×80 mm

Spider i-WR

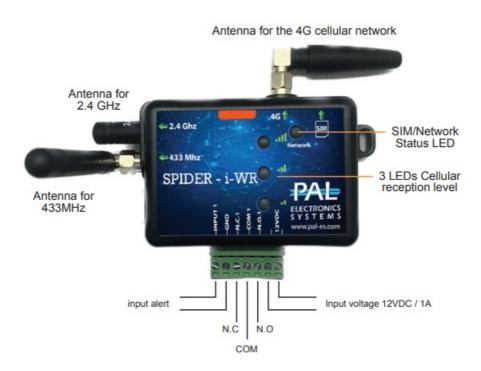

- 1 output relays (N.O./N.C.)
- 1 input channels with real-time notifications to Email and push to PalGate Ap

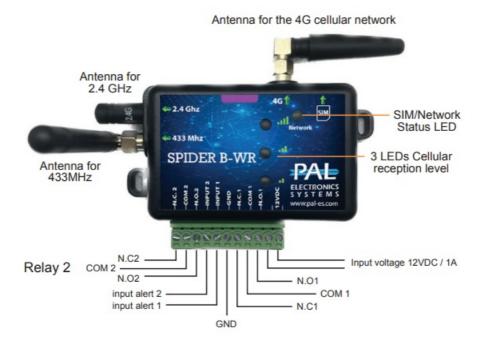

- 2 output relays (N.O./N.C.)
- 2 input channels with real-time notifications to Email and push to PalGate Ap

LEDs key

SIM/Network LED

- · Fast Flashing: The system is booting
- · Slow Flashing: The module is searching for a cellular network
- All LEDs Flashing: SIM card not recognized

LED₁

- Blinking Twice: Connecting to the internet
- Blinking Four Times: Connecting to the servers Signal Strength


4G Signal Strength Indicator

- LED #1 ON: Low signal
- LED #1 and #2 ON: Good signal
- LED #1, #2, and #3 ON: Very good signal

wiring connection


Typical wiring connection to an Electronic Strike:

· A Optional Magnetic Sensor

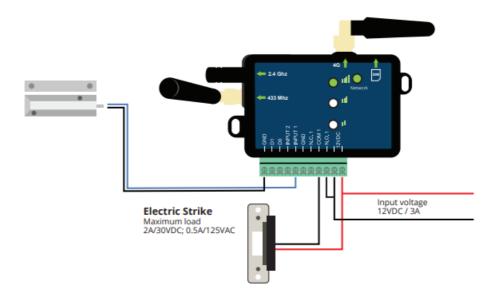


Door or Gate Position switch – Mount this on the door frame or on the gate in the desired location with the wire running to the input on the PAL controller, like shown above. When using two door or gate position sensors for double doors wire them in series with one leg of each switch running back to the controller for connection.


Typical wiring connection to a Maglock:

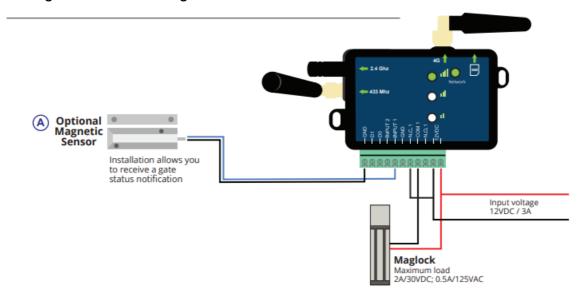

Typical wiring connection to a Gate:

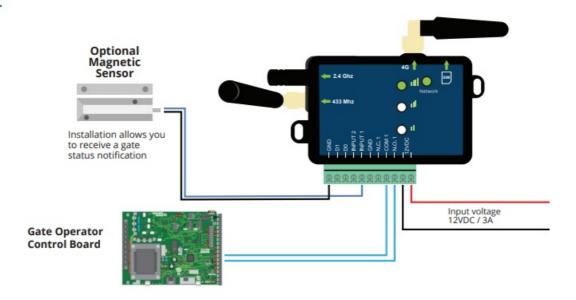

Typical Wiegand wiring connection

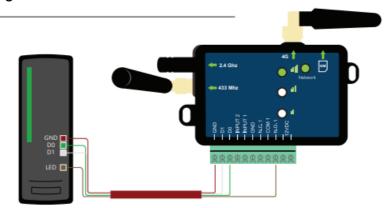

- When wiring in a Wiegand device to the PAL controller, use DO, D1, and Wiegand GND from the Wiegand device to the PAL controller.
- When wiring the card reader LED to correspond with relay, wire to N.O.-1.

Product Specifications

- Supply Voltage Range: 12-24V DC
- Average Standby current consumption: ~70mA
- Relay Contact Current Rating: 1A, 30V AC/DC (Resistive)
- Antenna: 50Ω SMA Antenna interface
- Temperature Range: -4°F to +158°F
- Exterior Dimensions: 2.08 in. x 3.15 in.
- Net Weight: 3.06 ounces
- Related Voltage of the Output Relay:
- Voice Support: VoLTE
- Frequency Bands:
- U.S.A Market (SP1XX): 4G bands: B2, B4, B12, B66

Contact Ratings


Maximum Switching Power	30 W, 62.5 VA	
Maximum Switching Voltage	220 VDC, 250 VAC	
Maximum Switching Current	1A	
Maximum Carrying Current	2A	

New device Setup via the PAL Portal

1. Sign into the PAL Portal and you will see the homepage. Click on "Devices" and on the + button to add a new device



- 2. This will open a window (below) where you are asked to enter the Serial number of the device. This number will begin with 4G followed by 9 digits and can be found on the sticker on the PAL packaging or on the back of the device.
- 3. After you enter the Serial # you will be asked to enter a code. The code is a 5-digit number shown on the back of the PAL Device
- 4. Next you will enter the address of the new device. This can be as simple s a city and state or can be an exact street address. The name is what the account administrator will name the device and Output 1 is the name of the device the PAL unit will be controlling. CLICK THE SAVE BUTTON ONCE THIS INFORMATION HAS BEEN ENTERED

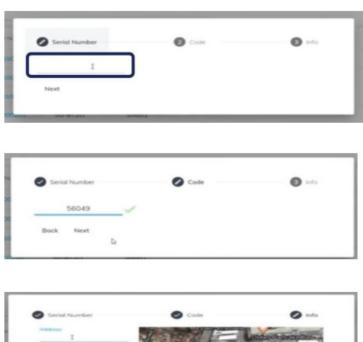



5. Once the information has been saved, you will see this screen, indicating the device has been successfully added



PalGate App

More PAL System settings using the PalGate App

You may download our app from either the Apple App Store or from Google Play by searching for the name "PalGate". If you prefer, you can access a direct link by scanning the QR codes below











Adding New Users

- From the Home screen go to devices. Select the device you wish to add users to. Once in the device main menu select users. (for sites with multiple PAL units installed please call technical support at 866-975-0101 or refer to the complete manual)
- Once in users click "add" in the top right hand corner. (You can also import complete databases, please call technical support or see full instruction manual for detailed instructions on this)
- Once you have clicked "add" you will enter the main user screen. Fill out the necessary information and click save. Note: If you enter a phone number the user can download the "Palgate" phone application and will be able to trigger the gate or door from their phone. Leaving the phone number section blank will not allow the user to have app control of the PAL unit

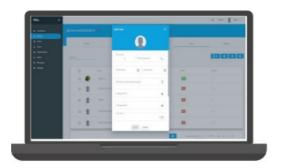

Types of User Credentials

In this image you will see that the "Nearby Only" box is checked. This enables a Bluetooth Credential, so that the user has to be in close proximity to the gate in order to open it. Leaving this box unchecked allows a user to open the gate from anywhere via a cellular signal.

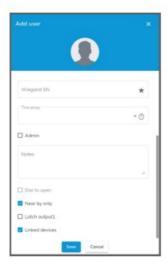

Important Information for optimal PAL Unit operation

- Installation: If the device will be installed in a metal cabinet, the installer must connect an external antenna to the device that will reach the outside of the cabinet.
- Power Requirements: The unit requires a stable power source of 12Vdc/1A.
- Environment: Protect the unit from excessive humidity and prevent insect infiltration.
- Network Compatibility: The Spider Systems unit operates using 4G and Bluetooth technology. For optimal
 performance, prior to installation ensure the availability of acceptable 4G signal strength in the installation area.
 Pal
- Electronics Systems Ltd. is not responsible for the quality of cellular network coverage. It is the installer's/user's responsibility to ensure adequate 4G reception in the area.
- Maintenance: Any maintenance or repairs should only be conducted by authorized installers. *Optional feature. Payment may apply

2480 South 3850 West, Suite B, Salt Lake City, UT 84120

- (866) 975-0101
- (866) 975-0404
- fax <u>sales@transmittersolutions.com</u>

Documents / Resources



Transmitter SOLUTIONS i-WR Spider Controllers [pdf] User Manual

i-WR Spider Controllers, i-WR, Spider Controllers, Controllers

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.