



TRAXALL 720 Multi Source Magnetic Pipeline Pig Location and Tracking System User Guide

[Home](#) » [TRAXALL](#) » TRAXALL 720 Multi Source Magnetic Pipeline Pig Location and Tracking System User Guide 

Contents

- [1 720 Multi Source Magnetic Pipeline Pig Location and Tracking System](#)
- [2 Models 770 & 720 Bulkhead to Client Device Cable Installation and User Guide](#)
- [3 About TRAXALL Device Cable](#)
- [4 About This User Guide](#)
- [5 Getting Started: Using Your Device Cable](#)
- [6 System Menu: Programming TRAXALL Relays](#)
- [7 OVERVIEW](#)
- [8 USING YOUR DEVICE CABLE](#)
 - [8.1 Connection](#)
 - [8.2 Programming TRAXALL Relays](#)
- [9 Warranty](#)
- [10 Making a Warranty Claim](#)
- [11 Care and Maintenance](#)
- [12 Service and Repairs](#)
- [13 ABOUT CDI](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)
- [15 Related Posts](#)

TRAXALL

720 Multi Source Magnetic Pipeline Pig Location and Tracking System



Models 770 & 720 Bulkhead to Client Device Cable Installation and User Guide

The TRAXALL Bulkhead-to-Client Device Cable is manufactured by CDI and provided for connection of a user-provided device to the TRAXALL 720 or 770 Programmable Relay Port. The Relay Port is a single 12-pin port which supports two separate relay circuits (RELAY 1 and RELAY 2), either of which can be configured as normally open or closed. Typical devices include lights, horns and other audial/visual equipment used where an unmanned passage annunciation must be monitored.

Features and Capabilities:

- TRAXALL Remote Control
- FieldLink
- Configurator products are covered under United States Patents
- The TRAXALL family of transmitters is covered under United States Patent No. 9172406

WARNING:

Any operation involving work on pipelines containing gases or liquids under pressure is potentially hazardous. It is necessary, therefore, to follow correct procedures in the use of this equipment to maintain a safe working environment. No person should use this equipment unless fully aware of potential hazards of working with pressurized pipelines and trained in the procedures stated in this manual. The purchaser of this equipment is responsible for the training and competence of operators and the manner in which it is used. Contact CDI immediately should any difficulty arise in the use of this equipment.

About TRAXALL Device Cable


This user guide provides information about the TRAXALL Device Cable, which is used to connect a user-provided device to the TRAXALL 720 or 770 Programmable Relay Port. This document is subject to change without notice and applies only to the version of software, hardware, or firmware described on the title page.

About This User Guide


Conventions used in this publication and indicate you are to press Up, Down, Right, Left, or Enter on the TRAXALL keypad:



Menu options will appear in this guide exactly as displayed.

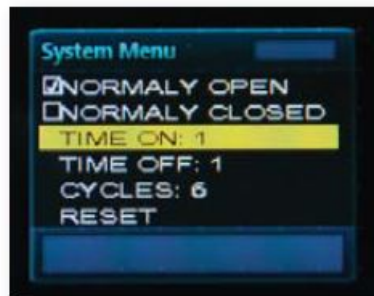

Gray arrows indicate menu sequence, progression, or transition:

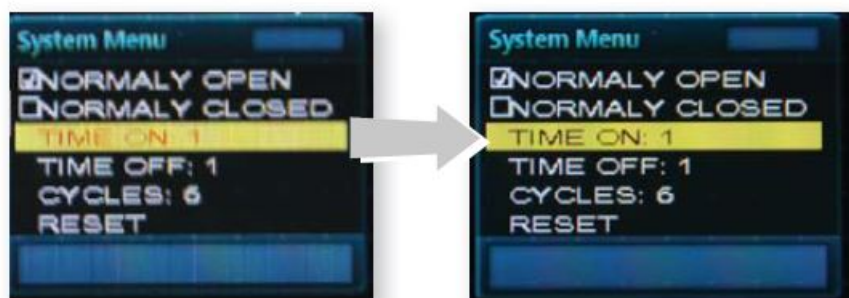

Red arrows point out specific items, details, or required action.



Getting Started: Using Your Device Cable

To use your device cable, follow the steps below:

1. Open the Relay Port dust cap.
2. Slide outer shell back.
3. Insert onto port. Take care not to bend or break pins.

System Menu: Programming TRAXALL Relays

Set up and program the two RELAYS for various pulse train behavior. The relay contacts can be used for passage annunciation (lights, horns, etc.), a very useful feature where an unmanned passage must be monitored. RELAY ONE and/or RELAY TWO can be set to NORMALLY OPEN, NORMALLY CLOSED, TIME ON or OFF, and CYCLES. Relay dwell times are in seconds. Values are displayed in red until set.

OVERVIEW

Features and Capabilities

The TRAXALL Bulkhead-to-Client Device Cable is manufactured by CDI and provided for the connection of a user-provided device to the TRAXALL 720 or 770 Programmable Relay Port. Typical devices include lights, horns and other audial/visual equipment used where an unmanned passage annunciation must be monitored. The Relay Port is a single 12-pin port that supports two separate relay circuits (RELAY 1 and RELAY 2), either of which can be configured as normally open or closed.



NOTE: It is the customer's responsibility to ensure attached circuitry or device functionality does not exceed TRAXALL relay electrical ratings.

NOTE: It is the customer's responsibility to ensure attached circuitry or device functionality does not exceed TRAXALL relay electrical ratings.

See pg. g for Relay Port specifications. See your TRAXALL 720/770 User Guide (CDI Publication for setup and operation Of your TRAXALL 720/770.


USING YOUR DEVICE CABLE

Connection


OPEN Relay Port dust cap.



SLIDE outer shell back.

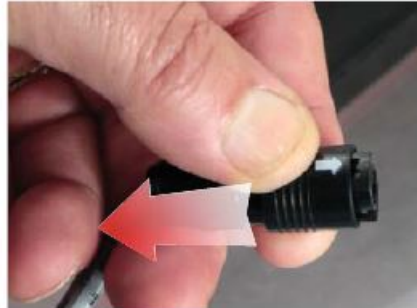

INSERT onto port. Take care not to bend or break pins.

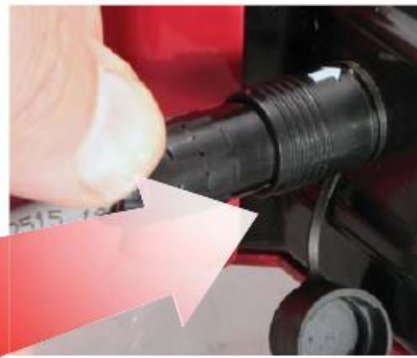

Programming TRAXALL Relays

Relay Options

Set up and program the two RELAYS for various pulse train behavior. The relay contacts can be used for passage annunciation (lights, horns, etc.), a very useful feature where an unmanned passage must be monitored.




Relay dwell to mes are in seconds. Values are displayed in red until confi rmed by, at which point values are shown in black.

Relay Options (cont.)

Set CYCLES for desired number of relay repetitions.

RESET deactivates a triggered relay.(It does not change relay settings.)

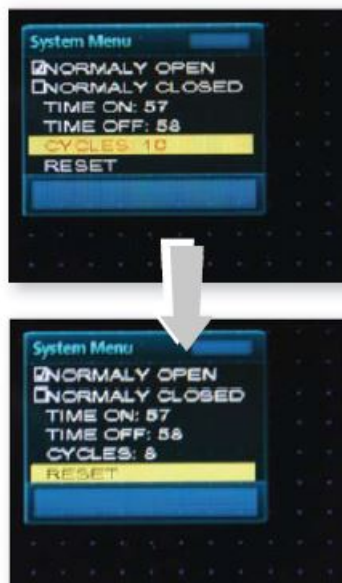

replacements. It is the Purchaser's responsibility to insure that proper precautions are taken during installation and operation so that weather seals are in place, routine maintenance occurs, etc. Failure to perform these operations nullifies this warranty. CDI equipment should only be operated by qualified personnel who are familiar with any and all manuals and procedures for said equipment's operation.

Service and Repairs

Cost for repairs not covered by the warranty or carried out after the warranty period has expired will be charged at the current hourly or set service rate, plus the cost of materials, upon approval by Purchaser. Equipment for repair must be sent at the Purchaser's expense and be accompanied by the Purchaser's written order describing the defect and authorizing CDI to invoice the Purchaser for labor, materials and return delivery cost. No service or repair will be undertaken until an approved written order is received from the Purchaser. Operating equipment while in a damaged condition nullifies this warranty.

ABOUT CDI

CDI is a family-owned and operated business located in Broken Arrow, Oklahoma, just 12 miles from downtown Tulsa. Incorporated in 1982, CDI has proudly been manufacturing products in the United States for more than 32 years. CDI currently employs 45 people in the areas of electronics and mechanical design, software and firmware programming, electronics manufacture, machining, and more. All CDI products are designed and built completely in-house utilizing an on-premises machine shop boasting six fully-automated CNC machines as well as full-time electronics assembly personnel.



Information in this document is subject to change without notice and applies only to the version of software, hardware, or firmware described on the title page. The software, hardware, and firmware described in this document are designed, manufactured, and written by CDI. The software and firmware copyright 2014 CDI with all rights reserved. This document C) 2015 CD'. All rights reserved. Document Number 89-09-0048-00Manual

Revision 27 Oct 2015 TRAXALL, TRAXALL Remote Control, FieldLink, and Configurator products are covered under United States Patents. The TRAXALL family of transmitters is covered under United States Patent No. 9172406. Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation.

Google Earth is a service of Google Inc.

Adobe, the Adobe logo, Acrobat, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

WARNING

Any operation involving work on pipelines containing gases or liquids under pressure is potentially hazardous. It is necessary, therefore, to follow correct procedures in the use of this equipment to maintain a safe working environment. NO person should use this equipment unless fully aware of potential hazards of working with pressurized pipelines and trained in the procedures stated in this manual. The purchaser of this equipment is responsible for the training and competence of operators and the manner in which it is used. Contact CDI immediately should any difficulty arise in the use of this equipment.


1801 North Juniper Avenue
Broken Arrow,
Oklahoma 74012
U.S.A.+1 (918) 258-6068 worldwide
www.pigging.com
support@pigging.com



**PIGGING PRODUCTS &
SERVICES ASSOCIATION**
member



Documents / Resources

 <p>TRAXALL Multi Source Magnetic Pipeline Pig Location and Tracking System INSTALLATION AND USER GUIDE</p> <p>CDI CDI Inc. 1801 North Juniper Avenue Broken Arrow, Oklahoma 74012 U.S.A. +1 (918) 258-6068 www.pigging.com</p>	<p>TRAXALL 720 Multi Source Magnetic Pipeline Pig Location and Tracking System [pdf] User Guide</p> <p>720, 770, 720 Multi Source Magnetic Pipeline Pig Location and Tracking System, Multi Source Magnetic Pipeline Pig Location and Tracking System, Magnetic Pipeline Pig Location and Tracking System, Pipeline Pig Location and Tracking System, Location and Tracking System</p>
--	--

References

-  [CDI – Pipeline Pig Tracking Systems and Software](#)