



Trends Peppa's Laugh & Learn Alphaphonics PP03 Instruction Manual

[Home](#) » [Trends](#) » Trends Peppa's Laugh & Learn Alphaphonics PP03 Instruction Manual

Contents [[hide](#)]

- 1 Trends Peppa's Laugh & Learn Alphaphonics PP03
- 2 How to play
- 3 How to change batteries
- 4 Important battery information
- 5 Trouble Shooting
- 6 Care instructions
- 7 Documents / Resources
- 8 Related Posts



Trends Peppa's Laugh & Learn Alphaphonics PP03



How to play



Press at any time to hear the alphabet



Press at any time to hear fun music

Select one of seven activities, and have fun with Peppa and her friends!



Activity 1: Press a letter button to hear the word and sound.



Activity 2: Press a letter button to hear its name and the phonetic sound



Activity 3: Peppa Pig will ask you to find a character or object. Don't worry if you can't find them the first time - you get 3 chances!

? and



Activity 4: Peppa will ask you to find the first letter of a word. Don't worry if you can't find them the first time - you get 3 chances!

abc



Activity 5: Peppa will ask you to find the phonic letter of a spoken word. Don't worry if you can't find them the first time - you get 3 chances!



Activity 6: Peppa Pig will ask you to copy a sequence of funny sounds. Will you be able to find them in the correct order? Take care - you have only one go!



Activity 7: Choose a button and have fun listening to all the sounds and making your own music.



Repeat button. Press at any time if you need a question or sound repeated.

AUTOMATIC SHUT OFF In order to save battery life, the unit will switch OFF if left idle for approximately two minutes. To re-active the unit, select a game.

How to change batteries

1. This product requires 3 x AAA (LR03) 1.5V batteries.
2. The batteries supplied with the product are for store demonstration purposes only and we recommend that they are replaced after purchase.
3. Use a suitable screwdriver to remove the battery cover located on the rear of the Alphaphonics.
4. Remove the old batteries. Insert 3 x AAA batteries, ensuring the + and - terminals match the markings on the

inside of the compartment.

5. Fit the battery compartment cover and tighten the screw to secure (but do not over-tighten).

Important battery information

- Batteries must be inserted or removed by an adult.
- Do not mix battery types (for example, alkaline and zinc carbon), or old and new batteries.
- Do not attempt to recharge non-rechargeable batteries, as they may leak or explode.
- Batteries must be inserted with the correct polarity.
- Do not short circuit the supply terminals.
- Remove exhausted batteries from the toy.
- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries must be charged by an adult.
- Use only the recommended battery type or their equivalent.
- Do not dispose of batteries in fire, as they may leak or explode.
- Remove batteries from the toy if it is not being used for an extended period of time.



The purpose of the crossed-out wheellie bin symbol is to remind us that most electrical product and batteries contain trace elements which could be harmful to our environment and therefore our health.

We must all be careful to dispose of them responsibly in a specifically designated way – either using a collection scheme or into the correctly labelled civic amenity (NOT into general waste) – this will help your local authority to arrange to recycle or dispose of them in the appropriate

manner.

Trouble Shooting

| | |
|--|---|
| If the Alphaphonics™ does not turn on... | Check that the batteries are installed correctly, or install new batteries. |
| If the volume is too low... | Install new batteries |
| The sounds are abnormally quick or slow... | Install new batteries |
| If there is a continuous buzzing sound... | Install new batteries |
| If the light of the toy becomes dim... | Install new batteries |

Care instructions

- Keep the Alphaphonics clean by wiping it with a slightly damp cloth.
- Keep the Alphaphonics out of direct sunlight and away from any direct heat source.
- Do not expose the Alphaphonics to moisture or water.

This product complies with the essential requirements of the European Toy Safety Directive.

Trends UK Ltd., Greatworth Hall, Banbury, OX17 2DH. UK

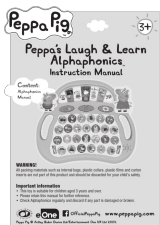
Email: trends@jgdirect.net

Trends Toys Ireland,
8-9 Marino Mart,
Dublin 3, D03 P590

Customer Services: +44 (0)1702 208175

For more fun learning toys go to www.trendsuk.co.uk
“Alphaphonics” and “Alpha Phonics” are Trade Marks of Trends UK Limited

Documents / Resources

| | |
|---|---|
|  | <p>Trends Peppa’s Laugh & Learn Alphaphonics PP03 [pdf] Instruction Manual Trends, Peppa s, Laugh Learn, Alphaphonics, PP03</p> |
|---|---|