



TRETTITRE T-CP8 Portable Bluetooth CD Player User Guide

[Home](#) » [TRETTITRE](#) » TRETTITRE T-CP8 Portable Bluetooth CD Player User Guide 

TRETTITRE T-CP8 Portable Bluetooth CD Player



Contents

 
- 1 Important Information
- 2 Quick Start
- 3 Charging Instructions
- 4 Product Diagram
- 5 Package Included
- 6 Main Functions
- 7 Specifications
- 8 Caution
- 9 FAQ / Troubleshooting
- 10 Warranty
- 11 Customer Support
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts

Important Information


If you encounter any issues or have any questions regarding your new product, feel free to contact our helpful Customer Support Team. Your satisfaction is our goal!

Quick Start


Setup

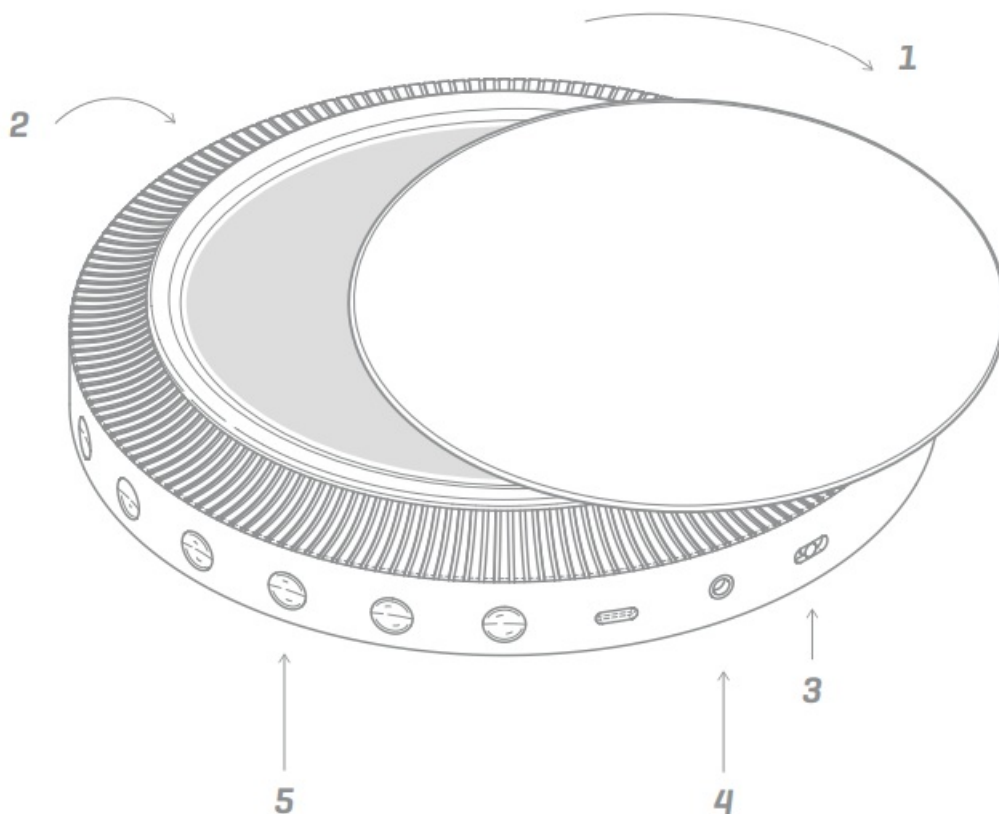

1. Rotate to open the cover lid.

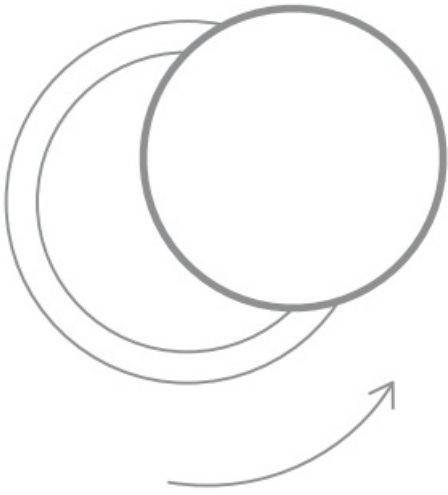

2. Insert a CD and close the cover lid.
3. Switch the button to "ON"

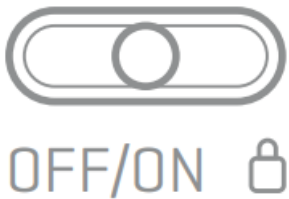

The device will automatically start in CD mode.

Note: if the CD is not inserted, it will automatically shut down after 2 minutes. Press the play button and restart it. Pressing other keys will be invalid.

4. Plug in your headphones.



5. Press "play" to start.



Note: if the device is played normally or not operated, the screen will automatically stop after one minute, and press any key to call up the screen.

Charging Instructions

When the orange indicator light is flashing, the device needs to be charged.

Different colors of the indicator light correspond to differences in running state.


White light: work well;

Green light: fully charged;

Orange light: charging;

Orange flashing light: battery < 20%;

Orange flashing light (quickly) : battery<5%;

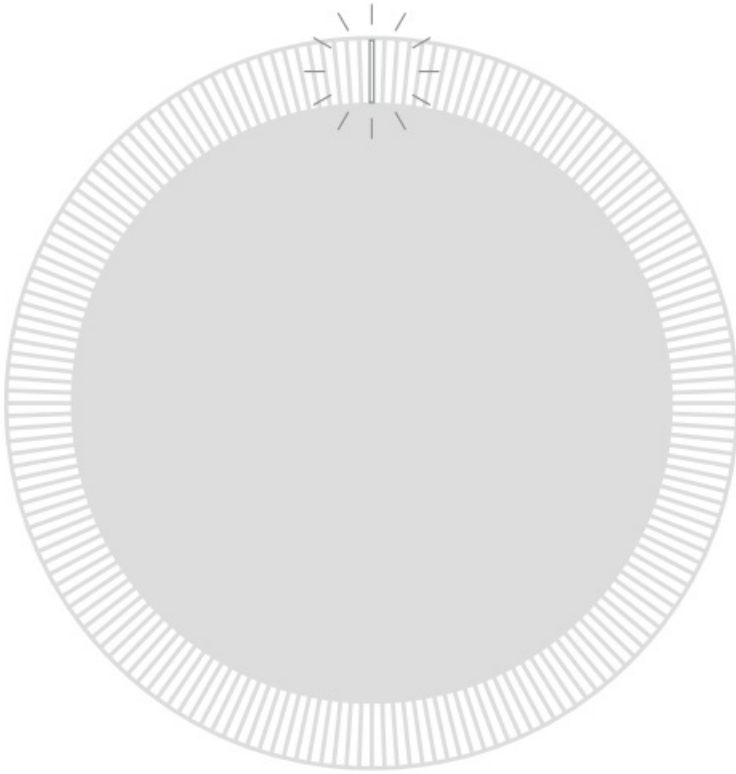


Type-C



When fully charged, the device can play for approximately 12 hours with standard CDs, and approximately 8 hours in Bluetooth Mode.

Product Diagram

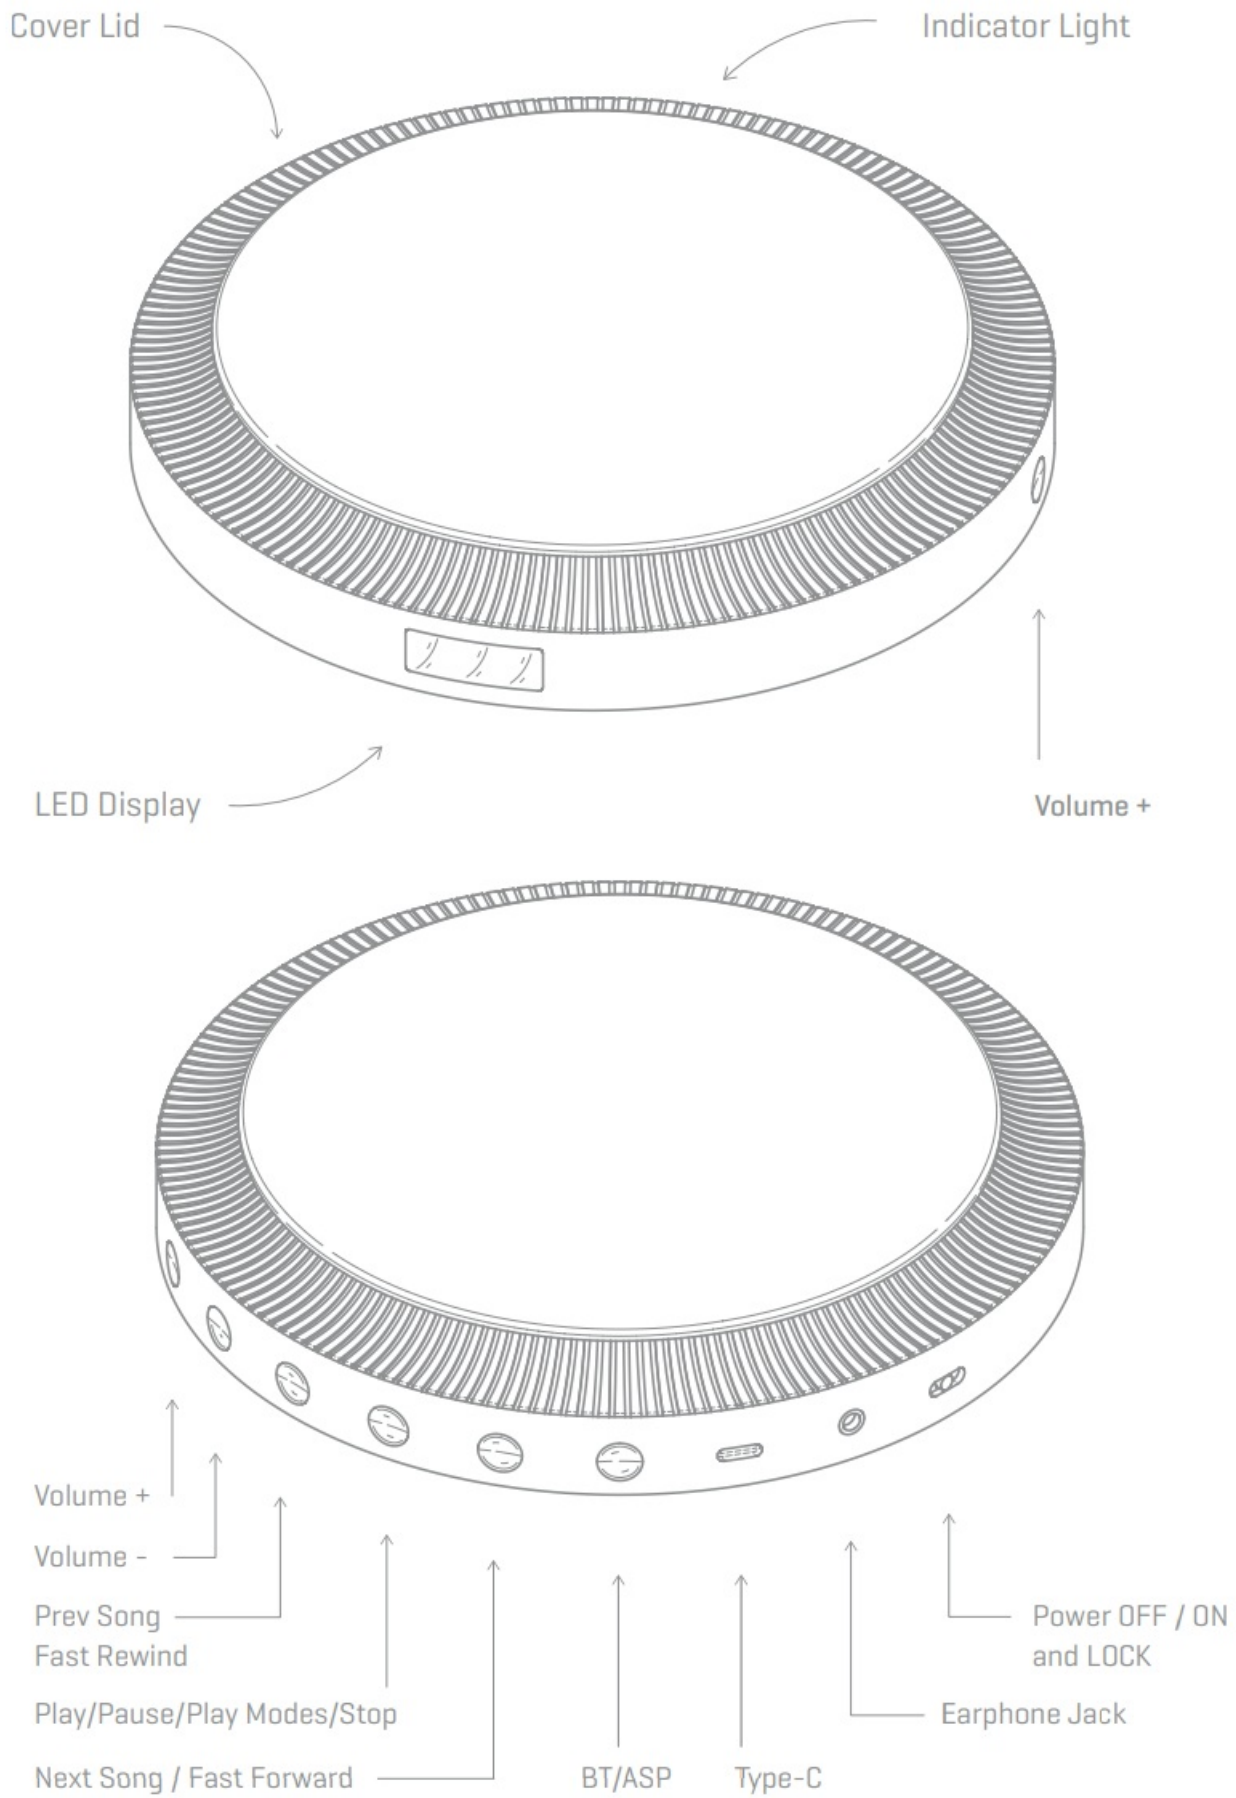

Package Included

- The CD player,
- Type-c cable,

- User manual

Main Functions

Power OFF / ON and LOCK

Slide the switch to “Power OFF”, “Power ON” and “LOCK” (to lock buttons).



Play / Pause / Play Modes / Stop

Short press the “Play” button to pause and play.

Long press the “Play” button to stop playing, Short press the button again to play from the first song.

Double click the “Play” button to switch between 3 play modes: repeat current track, repeat all, RND (Play in random order)



Prev Song / Fast Rewind

Short press the “Prev Song” button to replay the previous track;

Long press the “Prev Song” button to quickly scan backwards/rewind.



Next Song / Fast Forward

Short press the “Next Song” button to play the next track;

Long press the “Next Song” button to quickly scan forward/fast forward.



Volume + / Volume –

Adjust the volume while playing.



Earphone Jack

Standard 3.5mm audio output. Connect to headsets, speakers or cars.



BT / ASP

Short press the “BT” button to turn on/off Bluetooth mode.

Long press the “BT” button to switch the anti-shock protection system (ASP) on/off.



Switch to Bluetooth mode:

The CD player will automatically search for Bluetooth devices (speakers, headsets, etc.).

Please turn on the Bluetooth feature on your device.

Your device will be paired with the CD player in a few seconds.

NOTICE!

If your device should become unpaired or you find it is unable to connect, repeat the above steps.

Some speakers have a private digital Bluetooth protocol. If the Bluetooth connection fails, you need to buy another Bluetooth adapter.

Specifications

Type-C Input: 5V 1A

Support Disc Format: CD, CD-R, CD-DA, CD-RW, HDCD;

Charge Time: 3 hours

Capacity: 2000mAh

Bluetooth Range: 8-10m

SNR: >70dB

THD: <3%



Dimension: Φ170×27mm

Material: ABS + Al Alloy

Weight: 360g

Caution

1. Avoid listening at excessive volumes or for excessive periods of time to reduce the risk of hearing damage.
2. Avoid contact with moisture, rain, sand or various heat sources.
3. When cleaning, use a soft cloth damp with water. Do not use alcohol or benzene solvent to clean.
4. When riding a bicycle, driving a car or a motorcycle, do not use headphones. Stay alert to your surroundings.

	CAUTION	
	Excessive volume can damage hearing	
To avoid hurting your ears, avoid excessive use.		

FAQ / Troubleshooting

Problem	Possible Cause or Solution
The CD player will not turn on.	<ol style="list-style-type: none">1. Make sure that the USB cable is connected correctly.2. Replace the batteries
The CD player does not play or stops playing.	<ol style="list-style-type: none">1. Moisture may have condensed on the lens, open the CD cover and leave it open for about one hour to let it dry out.2. Make sure that the CD is inserted with the label facing up.3. Ensure the CD is not scratched or damaged.
No sound or poor sound.	<ol style="list-style-type: none">1. Earphone plug is not firmly inserted into the phone's jack, reinsert.2. Volume is set to a minimum, increase volume.3. The battery is low, recharge.4. CD is defective, replace.

Warranty

Our company warrants all products to be of the highest quality in material, craftsmanship and service, effective from the date of purchase to the end of the warranty period.

This warranty extends only to personal use and does not extend to any product that has been used for commercial, rental, or any other use in which the product is not intended for. There are no warranties other than

the warranties expressly set forth with each product.

This warranty is non-transferable. Our company is not responsible in any way for any damages, losses or inconveniences caused by equipment failure caused by user negligence, abuse, or noncompliance with the user manual or non-compliance with any additional safety recommendations or warnings included in the product packaging and manual.

What is not covered by the warranty:

1. The warranty immediately becomes void if the product has been tampered with, repaired or modified by non-authorized personnel.
2. Damage (accidental or otherwise) to the product that does not impact the product's operation, including but not limited to rust, change in color, texture or finish, wear and tear, and gradual deterioration is not covered.
3. Damage caused by accident, abuse, natural disaster, intentional or accidental misuse, fire, neglect or improper maintenance, and use under abnormal conditions is not covered.
4. Products that have exceeded the warranty service period stipulated by our company are not covered.
5. The warranty immediately becomes void if the original serial number is removed, obliterated or altered from the product.
6. Packaging and attached accessories, services and additional configurations other than those promised by the salesperson are not covered.
7. The warranty immediately becomes void if the instructions in the user manual are not followed.

Customer Support

TRETTITRE (SHENZHEN) TECHNOLOGY CO., LTD.

903-905, Bldg A, Zhonghengsheng Hightech Park, No.3, Xinyu Road, Baoan District, Shenzhen, CN



trettitre_officials



trettitre_sound



trettitre_sound



Trettitre



Trettitre



www.trettitre.com




ttt@trettitre.com



+86 0755-26601713



	TRETTITRE T-CP8 Portable Bluetooth CD Player [pdf] User Guide T-CP8 Portable Bluetooth CD Player, T-CP8, Portable Bluetooth CD Player, Bluetooth CD Player, CD Player, Player
---	--

References

- [T](#) [TRETTITRE | Hi-Fi Bluetooth speaker | CD Player | Amplifier](#)
- [User Manual](#)