



trevi EC 882 Alarm Clock With LED Display User Guide

[Home](#) » [Trevi](#) » trevi EC 882 Alarm Clock With LED Display User Guide 

Contents

- 1 [trevi EC 882 Alarm Clock With LED Display](#)
- 2 [UK PLUG ONLY](#)
- 3 [NOTES OF USE](#)
- 4 [CARE AND MAINTENANCE](#)
- 5 [CONTROLS DESCRIPTION](#)
- 6 [PREPARATION FOR USE](#)
- 7 [SETTING THE TIME](#)
- 8 [SETTING ALARM TIME](#)
- 9 [SNOOZE FUNCTION AND ALARM DEACTIVATION](#)
- 10 [DISPLAY BRIGHTNESS ADJUSTMENT](#)
- 11 [TECHNICAL FEATURES](#)
- 12 [DISPOSAL](#)
- 13 [WARRANTY](#)
- 14 [Product Specifications](#)
- 15 [Frequently Asked Questions \(FAQ\)](#)
 - 15.1 [Q: What should I do if the alarm does not sound?](#)
 - 15.2 [Q: How do I adjust the brightness of the display?](#)
- 16 [Documents / Resources](#)
 - 16.1 [References](#)
- 17 [Related Posts](#)

trevi EC 882 Alarm Clock With LED Display



USER GUIDE

MODEL: EC 882

* For additional information and updates of this product: www.trevi.it

WARNING!

CAUTION: DANGER OF ELECTRIC SHOCK! DO NOT EXPOSE TO RAIN OR HUMIDITY

WARNING: DO NOT OPEN THE UNIT. THERE ARE NO USER-SERVICEABLE CONTROLS OR SPARE PARTS INSIDE.

FOR ALL SERVICE OPERATIONS CONTACT AN AUTHORISED TREVI SERVICE CENTRE

UK PLUG ONLY

WIRES CONNECTIONS TO A THREE-PIN

PLUG

The wires in this mains lead are coloured in accordance with the following wiring codes:


- Blue:..... Neutral
- Brown:..... Live

The wires in this mains lead must be connected to the terminals in the plug as follows:

- Blue wire:..... N or Black
- Brown wire:..... L or Red

Neither wire is to be connected to the earth (E or W) terminal of three-pin plug.

Should the fuse fail in the plug remove the plug from the wall socket and replace the fuse with a 3 Amp. ASTA approved BS 1362 fuse.

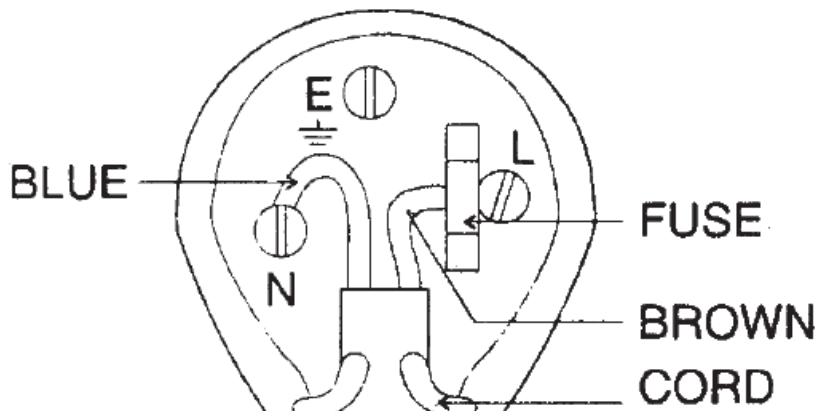

NOTES OF USE

This appliance is a high precision electronic instrument, so avoid using it in the following cases:

- Near magnetic fields.
- Near heat sources such as heaters and stoves.
- In very humid places such as bathrooms, swimming pools, etc...
- In very dusty places.
- In places subject to strong vibrations.
- Position the appliance so that there is always enough space on its sides for free circulation of air (at least 5cm).
- If liquids penetrate inside the appliance, immediately disconnect the plug from the socket and take the appliance to the nearest TREVI authorized service center.
- Always check that the power cables are installed correctly.
- No naked flame sources, such as lighted candles, should be placed on the appliance.
- The appliance must not be exposed to dripping or splashing water and no objects filled with liquid, such as vases, must be placed on the appliance.
- Before turning on the appliance, always check that the power cable and connection cable are installed correctly.
- The power cable must be connected to a socket close to the device and must be easily accessible.
- If you notice excessive heat on the device, immediately disconnect the plug from the main power outlet.
- Do not pull the power cord.
- Keep this manual for future reference.

CARE AND MAINTENANCE


For cleaning, we recommend using a soft, slightly damp cloth. Avoid solvents or abrasive substances.


IMPORTANT

This device is designed for home use. The good construction of this device guarantees its perfect functioning for a long time. However, should any problems arise, it is advisable to consult the nearest TREVI authorized service center.

TREVI pursues a policy of continuous research and development. Therefore the products may have characteristics different from those described.

CONTROLS DESCRIPTION

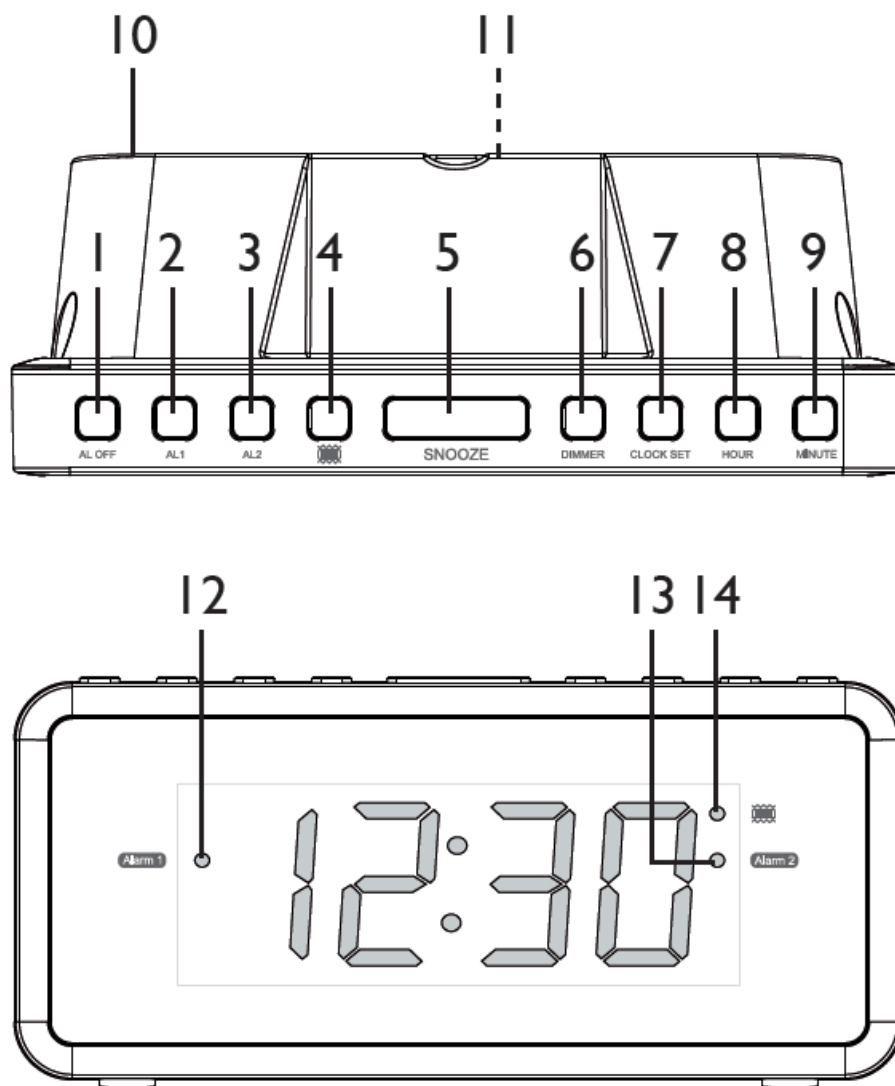

1. AL OFF button, alarm switch Off
2. AL1 button
3. AL2 button
4.  button, Vibration
5. SNOOZE button
6. DIMMER button, display brightness adjustment
7. CLOCK SET button
8. HOUR button, hour adjustment
9. MINUTE button, minutes adjustment
10. Speaker
11. Battery compartment (on the back)
12. Led Alarm 1 indicator
13. Led Alarm 2 indicator
14. Led indicator Vibration function

PREPARATION FOR USE

Insert the plug of the power cable into a 230V~ 50Hz socket; the display will flash until the time is set.

To maintain the time and alarm memory even during a momentary power failure, insert two 'AAA' batteries in the battery compartment (11) at the back of the device, observing the indicated polarities.

Note: during battery operation, the wake-up alarm does not work.

SETTING THE TIME

1. The digits will flash after connecting to power or press and hold down CLOCK SET button (7) for approximately 3 seconds until the display flashes;
2. Press HOUR button (8) repeatedly to change the hour setting;
3. Press MINUTE button (9) repeatedly to change the minute setting;
4. Press CLOCK SET button (7) to confirm.

Note: If no button is pressed for a few seconds during the setting phase (flashing display), the device will automatically return to fixed display mode.

SETTING ALARM TIME

Setting Alarm 1 and Alarm 2

This clock has dual alarms that can be set and used independently. The procedure to set both alarms is the same. Follow the instructions below to set alarm time 1.

For alarm time 2, substitute "AL 1" button (2) with "AL 2" button (3).

1. Press AL1 button (2), the display, showing the alarm time, and the alarm indicator LED 1 (12) will start flashing;
2. Press HOUR button (8) repeatedly to set the alarm time;
3. Press MINUTE button (9) repeatedly to adjust the alarm minutes;
4. Press the AL1 button (2) to confirm the setting. Alarm 1 will be active.

The alarm indicator (12) will light up on the display.

5. Press button (4) to activate the vibration mode in addition to the alarm sound. The indicator (14) will light up on the display.

To deactivate the alarm and indicator (12) or (13) completely, press button AL1 (2) or AL 2 (3) repeatedly until they switch off.

SNOOZE FUNCTION AND ALARM DEACTIVATION

– While the alarm is sounding, press the SNOOZE button (5) to stop the alarm momentarily; the alarm indicator (12/13) will start flashing. After 9 minutes, the alarm will sound again;

– While the alarm is sounding, press the AL OFF button (1) to stop the alarm definitively. The alarm will remain active and will sound 24 hours later.

DISPLAY BRIGHTNESS ADJUSTMENT

Press DIMMER button (6) to change display brightness between, high, low, and off.

TECHNICAL FEATURES

Power supply:230V ~ 50Hz
Back up battery:2x AAA size (not supplied) – DC 3V
Consumption:4W
Dimensions:160x 550x 700 mm
Weight:340 gr.

DISPOSAL



Precautions for correct disposal of the product.

The symbol shown on the equipment indicates that waste must be disposed of in “separate collection” and so the product must not be disposed of together with urban waste.

The user must take the product to special “separate waste collection centres” provided by local government, or deliver it to the retailer against the purchase of a new product.

Separate collection of waste and subsequent treatment, recycling and disposal operations promotes the production of equipment with recycled materials and limits negative effects on the environment and on health caused by improper handling of waste.

Illegal disposal of the product leads to the enforcement of administrative penalties.

WARRANTY

1. The appliance is guaranteed for 24 months from the date of purchase.
2. The warranty is valid only if the unit has not been tampered with. The warranty is valid only at authorized TREVI assistance centres, that will repair manufacturing defects, excluded replacement of labels and removable parts.
3. TREVI is not liable for damage to people or things caused by the use of this unit or by the interruption in the use of this unit.



If you will not find your language on the instruction manual, please go on our website www.trevi.it to find it



Made in China

Product Specifications

- Power Supply: 230V 50Hz
- Backup Batteries: 2x AAA (not included) – DC 3V
- Power Consumption: 4W
- Dimensions: 160x550x700 mm
- Weight: 340 gr.

TREVI S.p.A.

Strada Consolare Rimini-San Marino,
62 47924 Rimini (RN) – Italy
Tel. 0541/756420 –
Fax 0541/756430 –

Frequently Asked Questions (FAQ)


Q: What should I do if the alarm does not sound?

A: Check the battery levels and ensure they are correctly inserted.

Q: How do I adjust the brightness of the display?

A: Use the DIMMER button to adjust the display brightness.

Documents / Resources

	<p>trevi EC 882 Alarm Clock With LED Display [pdf] User Guide</p> <p>EC 882, Alarm Clock With LED Display, Alarm Clock With LED Display, Clock With LED Display, LED Display, Display, Alarm Clock, Clock</p>
--	---

References

- [TREVI | Elettronica di Consumo](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.