


Tri lite XD026 Loading Dock Lights Instruction Manual

Home » Tri lite » Tri lite XD026 Loading Dock Lights Instruction Manual ™

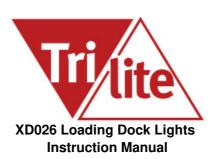



Contents

- 1 IMPORTANT SAFETY
- **INFORMATION**
- 2 Setup and Mounting
- 3 Maintenance and Care
- **4 LIMITED WARRANTY**
- 5 Documents / Resources
 - **5.1 References**
- **6 Related Posts**

IMPORTANT SAFETY INFORMATION

CAUTION! The individual user should determine prior to use whether this device is suitable, adequate or safe for the use intended. Since individual applications are subject to great variation, the manufacturer makes no representation or warranty as to suitability or fitness of these devices for any specific application.



Setup and Mounting

Mount dock light arm first. Attach lamp head when arm installation is complete.

- 1. Select a mounting location suitable to support the weight of the unit. Use 3/8" lag bolts with expansion anchors for securing to solid cinder block or cement structures. When mounting to a wood framed building structure, the unit must be bolted directly to a stud using 3/8" lag bolts.
- 2. Use included template to drill appropriate sized holes for the fasteners/wall anchors. Select the correct hole-pattern for the model being installed. Recommended mounting height is 78 inches.
- 3. When dock arm is securely fastened to the wall, attach the lamp head assembly to the end of the dock arm and plug into the receptacle located on the dock arm.
- 4. Adjust the tension of the lamp arm by tightening the nut and bolt that holds the lamp arm to the swivel bracket. Occasional adjustment may be necessary to maintain proper tension.

WARNING!

- 1. Plug the unit into an electrical outlet compliant with the ratings as specified on the product label.
- 2. All incandescent lamp heads require wire guards to remain UL compliant. Replace guards if damaged or missing.
- 3. Using bulbs of a higher wattage than the fixture rating may cause overheating and fire. Follow these maximum wattage guidelines:

Plastic Lamp Heads:

150W Incandescent / 30W LED PAR38 or 50W High Pressure Sodium.

Metal Lamp Heads: 300W Incandescent PAR38. Use of LED or High Pressure Sodium bulbs not recommended.

Maintenance and Care

- 1. Do not over-tighten adjustment screws.
- 2. Clean and inspect regularly.
- 3. Replace guards when damaged or missing.
- 4. To install or replace lamp in Metal Head, depress plunger located on the rear of the unit. Once bulb is fully tightened, slowly release plunger. Bulb will retract into lamp head.

LIMITED WARRANTY

If it appears within one (1) year from date of delivery to Purchaser that any products or component parts do not conform exactly to the specifications and physical dimensions referred to above, and the Purchaser, at its expense, returns the product or component parts to the Seller together with a report of defects, the Seller shall review the inspection report and inspect the items and shall authorize, at its option, either the repair or replacement of any non-conforming products or component parts, whether on warranty, contract of negligence, shall not in any case exceed the amount to be paid by the Seller in obtaining and repair or replacement of non-conforming products or component parts, and upon expiration of the warranty period, all liability of the Seller shall be terminated.

Seller shall not be liable for any injury, loss or damage, direct or consequential arising out of the use or the ability to use the product. This warranty gives specific legal rights. You may have other rights, which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so that the above limitation of exclusion may not apply to you.

Designers and manufactures of specialty electrical products. Since 1922.

info@triliteinc.com t: 1-773-384-7765 f: 1-773-384-5115 www.triliteinc.com

Documents / Resources



Tri lite XD026 Loading Dock Lights [pdf] Instruction Manual XD026 Loading Dock Lights, XD026, Loading Dock Lights, Dock Lights, Lights

References

Loading Dock Lights, Warning Lights, MARS 888 | Tri Lite

Manuals+