

TRIACLE 2845468 X Mark 2 Key Finder Instruction Manual

Home » TRIACLE » TRIACLE 2845468 X Mark 2 Key Finder Instruction Manual

Contents

- 1 TRIACLE 2845468 X Mark 2 Key
- Finder
- 2 Product features
- 3 Specification parameter
- **4 OPERATIONS**
- 5 Documents / Resources
 - **5.1 References**
- **6 Related Posts**



TRIACLE 2845468 X Mark 2 Key Finder



INSTRUCTION MANUAL

Thank you for choosing this X-Mark 2 Key Finder.

Please read the following instructions carefully before using the product. Retain this manual for future reference.

Note: This product is only suitable for safe use in non-tropical climate conditions and at altitudes below 2000 meters.

CAUTION

- Keep the product out of reach of children.
- Do not expose it to rain, snow, moisture, sunlight, heat source or flammable place.
- Do not wash it by water or immerse it in water.
- Do not drop, hit, disassemble or attempt to repair this product yourself.
- If any defects or malfunctions are discovered, please cease using the product and consult your seller immediately.

How to replace the battery

1. Insert the snap pin into the port and pry to loosen the buckle between the two shells, and until a gap appears.



2. Gradually widen the shell by circling along the seam until the two shells are separated.



3. Replace the battery with a new CR2032 button cell. Positive pole upward.





4. Carefully close the 2 shells of the Key Finder.

Product features

1. Anti loss positioning function

2. MFi certification product

3. Support anti-loss locating 'Find My' network

Specification parameter

· Appellation: Find My Tag

• Model: 2845468/2845469/2845470

Batteries: CR 2032 3VMaterial: ABC+PC

• **Dimension:** 32'32*7mm

Note: This device is compatible only with iOS 14.5 or above on iPhone, iPad or iMac.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards,

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are trademarks of Apple Inc IOS is a trademark or registered trademark of Cisco in the US. and other countries and is used under license.


To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended, The Find Items app on Apple Watch requires the latest version of watchOS.

OPERATIONS


1. Power On

Pull out the insulation film then the product is powered on.

2. Pair The Device

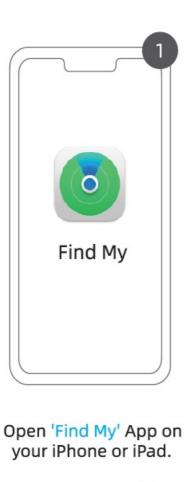



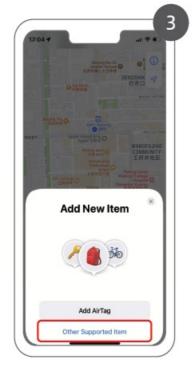


İΪ

Select desired items and tap 'Add Item'



Tap 10ther Supported Item'

Ensure your Key Finder is close to your phone. When you see 'TRIXMA2Q4BKWH' on the App, tap 'Connect'. Follow the App instructions to fill name and select an emoji, then tap 'Continue' . There will be a request to add your Key Finder to your ID, then tap 'Continue'. Tap 'Finish' and your Key Finder is paired with your mobile device.

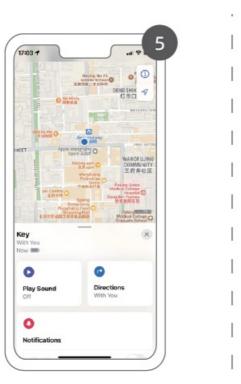




Locate your Item

- Search your Key Finder: Tap 'Play Sound' to make your Key Finder beep when it is nearby.
- Find your Key Finder's location
 Your Key Finder's last known location will appear on the map as emoji you selected when set up. Tap
 'Directions' to navigate to the last known location.

Find Item When Out of Range

- Enable the 'Notify When Left Behind' toggle, you will receive a notification when you leave your Key Finder behind and it is no longer in range of your device.
- Enable the 'Notify when Found toggle', when your Key Finder is seen by another Find My enabled device, you will receive a notification of its updated location.
- Note: Notify When Found' can only be activated when your Key Finder is out of range.



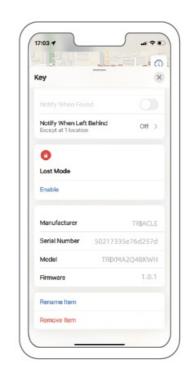

When Your Item is Lost

- Under the 'Lost Mode' on the Find My App, tap the ranable 'tab, a screen detailing Lost Mode will pop up, tab 'Continue'. You can enter your phone number or email address and tap 'Next'. You may enter a message that will be shared with the person that finds your item. Tap 'Activate' to enable 'Lost Mode',
- Note: When 'cost Mode' is enabled, 'Notification When Found' is automatically enabled/ and your Key

Finder is locked and cannot be paired to a new Apple device.

Remove & Reset your Item Locator

- Ensure 'Lost Mode' is disabled, tap 'Remove Item ' tab, a summary will open, tap 'Remove ' to confirm.
- After successfully removing the item, reinstall the battery 5 times. The reset is successful when you hear the ring tone.
- The Key Finder is now reset and ready to pair to a new device.

Unwanted Tracking Detection

If your iPhone/iPad detects that an unknown Key Finder is traveling with you, the Key Finder will play a sound and send a notification to your iPhone/iPad (supports on iOS14.5 or above). These alerts are only activated when the unknown item locator is not connected to its owner's iPhone/iPad. Your own Key Finder will not trigger a sound alert when it is properly paired with your iPhone/iPad.

NOTE

When pairing a device with the Find My app, the phone connects to the Apple server. Pairing might fail due to network issues. It is recommended to take the following action: Change the phone's network, for example, by switching between WiFi and mobile data.



This symbol on product or in instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste, There are separate collection systems for recycling in the EU.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.

· Power International AS,

po Box 523, N-1471 Lørenskog, Norway

• Power Norge:

https://www.power.no/kundeservice/

T: 21 00 40 00

• Power Danmark:

https://www.power.dk/kundeservice/

T: 70 33 80 80

• Punkt 1 Danmark:

https://www.punktl.dk/kundeservice/

T: 70 70 17 07

Power Finland:

https://www.power.fi/tuki/asiakaspalvelu/

T: 0305 0305

• Power Sverige:

https://www.power.se/kundservice/

T: 08 517 66 OOO

Documents / Resources



TRIACLE 2845468 X Mark 2 Key Finder [pdf] Instruction Manual 2845468 X Mark 2 Key Finder, 2845468, X Mark 2 Key Finder, Key Finder

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.