




TRIACLE Mark Card One Wallet Fnder Instruction Manual

[Home](#) » [TRIACLE](#) » TRIACLE Mark Card One Wallet Fnder Instruction Manual 

TRIACLE

SYNCHRONIZED

INSTRUCTION MANUAL



X-MARK CARD 1 WALLET FINDER

Thank you for choosing this X-MARK CARD TWALLET FINDER. Please read the following instructions carefully before using the product. Retain this manual for future reference.

Note: This product is only suitable for safe use in non-tropical climate conditions and at altitudes below 2000 meters.

CAUTION:

- Keep the product out of reach of children.
- Do not expose it to rain, snow, moisture, sunlight, heat source or flammable place.
- Do not wash it by water or immerse it in water.
- Do not drop, hit, isassemble or attempt to repair this product yourself.
- if any defects or malfunctions are discovered, please cease using the product and consult your seller immediately.

Contents

[1 Quick instructions](#)

[2 Locate your Item](#)

[3 Main Functions](#)

[4 Instructions for device button](#)

[5 FAQ:](#)

[6 Documents / Resources](#)


[6.1 References](#)

Quick instructions




Simple Description of Button Operation

- Power on: Press and hold the button for 5 seconds.
The device will beep and power on.
- Turn off: Press 5 times within 2 seconds and hear 4 long beeps ta turn off the device.
- Device status confirmation: Double click the device button, if the device beeps twice, it is on working status.
- Factory Reset: double-click the button, then press and hold the device button for 8 seconds, the reset is successful when you hear a long beep.

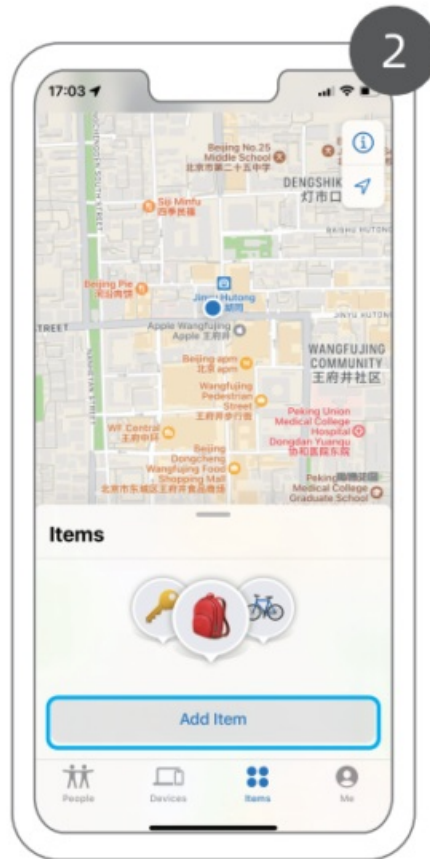


Select desired items and tap '**Add Item**'

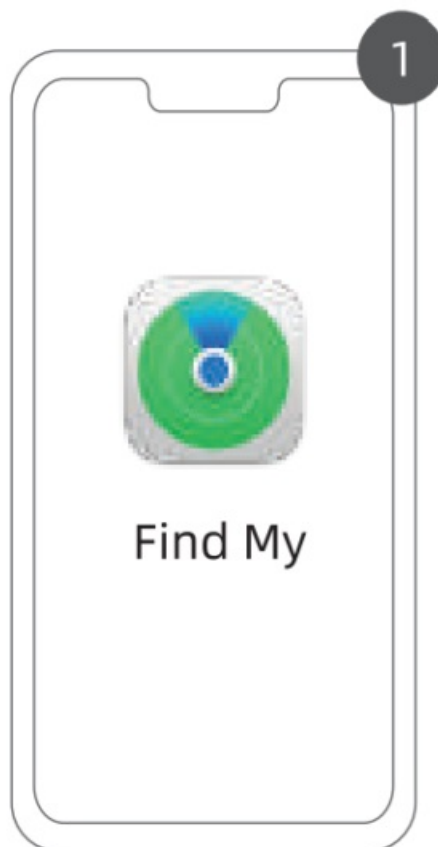


Open '**Find My**' App on your iPhone or iPad.

- Hold the device close to your iPhone, tap the Items tab tap+and then Add Other item.

- Press and hold the button for 5 seconds, the device will beep and turn on.

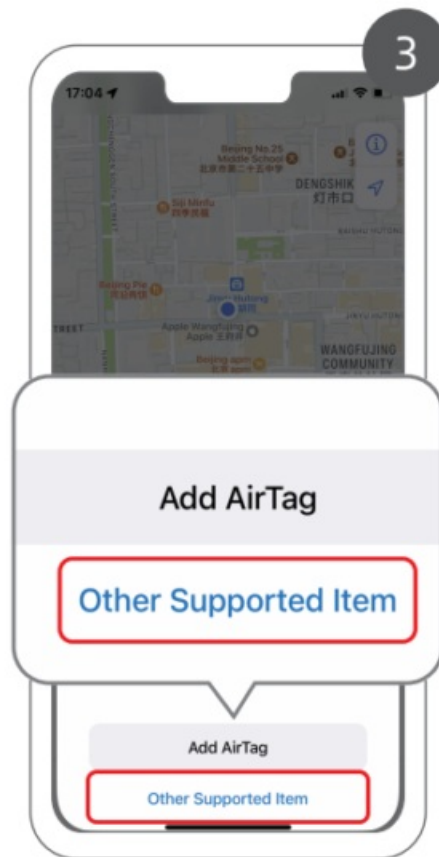


Tap '**Other Supported Item**'

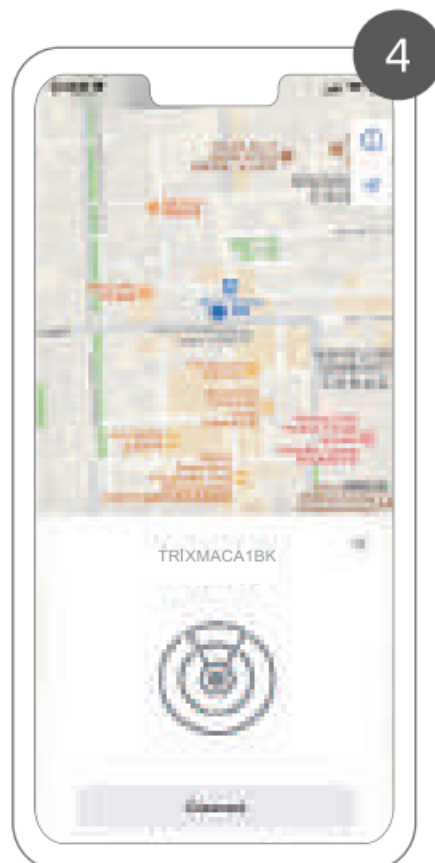

When you see 'TRIXMACA1BK' on the App, tap 'Connect'. Follow the App instructions to fillname and select an


emoji, then tap 'Continue'.

There will be a request to add your Wallet Finder to your ID, then tap 'Continue'. Tap 'Finish' and your Wallet Finder is paired with your mobile device.

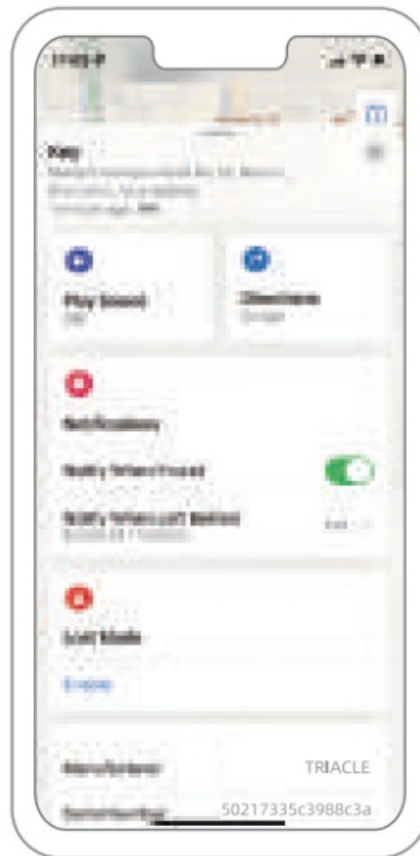

Find Item When Out of Range

- Enable the 'Not fy wen Left Behind' toggle, you will receive a notification when you leave your Wallet Finder behind and it is no longer in range of your device.
- Enable the 'Not fy wen Found' toggle, when your Wallet Finder is seen by another Find My enabled device, you will receive a notification of its updated location.
- **Note:** 'Notify when Found' can only be activated when your wallet Finder is out of range.

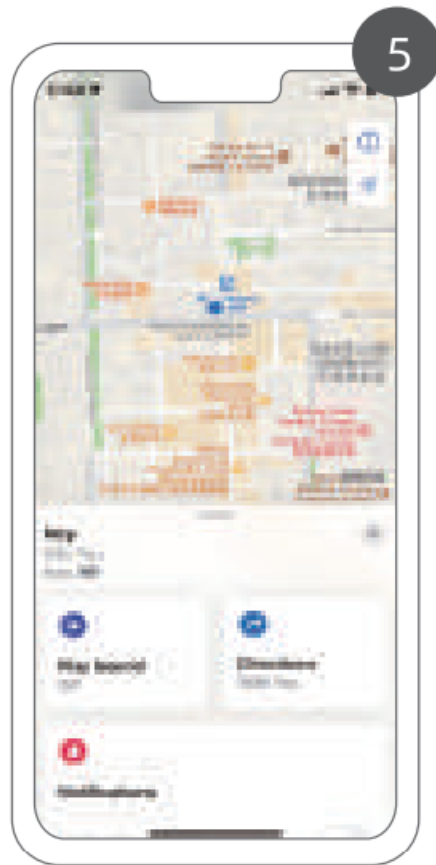


Locate your Item

- Tap 'Play Sound' to make your Wallet Finder beep when it is nearby.
- Find your Wallet Finder's location: Your Wallet Finder's last known location will appear on the map as an emoji you choose during set up, tap 'Directions' to navigate to the last known location.



When Your Item is Lost.

- Under 'Lost Mode', tap the 'Enable' tab, a screen detailing Lost Mode will pop up, tap 'Continue'. You can enter your phone number or email address and tap 'Next'. You may enter a message that will be shared with the person that finds your item. Tap 'Activate' to enable 'Lost Mode'.
- **Note:** When 'Lost Mode' is enabled, 'Notification When Found' is automatically enabled.

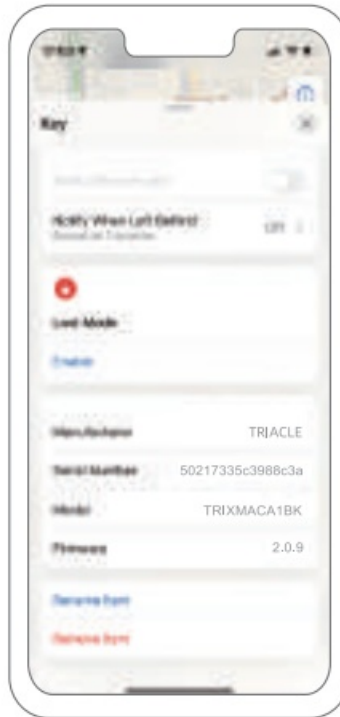

Remove & Reset your Wallet Finder

- Ensure 'Lost Mode' is disabled, tap 'Remove Item' tab, a summary will open, tap 'Remove' to confirm.
- First, remove the item from Find My app then, after the device is powered on, double-click the device button. The device will beep. Long press the device button for eight seconds until the device beeps and the light flashes three times. Release the button to complete factory reset. The device can now be paired.
- The Wallet Finder is now reset and ready to pair to a new device.

Main Functions

1. Locate your item

If your missing item isn't nearby, the Find My app can still help you track it down using the Find My network which consists of hundreds of millions of iPhone, iPad, and Mac devices around the world. Nearby devices securely send the location of your missing device to iCloud, then you can see where it is in the Find My app. It's all anonymous and encrypted to protect everyone's privacy.

2. Play Sound

- Open the Find My app, tap the Items tab, then tap your item.
- Click Play Sound, and the device will beep, so you can find the item easily.

Instructions for device button

1. Power on

After installing the battery, long press the button for five seconds, the device will beep and the device will be turned on.

2. Device status confirmation

Double-click the device button, the device will beep, indicating that the device is working. If the device does not ring, the device is off. press the button for five seconds to turn it on.

3. The device enters the pairing state again

After removing the device in the app, the device will beep, it will not shut down and will be in the pairing mode. If there is no re-pairing within 10 minutes, the device will exit the pairing State. If you want to pair the device again, please click the device button twice, the device will beep. Then, the device enters the pairing state and can be paired with the app again.

4. Factory Reset

First, remove the item from Find My app then, after the device is powered on, double-dlick the device button. The device will beep. Long press the device button for eight seconds until the device beeps. Release the button to complete factory reset. The device can now be paired.

5. Power off

When the device is on, press the device button 5 times in 2 seconds. The device will beep and power off.

FAQ:

1. When can the device be located?

When an item is separated from its owner for a period of time, it can be found by other Apple devices that are part of the Find My network, and the owner can start to get the location of the device.

2.How to confirm whether the device has been turned on?

Double-click the device button, the device will beep, indicating that the device is working. If the device does not ring, the device is off. Long press the button for five seconds to turn it on.

3.How is the device designed to discourage unwanted tracking?

If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways: 1. If you have an iPhone, iPad, or iPod touch, Find My will send a notification to your Apple device. This feature is available on iOS or iPadOS 14.5 or later. 2. If you don't have an iOS device or a smartphone, a Find My network accessory that isn't with its owner for a period of time will emit a sound when it's moved. These features were created specically to discourage people from trving to track you without your knowledge.

4.How is my privacy protected?

Only you can see where your item is. Your location data and history are never stored on the item itself, devices that relay the location of your item also stay anonymous, and that location data is encrypted every step of the way. So not even Apple or Triacle Finder knows the location of your device or the identity of the device that helos find it.

5.What is the Find My network? And how does it work?

The Apple Find My network provides an easy, secure way to locate compatible personal items on a map using the Find My app on your iPhone, iPad, iPod touch, Mac, or the Find Items app on Apple Watch. Simply pair your compatible product with the Apple Find My app to view it right alongside your Apple devices. If your item ever goes missing, you can put it in Lost Mode to display a message and contact information to anyone who might find it. The Find My network is encrypted and anonymous, so no one else, not even Apple or Triacle Finder, can view its location. Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards. Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS,Mac, macOS and watchOS are trademarks of Apple Inc. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license. To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.

How to replace the Battery?

- This product is not battery replaceable!
- This product is a single-use electronic device!
- This product will be scrapped when it reaches the end of its useful life!

Unwanted Tracking Detection:

If your iphone/iPad detects that an unknown item locator is traveling with you, the item locator will play a sound and send a notification to your iPhone/iPad (supports on iOS14.5 or above). These alerts ar only activated when the unknown item locator is not connected to its owner's iPhone/iPad. Your ow! Wallet Finder will not trigger a sound aert when it is properly paired with your iPhone/iPad.



This symbol on product or in instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries accordinc to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.

Power International AS, PO Box 523, 1471 Lerenskog, Norway

Power Norge:

<https://www.power.no/kundeservice/>

T: 21 00 40 00

Expert Danmark:

<https://www.expert.dk/kundeservice/>

T: 70 70 17 07

Power Danmark:

<https://www.power.dk/kundeservice/>

T: 70 33 80 80

Punkt 1 Danmark:

<https://www.punkt1.dk/kundeservice/>

T: 70 70 17 07

Expert Finland:

<https://www.expert.fi/tuki/asiakaspalvelu/>

T: 020 7100 670

Power Finland:

<https://www.power.fi/tuki/asiakaspalvelu/>

T: 0305 0305

Power Sverige:

<https://www.power.se/kundservice/>

T: 08 517 66 000

Documents / Resources

材质: 128g铜版纸 书本装订 折叠尺寸: 100x100mm	TRIACLE Mark Card One Wallet Fnder [pdf] Instruction Manual Mark Card One Wallet Fnder, Card One Wallet Fnder, Wallet Fnder, Fnder
-------------------------------------	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.