




TrickleStar TS1304 8 Outlet Timer Power Strip Instructions

[Home](#) » [TrickleStar](#) » TrickleStar TS1304 8 Outlet Timer Power Strip Instructions 

Contents

- [1 TrickleStar TS1304 8 Outlet Timer Power Strip](#)
- [2 INTRODUCTION](#)
- [3 INSTALLATION REQUIREMENT](#)
- [4 INSTALLATION INSTRUCTIONS](#)
- [5 PRODUCT WARRANTY](#)
- [6 CONNECTED DEVICE WARRANTY](#)
- [7 MAKING A WARRANTY CLAIM](#)
- [8 COPYRIGHT AND DISCLAIMER](#)
- [9 PRODUCT DESCRIPTION](#)
- [10 HOW IT WORKS](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)



TrickleStar TS1304 8 Outlet Timer Power Strip



FOR TECHNICAL SUPPORT

- Toll free : 1-888-700-1098
- <http://www.tricklestar.com/support>

INTRODUCTION

The TrickleStar 8-outlet Timer PowerStrip (hereafter referred to as the Product) is an energy-saving surge protector that supports time-based control over four switched outlets. It also includes four always-on outlets for electronic devices that require constant power. The Product delivers simple automation to reduce wasted energy, such as controlling lamps, seasonal lighting, appliances and peripheral electronics by using a preset schedule. It is easy to install and suitable for both residential and commercial applications.

INSTALLATION REQUIREMENT

POWER CONNECTION

The Product must only be plugged into a grounded receptacle for surge protection to operate correctly. All connected devices should be plugged directly into the Product. Use of an extension cord, adaptor or other power strip in conjunction with the Product will void all warranties.

INSTALLATION INSTRUCTIONS

1. Plug power cord into a grounded 120 VAC 60Hz outlet receptacle.
2. The resettable circuit breaker switch will illuminate when in the “on” position. If a power surge trips the internal breaker, simply reset the power strip by toggling switch to “OFF” and then back to the “RESET” position.
3. The Product features a red Timer Switch that allows the user manually override the timer functionality. When the Timer Switch is moved to the “ON” position, all outlets receive constant power. When the Timer Switch is moved to the “T” position, all four switched outlets are controlled by the mechanical timer.
4. The four switched outlets in-line with the GREEN LED indicator are controlled by the timer. When the GREEN LED indicator is illuminated, the switched outlets controlled by the timer are receiving power.

5. The always-on outlets in-line with the red LED indicator receive constant power.
6. To set the current time on the mechanical timer, turn the dial in the direction of the arrow until the triangular mark corresponds with the present time.
7. To program the mechanical timer, ensure the triangular mark is on the present time. Push the non-detachable trippers around the dial down for the time period you wish the switched outlets to be energized.
Note that each non-detachable tripper represents 15 minutes. For example, if you would like to set the time to switch on your electronic equipment from 11 :00 AM to 1 :30 PM, push the non-detachable trippers situated between 11 :00 AM and 1 :30 PM.
The selected time periods will remain the same until modified by the customer.

PRODUCT WARRANTY

- The Lifetime of the Product is 10 years (hereafter referred to as Product Warranty).
- TrickleStar warrants to the original purchaser that for the Product Warranty it shall be free of defects in design, assembly, material, or workmanship and will repair or replace, at its option, any defective product free of charge.

CONNECTED DEVICE WARRANTY

- TrickleStar will repair or replace, at its option, any devices which are damaged by a transient voltage surge/spike or lightning strike (an "Occurrence") while properly connected through the Product to a properly-wired AC power line with protective grounding.
- If applicable, the telephone line and/or network line must be properly connected and installed, and the antenna cable line must also be properly connected and installed as determined by TrickleStar at its sole discretion.
- This Connected Device Warranty is a limited warranty, subject to the limitations and exclusions set forth herein. TrickleStar will spend to repair or replace the damaged connected equipment, at TrickleStar's option, an amount equal to the fair market value of the damaged equipment or the original purchase price of the equipment, whichever is less, up to the maximum amount of \$20,000.
- TrickleStar reserves the right to review the damaged Product, the damaged devices, and the site where the damage occurred prior to processing a connected device warranty device claim. All costs of shipping the Product and the damaged devices to TrickleStar for inspection shall be borne solely by the purchaser. TrickleStar reserves the right to negotiate the cost of repairs. If TrickleStar determines, in its sole discretion, that it is impractical to ship the damaged devices to TrickleStar, TrickleStar may designate, in its sole discretion, a repair facility to inspect and estimate the cost to repair such devices. The cost, if any, of shipping the devices to and from such repair facility shall be borne solely by the purchaser.
- Damaged Product and connected devices must remain available for inspection until the claim is finalized. The site or location of damage must remain unchanged and available for inspection until inspected by TrickleStar or agents of TrickleStar.
- Whenever claims are settled, TrickleStar reserves the right to be subrogated under any existing insurance policies the claimant may have. All above warranties are null and void if the following:
 - The Product in use during the occurrence was not provided to TrickleStar for inspection upon TrickleStar's request at the sole expense of the purchaser.
 - TrickleStar determines that the Product has not been installed in accordance with the Installation Requirements, or altered in any way.


- TrickleStar determines that the damage did not result from the Occurrence, or that no occurrence in fact took place, or that the repair or replacement of the damaged devices is covered under a manufacturer's warranty.
- TrickleStar determines that the connected devices were not used under normal operating conditions or in accordance with labels or instructions.
- The Product was not plugged directly into a grounded outlet receptacle.
- The Product was "daisy-chained" together in serial fashion with other power strips, UPS devices, other surge protectors, or extension cords.
- A three-to-two-prong adapter was used.
- The Product was not used indoors.
- This Product is not for use with aquariums or other water-related products. Use only indoors and in dry locations. The Connected Device Warranty only protects against damage to properly-connected devices where TrickleStar has determined, in its sole discretion, that the damage resulted from an Occurrence and does not protect against acts of God (other than lightning) such as flood, earthquake, war, vandalism, theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances (i.e. brownouts or sags), non-authorized program, or device modification or alteration. This is the sole warranty of TrickleStar; there are no other warranties, expressed or, except as required by law, implied, including the implied warranty or condition of quality, merchantability or fitness for a particular purpose, and such implied warranties, if any, are limited in duration to the term of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
- In no event shall TrickleStar be liable for incidental, special, direct, indirect, consequential or multiple damages such as, but not limited to, lost business or profits arising out of the sale or use of any Product even if advised of the possibility of such damages. This warranty gives you specific legal rights, and you may also have other rights, which may vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitations may not apply to you.
- This warranty is valid only for the original purchaser of the product. All damage claims against the product must be made within 30 days from the date of the Occurrence and must be accompanied by a receipt for the damaged devices or the warranty is void.
- Warranty is valid in the USA and Canada.

MAKING A WARRANTY CLAIM

- Go to www.tricklestar.com, print our warranty claim form, and email it to warranty@tricklestar.com.
- Provide the following information:
 - Product part number
 - A list of the devices that were connected to the Product at the time of the Occurrence
 - A list of the devices that were damaged during the Occurrence and the extent of the damage
 - The date of the Occurrence
 - When and where you purchased the Product
 - A copy of original purchase receipt
- A Customer Service Representative will then instruct you on how to forward your devices, receipt, and product in use during the Occurrence and how to proceed with your claim.

COPYRIGHT AND DISCLAIMER


PRODUCT DESCRIPTION

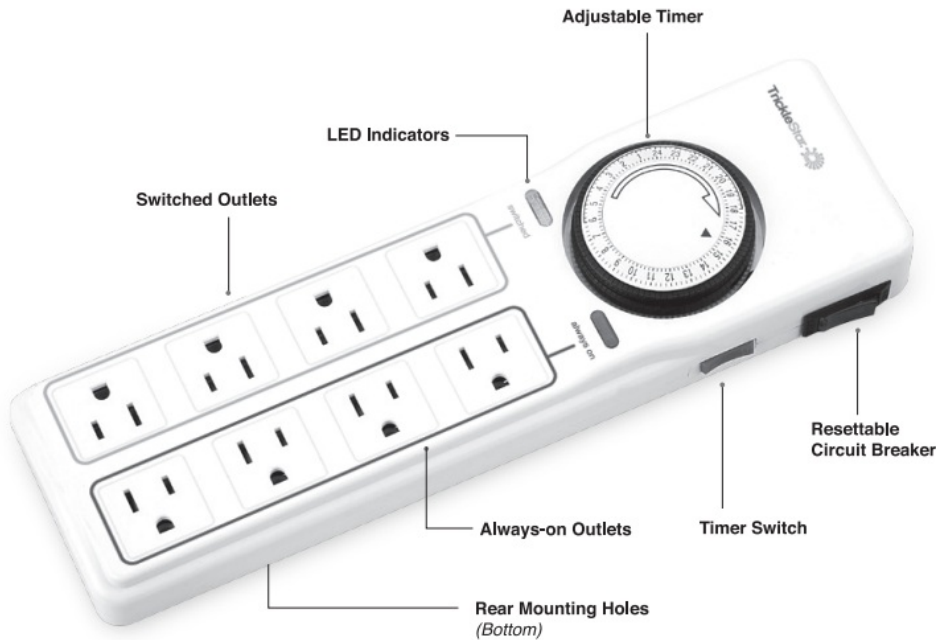

HOW IT WORKS

The TrickleStar 8-outlet Timer PowerStrip is a premium-quality surge protector that reduces wasteful standby power by automatically removing and restoring supplied power to four timer-controlled outlets. Featuring an easy-to-use, 24-hour adjustable timer, the 8-outlet Timer PowerStrip can be set to automatically switch on and off electronics plugged into the switched outlets at desired times daily. It also includes four always-on outlets for devices that require constant power.

Documents / Resources

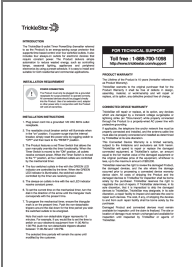	<p>TrickleStar TS1304 8 Outlet Timer Power Strip [pdf] Instructions</p> <p>TS1304, 8 Outlet Timer Power Strip, Timer Power Strip, 8 Outlet Power Strip, Power Strip, Strip</p>
---	--