




TrickleStar TS2301 Water Heater Controller User Guide

[Home](#) » [TrickleStar](#) » TrickleStar TS2301 Water Heater Controller User Guide 

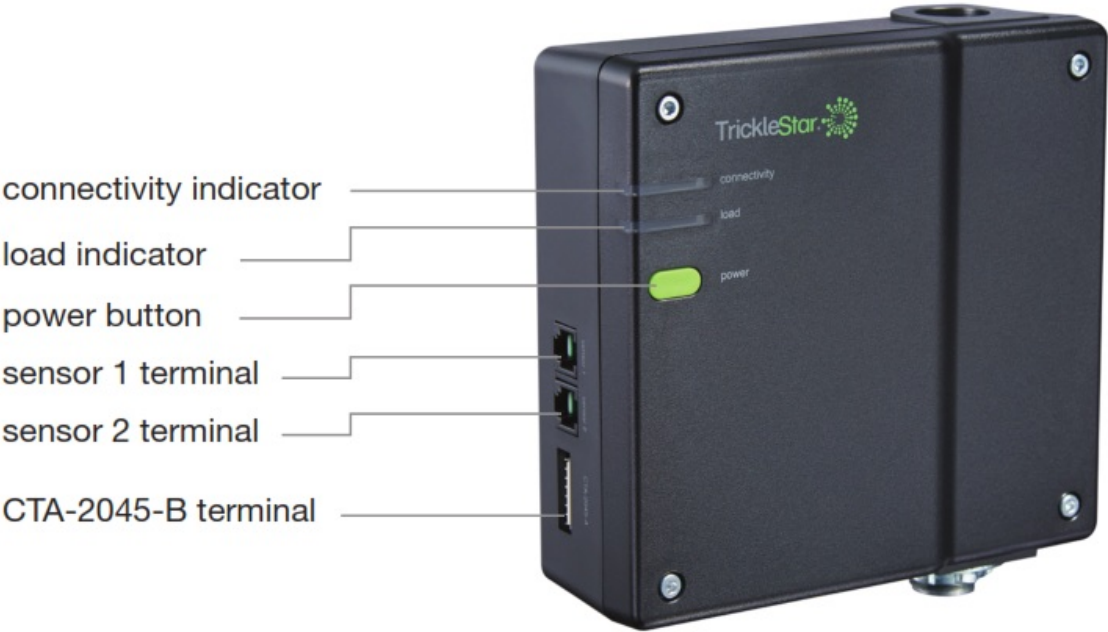

Contents

- [1 Water Heater Controller Features](#)
- [2 Installing Water Heater Controller](#)
- [3 TrickleStar App](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Water Heater Controller Features

LED Indicators

The LED indicators provide the following information:

Indicators	Status	Information
connectivity	Does not light up	There is no power to the Water Heater Controller.
	Lights up in green	The Water Heater Controller is connected to Wi-Fi but there is no demand response activity.
	Lights up in blue	The Water Heater Controller is connected to Wi-Fi and there is demand response activity.
	Flashes in green	The Water Heater Controller has not been connected to Wi-Fi via the Portal or there is a connectivity error
load	Does not light up	The load is off; there is no power to your water heater.
	Lights up in red	The load is on; power is supplied to your Water Heater.
	Flashes in red	An error has been detected, and the load is off as a protective measure.

It is easy to install and set up the Water Heater Controller. For details on the installation, refer to the online Installation Guide:




www.tricklestar.com/Resources/TS2301-Wi-Fi-Electric-Water-Heater-ControllerInstallation-Guide.pdf


Installing Water Heater Controller

1. Turn off the power for your electric water heater either at the Circuit Breaker or at the Main Switch.
2. Turn off the incoming water supply at the shut-off valve for your water heater.




3. Unscrew the electrical cover plate from the water heater.

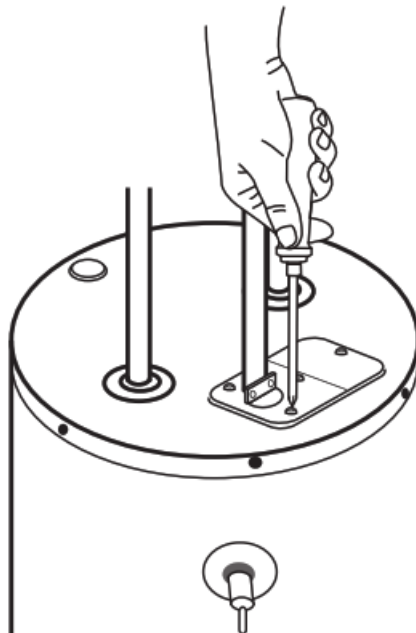


4. Install wiring on the Water Heater Controller.

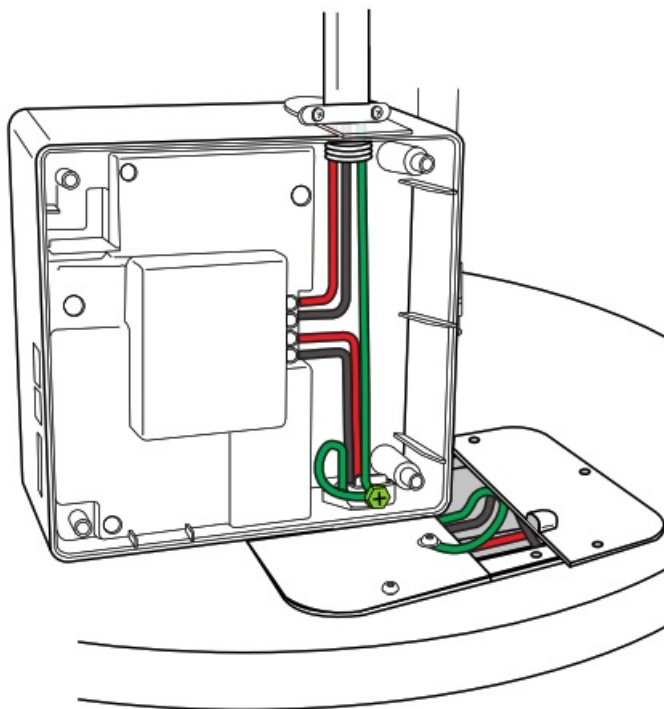

5. Attach the Temperature Sensor to the cold water inlet. If you have purchased a Flood Sensor (sold separately), then attach it about 1/8 in. above the surface of the drain pan. Connect the Temperature Sensor and Flood Sensor to either terminal of sensor 1 or sensor 2 on the Water Heater Controller.

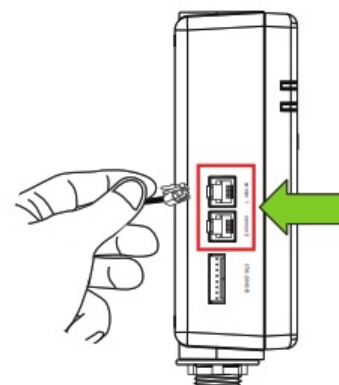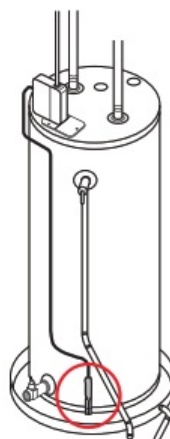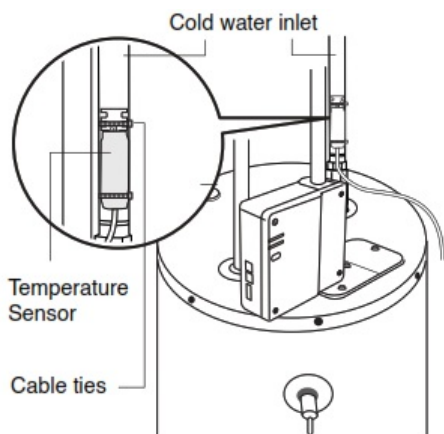

6. If you have a CTA-2045-B communication port adapter, connect it to the CTA-2045-B terminal on your Water Heater Controller.

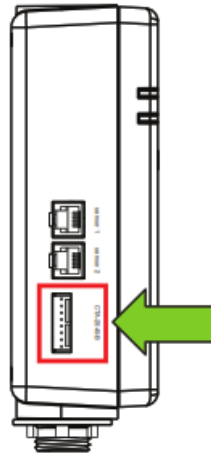

After you have completed the installation, be sure to create a Portal account.



<https://portal.tricklestar.com>

Step 1

Create a Portal account using the QR code or through the website: portal.tricklestar.com Then, log in to the Portal.




Step 2

Add your device and follow the instruction guide to connect your device to Wi-Fi.



Step 3

Select your settings for the TrickleStar Water Heater Controller. (Optional)

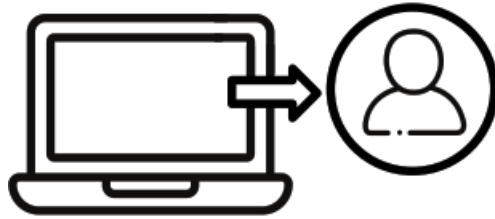

Step 4

If contractor account is used for configuration, transfer ownership to the homeowner.

 


Step 5


Add the TrickleStar App on the homeowner's smartphone. (Optional)

Connecting Your Water Heater Controller to Wi-Fi via the Portal


1. Log in to your TrickleStar Portal account.

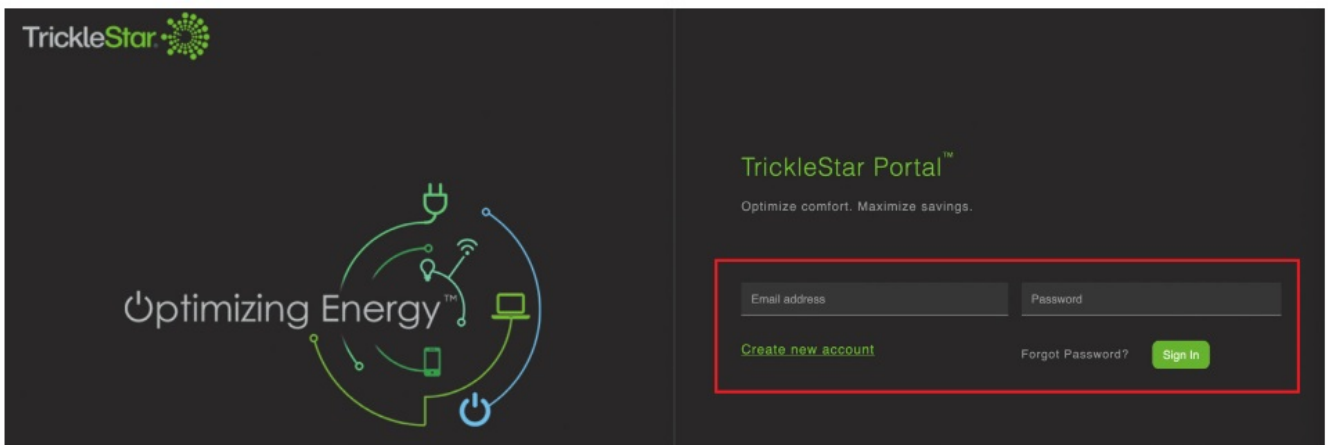

 2. Select Devices and click "Add New +". Then, select Wi-Fi Water Heater Controller

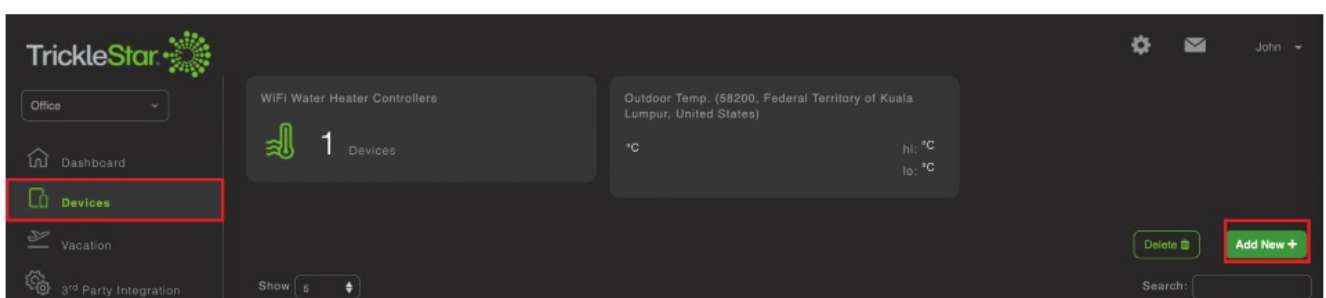

 
- Follow the instruction guide to connect your Water Heater Controller to Wi-Fi via the Portal

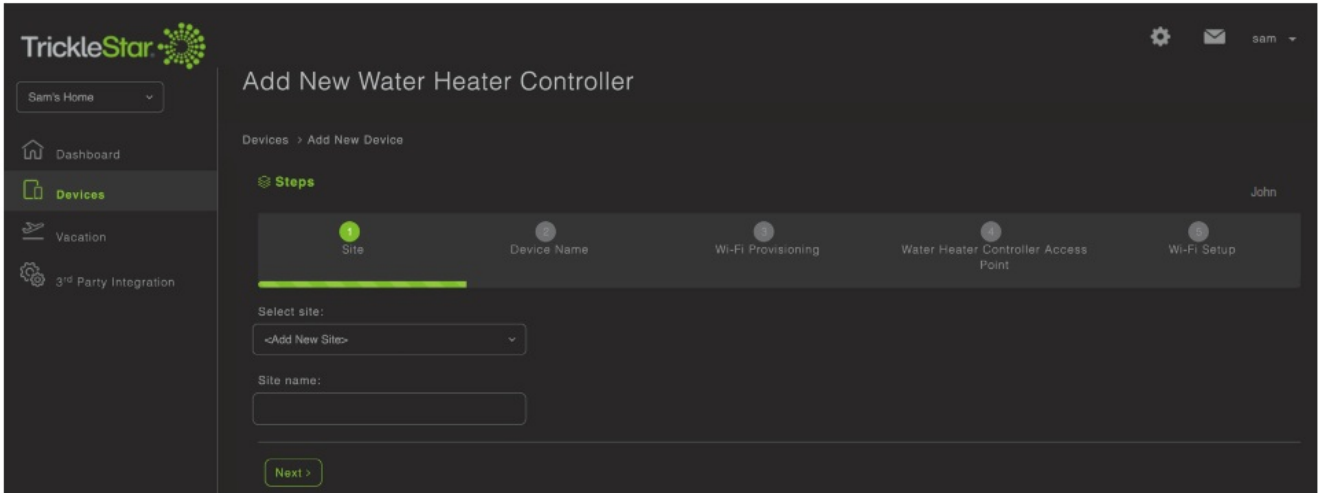





 - When you have connected your Water Heater Controller to Wi-Fi via the TrickleStar Portal, your Water Heater Controller is ready to use.

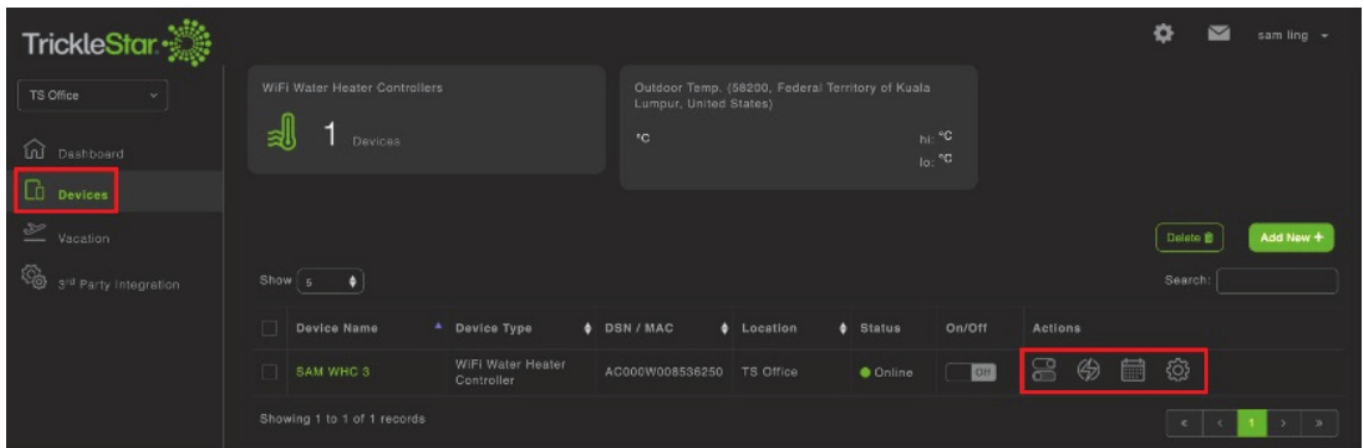TrickleStar Portal (portal.tricklestar.com)

On the Devices page, you can use the icons under Actions to change the settings for your device.



Portal Icons	Description	Functions
	Control	Turn on/off the Boost and Mode function and view the power consumption (W).
	Energy	Monitor daily/weekly/monthly energy usage.
	Schedules	Show your daily/weekly schedule and add/edit/delete a scheduled event.
	Settings	Advanced settings for your Water Heater Controller.

 
TrickleStar App







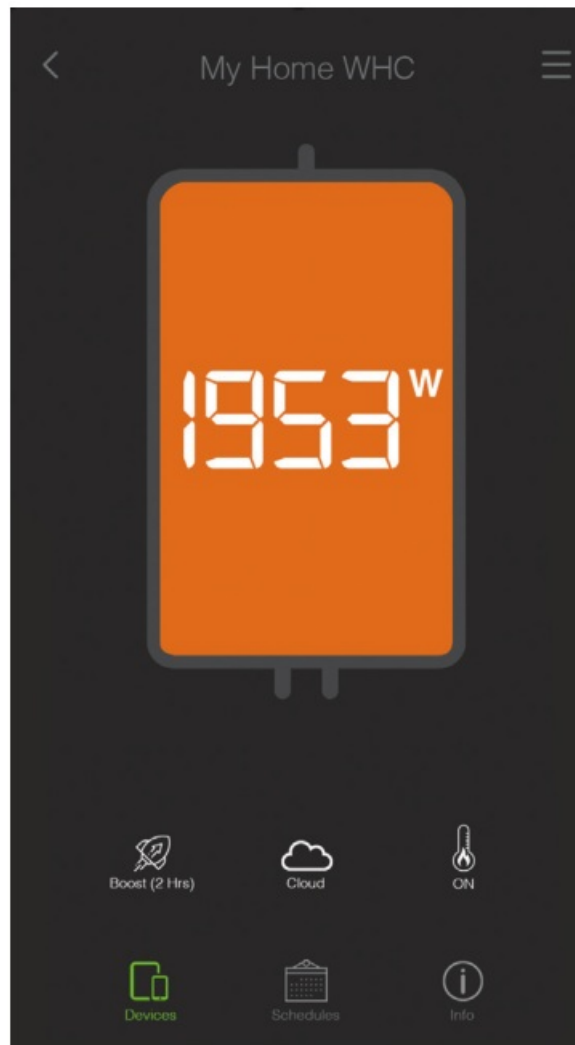

Be sure that you have created a Portal account via portal.[tricklestar.com](https://portal.tricklestar.com)

1. Enable the Wi-Fi and Location Services on your smartphone.
2. Download and install the Tricklestar App from the Google Play Store or Apple App Store.




3. Sign in to the Tricklestar App with your same Portal account email and password.



App Icons	Description	Description Functions
	Devices	Turn on/off the Boost and Mode function and view the power consumption (W).
	Schedules	Show your daily/weekly schedule.
	Info	Show information for the Water Heater Controller, your Energy Usage, and Services settings.
	Water leak	Leak icon will only be displayed when a leak is detected.
	Boost	Enable Boost Function.
	Load On	Your Water Heater is ON.
	Load Off	Your Water Heater is OFF.
	Cloud/LAN	Cloud = different Wi-Fi network; LAN = same Wi-Fi network

Documents / Resources

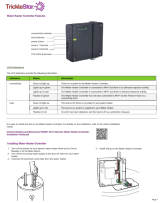	TrickleStar TS2301 Water Heater Controller [pdf] User Guide TS2301, Water Heater Controller
---	--

References

-  [TrickleStar Energy Portal | User Login](#)