Trimble.
TDC6 Rugged
Handheld
Computer





Trimble TDC6 Rugged Handheld Computer User Guide

Home » Trimble » Trimble TDC6 Rugged Handheld Computer User Guide Ta

Contents

- 1 Trimble TDC6 Rugged Handheld Computer
- **2 Product Usage Instructions**
- 3 In the box
- 4 Optional accessories
- 5 Parts of the device
- 6 Inserting the nanoSIM and microSD cards (optional)
- 7 Installing the battery
- 8 Removing the battery
- 9 Charging the battery
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts



Trimble TDC6 Rugged Handheld Computer



Specifications:

• Product: Trimble TDC6

• Type: Rugged Handheld Computer

• Ports: USB Type-C port

• Cameras: Front and Rear cameras

• Connectivity: NFC

Product Usage Instructions

Inserting Cards:

- 1. Pull out the nanoSIM / microSD card holder.
- 2. Insert your cards as needed:
 - Two nanoSIM cards or
 - One nanoSIM card and one microSD card
- 3. Align the card holder with the slot and push it fully in.

Installing the Battery:

- 1. Align the battery with the compartment and push it down.
- 2. Press the battery down to secure it in place.

Removing the Battery:

- 1. Press and hold the plastic clips at the end of the battery.
- 2. Push the battery forward and lift to remove it.

Checking and Charging the Battery:

- 1. To check battery status:
 - · Red LED: Battery is charging
 - · Green LED: Battery is fully charged
 - Blue LED: New message/notification
- 2. Before first use, charge for 4 hours.
- 3. During regular use, charge for 4 hours to fully recharge.
- 4. To charge:
 - 1. Connect USB Type-C cable to the port on TDC6.
 - 2. Connect other end to AC power adapter.
 - 3. Plug adapter into electrical outlet.

Frequently Asked Questions (FAQ):

Q: What should I do if any items are missing or damaged?

A: Contact your Trimble representative for assistance regarding missing or damaged items.

Q: How many cards can be inserted in the device?

A: The device can hold either two nanoSIM cards or one nanoSIM card and one microSD card simultaneously.

In the box

Make sure the following contents are in the box:

- Trimble® TDC6 rugged handheld computer, with bumpers and glass screen protector installed
- Battery
- · USB charging cable
- A QR code card, linking to the Hardware Help Portal, with links to the Quick Start Guide and User Guide

If any items are missing or damaged, contact your Trimble representative.

Optional accessories

- · Replacement bumpers
- · Replacement battery
- · Replacement glass screen protector
- · AC power adaptor
- · Controller mounting bracket
- · Pole bracket

Parts of the device





- 1. Bumper screw holes
- 2. Front camera
- 3. Volume keys
- 4. Function Left key
- 5. Power key

- 6. Function 1 key
- 7. Function Right key
- 8. Rear camera
- 9. Speaker
- 10. Pole bracket mount holes
- 11. Microphone
- 12. NFC
- 13. Microphone
- 14. USB Type-C port

Inserting the nanoSIM and microSD cards (optional)

1. Pull out the nanoSIM / microSD card holder.







2. The card holder can hold two nanoSIM cards, or one nanoSIM card and one microSD card at a time. Insert your cards as needed, as follows:

Two nanoSIM cards:



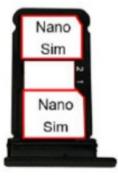

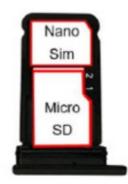

3. Align the card holder with the slot, and push it fully in. Make sure the cards stay flat while pushing the card holder back into the slot.

Installing the battery

1. Align the battery with the battery compartment, as shown below:



2. Press and hold the two plastic clips at the end of the battery, then push the battery forward and down into the battery compartment.



3. Press the battery down to secure it in place.



Removing the battery

1. Press and hold the two plastic clips at the end of the battery.



2. Push the battery forward and lift to remove it.



WARNING – There is a risk of fire and burns if the battery is handled improperly. DO NOT disassemble, crush, puncture, or short-circuit external contacts, or dispose of the battery pack in fire or water. DO NOT attempt to open or service the battery. Dispose of used batteries according to local recycling guidelines in your area.

CAUTION – To ensure the device is working properly, keep all connectors away from contaminants such as dust, grease, mud, and water. Negligence may cause the device to lose communication, short-circuit, or overheat. If the connector is damaged, ensure the connector is fully repaired before using the device to avoid short-circuiting.

Checking the battery charge / LED status

LED	Description
Red	Battery is charging
Green	Battery is fully charged
Blue	New message / notification

If there is no battery in the device, the LED will not be lit even when the device is connected to a main power source.

Charging the battery

Before using the device for the first time, charge the battery for approximately 4 hours.

During regular use, charge for 4 hours to fully recharge the battery.

To charge the battery, use the USB charging cable supplied in the box, and the AC power adaptor (optional accessory, must be purchased separately if needed).

- 1. Connect the USB Type-C cable to the USB Type-C port on the TDC6 handheld.
- 2. Connect the other end of the USB cable to the AC power adapter.
- 3. Plug the AC power adaptor into an electrical outlet.

The charging LED indicator turns red when the battery is charging.

© 2024, Trimble Inc. All rights reserved. Trimble, and the Globe & Triangle logo are trademarks of Trimble, registered in the United States and in other countries. All other trademarks are the property of their respective owners.

Rev A (January 2024).

trimble.com

Documents / Resources



Trimble TDC6 Rugged Handheld Computer [pdf] User Guide

TDC6 Rugged Handheld Computer, TDC6, Rugged Handheld Computer, Handheld Computer, Computer

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.