



TRIPLTEK T93 Android Tablet User Guide

[Home](#) » [TRIPLTEK](#) » TRIPLTEK T93 Android Tablet User Guide 



T93 Android Tablet



User Guide

Contents

- 1 Read me first
- 2 Unpack
- 3 Installing a SD card
- 4 Getting started
- 5 Indicator icons
- 6 Documents / Resources
 - 6.1 References
- 7 Related Posts

Read me first

- Please read this manual before operating your TRIPLTEK Tablet, and keep it for future reference.
- The descriptions in this manual are based on the default settings.
- Images and screenshots used in this manual may differ from the actual product.
- Available features and additional services may vary by device, software or cellular service provider.
- Our company is not liable for performance issues caused by third-party applications.
- The TRIPLTEK T93 is Google Play Protected Certificated from the Factory, Google APPs are pre installed.
- For more information using Android 12 OS visit www.support.google.com/android
- For more recent information about your TRIPLTEK please visit www.tripltek.com/support

Unpack

Check your product box for the following items

- TRIPLTEK 9
- User manual
- USB Fast Power Charger
- USB to Subic charging and data cable
- USB to Sub adapter
- Hand Strap and hardware

For additional accessories. Please visit the TRIPLTEK Website.

Installing a SD card

For additional storage, you can install a SD card.

1. Press with the pin into the slot to extract the SIM card/ SD card Tray.
2. Place the SD card into the upper part of the Tray.
3. Place the Tray into the tablet all the way in.
4. Select: "Use for Portable Storage"

Notice: TRIPLTEK uses approved industry standards for memory sd cards, but some brands may not be fully compatible with your device.

Installing a SIM card for cellular service

The TRIPLTEK 9 is an Unlocked device, which means it can be used in any cellular carrier that supports the 4G bands installed on it. You can see these bands on the NETWORKING SPECIFICATIONS page. In order to use the Phone function, install a micro SIM card from your preferred carrier, follow the instructions below.

1. Press with the pin into the slot to extract the SIM card/SD card Tray.



2. Place the SIM card into the lower part of the Tray facing the back of the TRIPLTEK(see picture).
3. Place the Tray into the tablet all the way in.

Turn on your device, reboot, and shut down

To turn on your device, press and hold the power key. To reboot your device, press and hold the power key, select “reboot”. To turn off your device, press and hold the power key, select “power off”.

Getting started











Home screen

The home screen has multiple panels. Scroll left or right to the panels on the home screen, you can view indicator icons, widgets, shortcuts to applications, and other items. Swipe left to see other APPs installed on your device.

Task bar

The task bar is shown at the top of the screen. It displays commonly used option buttons, battery level indicator, current time and other indicator icons of running apps.

Indicator icons

Icon		Icon	
	Open WiFi Network		Airplane Mode
	Wi-Fi connected		New email
	Signal strength		New SMS/MMS
	BT connected		Call in progress
	Uploading data		Missed call
	Downloading data		Call on hold
	USB connection		Call Forwarding
	Alarm Set		Power level
	Music being played		Don't disturb
	Auto-rotate		Location Services
	Flashlight		

TRIPLTEK

