



# Home » Tripp Lite » TRIPP-LITE SMART1500LCDT Lite Series 1500VA 900W Line Interactive AVR Instruction Manual €

#### Contents [ hide ]

- 1 TRIPP-LITE SMART1500LCDT Lite Series 1500VA 900W Line Interactive AVR
- **2 IMPORTANT INFORMATION**
- 3 PROCEDURES
- 4 CONTACT US
- 5 Documents / Resources
  - 5.1 References



# TRIPP-LITE SMART1500LCDT Lite Series 1500VA 900W Line Interactive AVR



## **IMPORTANT INFORMATION**

#### **Observe Proper Precautions**

• Batteries can present a risk of electrical shock and burn from high short-circuit currents. Do not dispose of batteries in case of a fire. Do not open the UPS or

batteries. Do not short or bridge the battery terminals with any object.


- During hot-swap battery replacement, the UPS will not provide backup power in the event of a blackout or other power interruptions.
- Do not operate UPS without the correct batteries.



## **PROCEDURES**


## Step 1

Using a Phillips screwdriver, remove the front panel's 4 screws located on each corner.

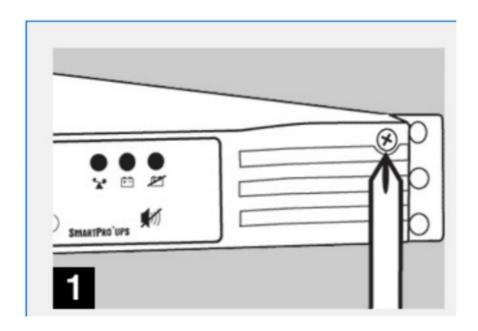

## Step 2


Disconnect the batteries from the unit.

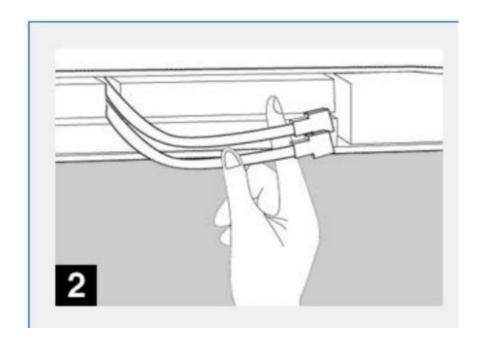

Step 3


Remove and properly dispose of old batteries.

**Note:** The batteries are recyclable. For more information on battery recycling, you may check with a battery recycler in your area or contact Battery Solutions, Inc. (7266 Kensington Road, Brighton, Michigan 48116) by phoning 1 800-852-8127 or visiting their website at <a href="https://www.batteryrecycling.com">www.batteryrecycling.com</a>

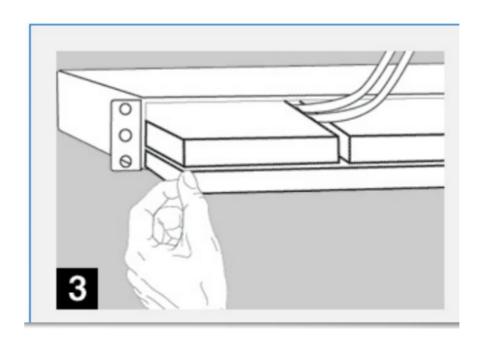


## Step 4

Install new batteries.

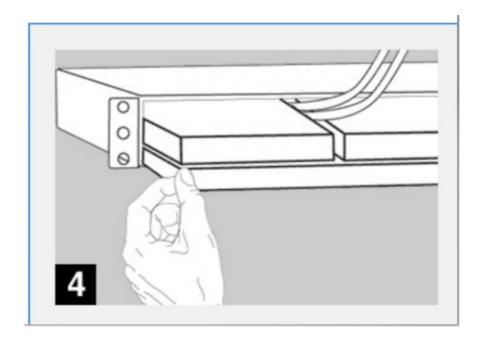


## Step 5

Reconnect batteries by attaching the connectors from the unit to the batteries (black-to-black and red-to-red).

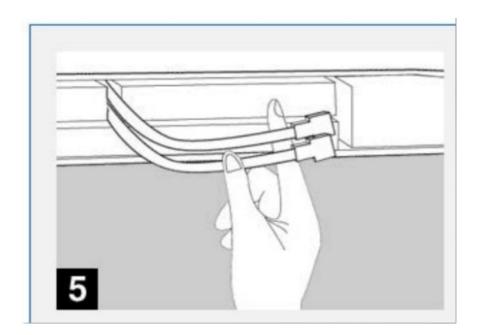

# Step 6

Re-attach the front panel and its 4 screws using a Phillips screwdriver.

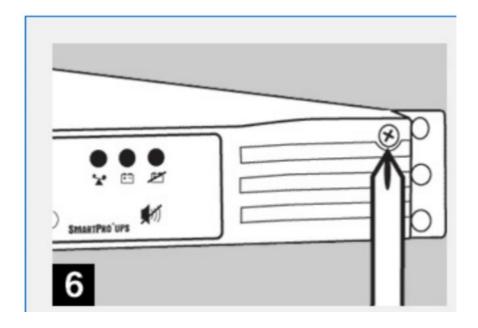

### **CONTACT US**

#### For More Information

- Visit our website www.tripplite.com
- Contact our Tech Support Team at 773.869.1234.

## **Documents / Resources**



TRIPP-LITE SMART1500LCDT Lite Series 1500VA 900W Line Interactive

AVR [pdf] Instruction Manual

SMART1500LCDT Lite Series 1500VA 900W Line Interactive AVR, SMA RT1500LCDT, Lite Series 1500VA 900W Line Interactive AVR, 900W Line Interactive AVR, Interactive AVR

#### References

- User Manual
- Tripp

Lite

• 900W Line Interactive AVR, Interactive AVR, Lite Series 1500VA 900W Line Interactive AVR, SMART1500LCDT, SMART1500LCDT Lite Series 1500VA 900W Line Interactive AVR, Tripp Lite

## Leave a comment

Your email address will not be published. Required fields are marked*	
Comment *	
Name	
Email	
Website	
☐ Save my name, email, and website in this browser for the next time I comment.	
Post Comment	
Search:	
e.g. whirlpool wrf535swhz	earch
Manuals+   Upload   Deep Search   Privacy Policy   @manuals.plus   YouTube	

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.