



TRiSTAR KA 5819 Convectector Heater with WiFi Instruction Manual

[Home](#) » [Tristar](#) » TRiSTAR KA 5819 Convectector Heater with WiFi Instruction Manual 

TRiSTAR KA 5819 Convectector Heater with WiFi Instruction Manual



Contents

1 SAFETY

2 PARTS DESCRIPTION

3 BEFORE THE FIRST USE

4 USE

5 Timer

6 Remote Control

7 Anti_frost mode

8 App control

9 Specifications

10 CLEANING AND MAINTENANCE

11 DECLARATION OF CONFORMITY


12 Support

13 Documents / Resources

13.1 References


14 Related Posts

SAFETY

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- The appliance must be placed on a stable,level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
-  **WARNING:** In order to avoid overheating, do not cover the heater.
- **CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- Children of less than 3 years should be kept away unless continuously supervised.
- Do not use the appliance with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Please do not install the appliance close to curtains and other combustible materials. This could cause a fire.
- The heater must not be located immediately below a socket-outlet.
- The heater needs to be installed so that the switches and other controls cannot be touched by a person in the bath or shower.

PARTS DESCRIPTION

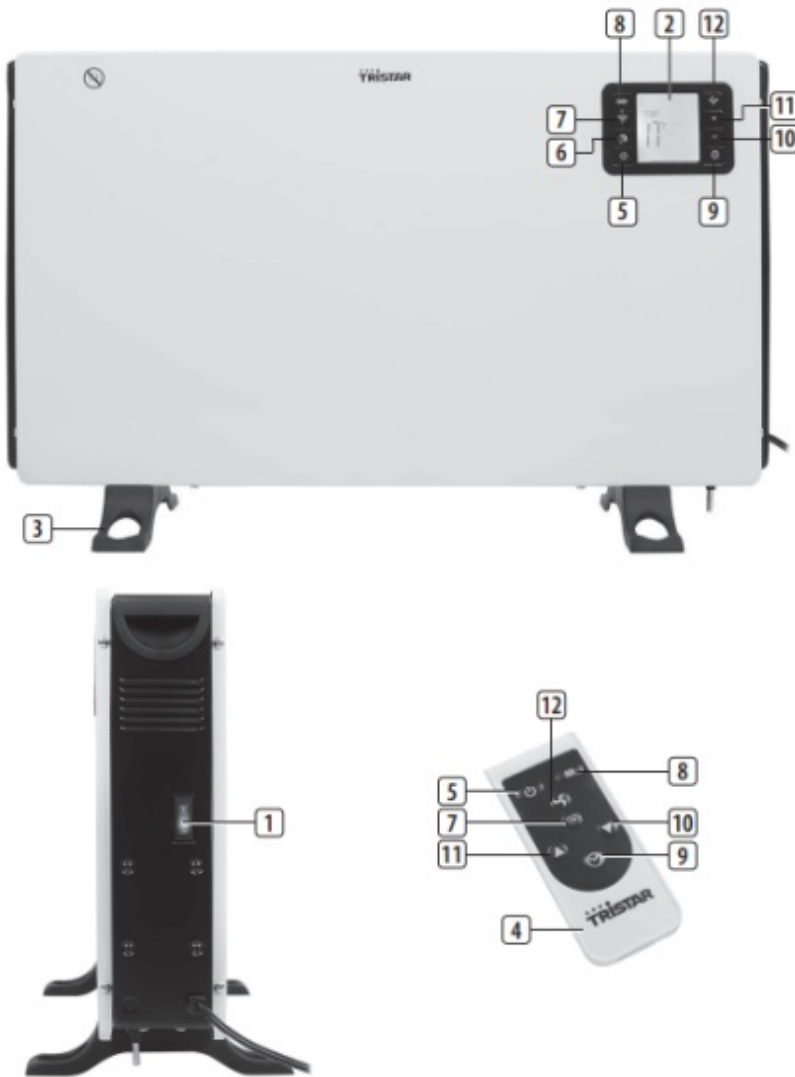

1. Power switch
2. Operational panel/ display
3. Legs
4. Remote
5. On/ off button
6. Infrared receiver for remote control
7. WI-FI button (with indication light)
8. Heat setting button
9. Timer button
10. Temperature decrease button
11. Temperature increase button
12. Fan button

BEFORE THE FIRST USE

- Turn the heater on its side and screw on the included legs with the supplied screws.
- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50/60Hz)
- When the device is turned on for the first time, a slight odour will occur. This is normal, ensure adequate ventilation. This fragrance is only temporary and will disappear soon.

USE

- Put the plug into a grounded outlet and switch on the device with the main power switch.
- When switched on, the Operational panel will display the room temperature.
- The operational buttons are on both sides of the display.
- Press Power button to on/off the Heater.
- Press Infrared receiver button to switch on /off remote-control use.
- Press Wi-Fi button (with indication light) to connect the device to the app.
- Press Heat setting button to select between four modes.(750W / 1250W / 2000W and Anti-frost mode.)
- Press Timer button to set the device on timer.
- Press " + " or " - " to set the temperature.
- Press Fan button to switch on/off the fan in the device.
- Never place objects on the heater, such as clothing or towels. Never use the heater in the bathroom.

Timer

- This model is fitted with a 24hr timer set using the button beside the display or by the remote control or by the app.
- Press the timer button once to increase the timer by 1 hour, until it reaches 24:00.
- The timer function is enabled in 5 seconds after the time is set.
- To switch off the timer, press the timer button once after it reaches 24:00.

Remote Control

- Press the Infrared receiver button on the operational panel to operate the device with a remote control.
- On/ Off button.
- Heat setting button.
- Fan button.
- Wi-Fi button.
- Temperature increase button.
- Temperature decrease button.
- Timer button.

Anti_frost mode

When the room temperature is decreased below 5°C in stand-by mode, The device automatically switches to 2000W heating mode until the room temperature reaches 9°C.

App control

- Connect the appliance to Wi-Fi.
- Download the "TUYA SMART" app from your chosen app/play store on your smart device by scanning the QR code or by searching the app.



Android



IOS

- Wireless technology – WiFi
- Operating Frequency – 2.4GHz
- Max Radio frequency power :20 dbm.

Specifications

- **Wireless technology:** Wi-Fi
- **Operating frequency:** 2.4GHz
- **Max. radio-frequency power:** 20 dBm

CLEANING AND MAINTENANCE

- Before cleaning, unplug the appliance and wait for the appliance to cool down.

- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Clean the two air outlets (above and below) by using a vacuum cleaner to remove dust from inside.

DECLARATION OF CONFORMITY

- Hereby, Smartwares Europe declares that the radio equipment type KA 5819 is in compliance with Directive 2014/53/EU
- The full text of the EU declaration of conformity is available at the following internet address:
www.tristar.eu/doc

ENVIRONMENT



This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.




Support

You can find all available information and spare parts at www.tristar.eu!



Tristar Europe B.V.
Jules Verneweg 87
5015 BH Tilburg
The Netherlands



	TRiSTAR KA 5819 Convector Heater with WiFi [pdf] Instruction Manual KA 5819, Convector Heater with WiFi
	TRiSTAR KA 5819 Convector Heater [pdf] Instruction Manual KA 5819 Convector Heater, KA 5819, Convector Heater
	TRiSTAR KA-5819 Convector Heater [pdf] Instruction Manual KA-5819, Convector Heater, KA-5819 Convector Heater, Heater

References

- *** [Tristar | Household appliances - Unbeatable basics for your home](#)
- *** [Declaration of Conformity | Tristar](#)