



## Tronsmart T6 Plus Upgraded Edition Bluetooth Speaker User Manual

[Home](#) » [Tronsmart](#) » Tronsmart T6 Plus Upgraded Edition Bluetooth Speaker User Manual 

### Tronsmart T6 Plus Upgraded Edition Bluetooth Speaker User Manual



Thank you for purchasing the Tronsmart T6 Plus Upgraded Edition Bluetooth Speaker. The T6 Plus Upgraded Edition is equipped with Bluetooth 5.0 for optimal connection and pairing with your Bluetooth enabled device. Please read the user manual before use and keep it handy for future reference. If you have any additional questions or comments, please contact us by email at: [support@tronsmart.com](mailto:support@tronsmart.com)

## Contents

[1 SPECIFICATIONS](#)

[2 BUTTON  
CONFIGURATION](#)

[3 PACKAGE CONTENTS](#)

[4 How to Use](#)

[5 Care & Maintenance](#)

[6 Warranty Information](#)

[7 FCC Statement](#)

[8 Documents / Resources](#)

[8.1 References](#)

 
[9 Related Posts](#)

## SPECIFICATIONS

Model	T6 Plus Upgraded Edition
Material	ABS + aluminum
Bluetooth	5.0
Bluetooth profile	A2DP V1.3, ACRCP V1.4, HFP V1.6
Bluetooth transmission	Up to 20m/66ft (open area)
Waterproof	IPX6
Output power	2 x 20W Max
Power supply	DC 5V/3A, via USB-C port
Frequency range	20Hz – 16000Hz
Battery	Built-in lithium battery, 3300mAh x 2



Playtime	Up to 15 hours (around 65 dB)
Talk time	Up to 20 hours (on a 70% volume)
Standby	About 24 months
Charging time	3 – 5 hours
Functions	Hands-free phone call, aux-in, TF/Micro SD card, USB flash drive, power bank
Dimension	8.27 x 3.31 x 3.31 inches / 210 x 84 x 84 mm
Weight	750 ± 5 g / 26.46 ± 0.2 oz

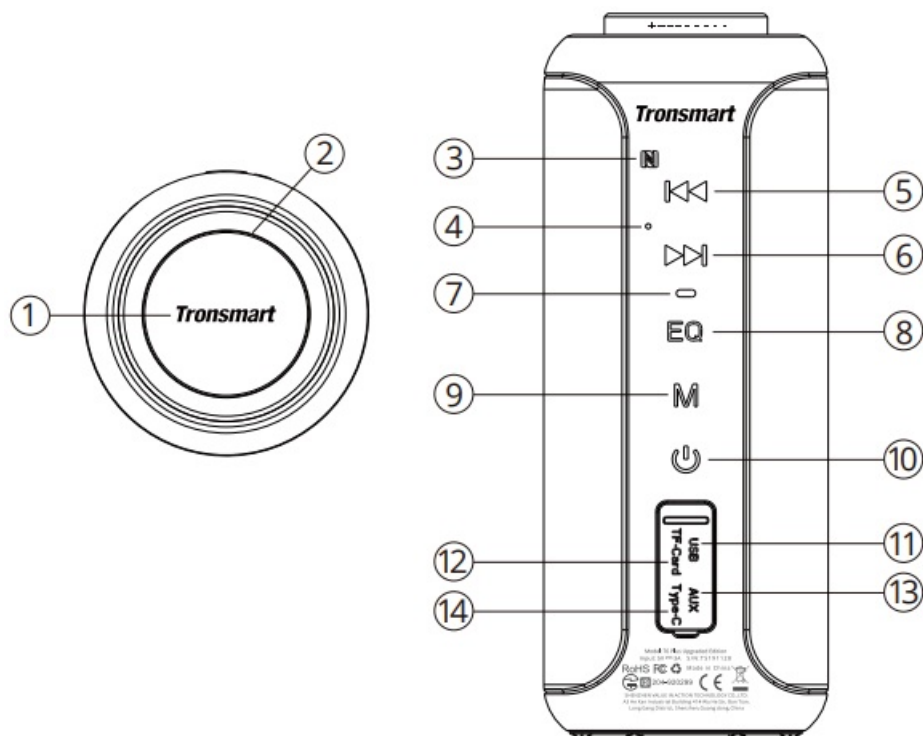



## BUTTON CONFIGURATION



1. Play/Pause; Volume +/-; Hands-free; Voice assistant
2. Bluetooth indicator
3. NFC
4. Microphone

5. Previous track
6. Next track
7. EQ / TWS / Charging indicator light
8. EQ music effects / TWS pairing
9. Music playing mode
10. Power ON/OFF; Reset
11. USB-A port (USB flash drive / power bank function)
12. TF/Micro SD card slot
13. Aux-in port
14. USB-C charging port

	Power On: Hold for 1 second to turn it on.
	Power Off: Hold for 2 seconds to turn it off.
	Volume +/-: Rotate for volume up and down.
	Play/Pause: During music playing mode, tap to play or pause the music.
	Answer/End a phone call: During an incoming call, tap to answer or hang up the phone call.
	Reject a phone call: During an incoming call, hold for 2 seconds to reject the phone call.
	Redial: During Bluetooth connected mode, double tap quickly to redial the last dialed-out number.
	Voice assistant: After your device is paired with the speaker, hold for 2 seconds to activate the voice assistant.

 
 
	Tap to choose previous track.
	Tap to choose next track.
	Three EQ effects switching: Tap to switch three equalizer audio effects between Balanced, 3D, and Deep Bass in turn.
	TWS Pairing: Hold for 2 seconds to pair two T6 Plus Upgraded Edition speakers wirelessly .
	Press to switch music playing modes between Bluetooth, Aux-in, Micro SD card and USB flash drive.
	Bluetooth disconnect: Hold for 3 seconds to disconnect Bluetooth pairing.
	Reset: Hold for 5 seconds until a sound prompt is heard to clear all paired devices and reset to factory default settings.

## PACKAGE CONTENTS

- 1 x T6 Plus Upgraded Edition Bluetooth speaker
- 1 x 3.5mm audio cable
- 1 x USB-C charging cable
- 1 x Warranty card
- 1 x User manual

## How to Use



1. Turn On/Off
2. Bluetooth Connection & Disconnect

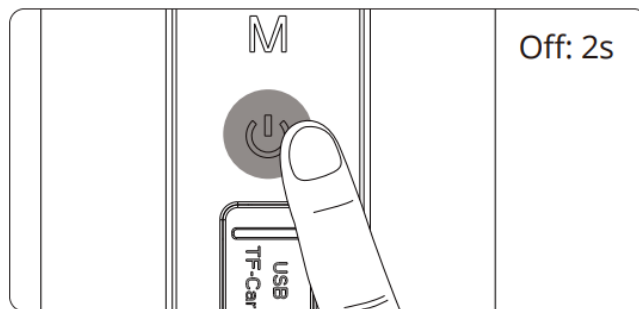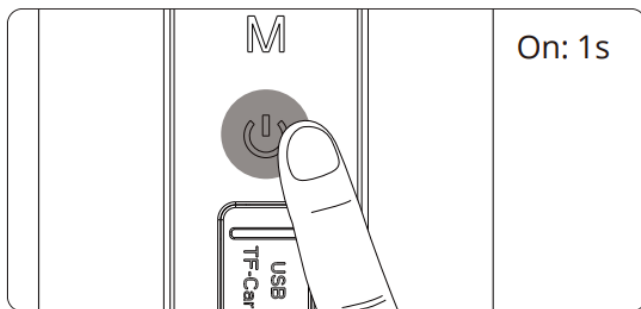


Turn on the speaker and your device's Bluetooth settings, search for ' T6 Plus Upgraded Edition' then tap to connect.

Hold the 'M' button for 3 seconds to disconnect Bluetooth pairing.

### 3. Pair Two T6 Plus Upgraded Edition Speakers

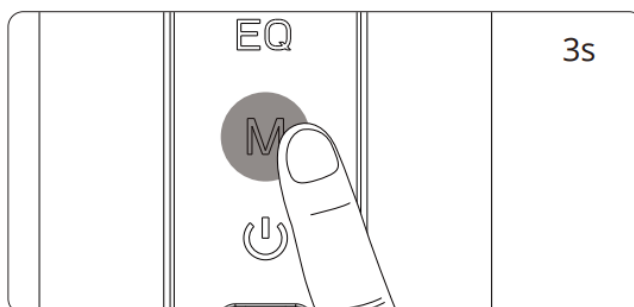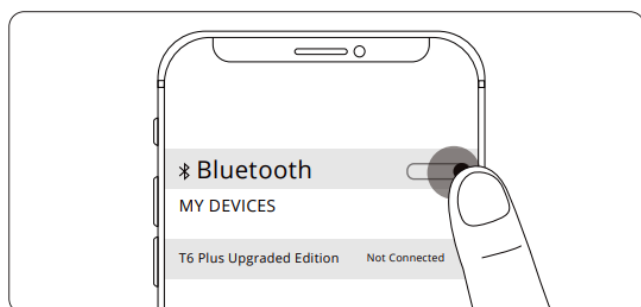  

 
Turn two speakers on and confirm they're not paired any Bluetooth devices.

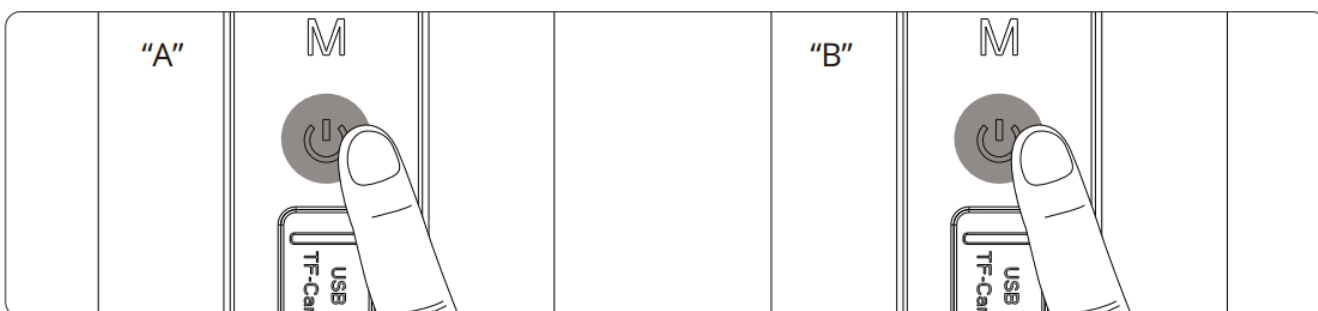

Hold the 'EQ' button for 2 seconds of either speaker.

 After two speakers have paired with each other successfully, you will hear a sound prompt and the indicator lights will go on yellow.

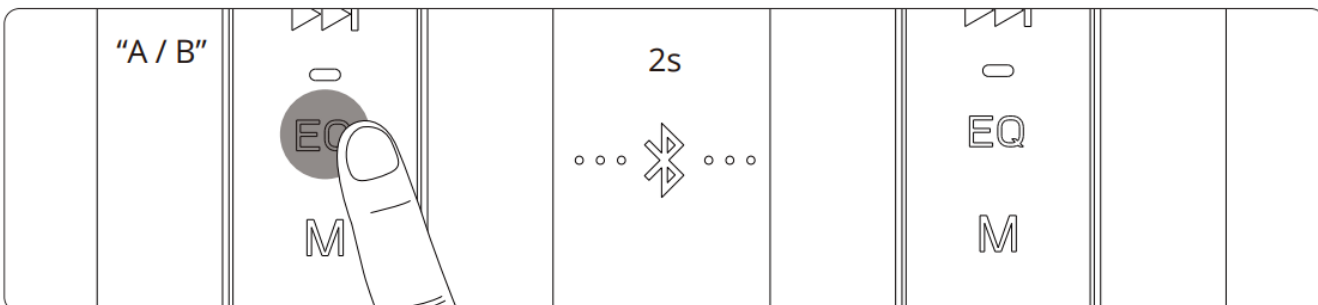


### 4. Disconnect Two Speakers



Hold the 'EQ' button for 2 seconds again to disconnect two speakers from each other.

### 5. Three Equalizer Audio Effects Switching

Tap the 'EQ' button to switch three equalizer audio effects between Balanced, 3D, and Deep Bass in turn.

Balanced (default)		Without an indicator light
3D		White light
Deep Bas		Green light

#### 6. NFC Streaming

Confirm Bluetooth & NFC functions are enabled on your device, and then put the device on the NFC area of the speaker to pair automatically. If you need to disconnect NFC streaming, put the device back to the area again to disconnect.

#### 7. USB-A Power Bank Function

This speaker carries a USB charge out function that will automatically detect your device and begin to charge it when the charging cable is plugged into the USB-A port. The output power is up to DC 5V/1A. In order to maintain stable music playing performance, it's not recommended to use the music and power bank function at the same time.

#### 8. Aux-in Mode

Simply connect the speaker with your non-Bluetooth device via the 3.5 mm audio jack cable.

**Note:** After plugging in an audio cable, the speaker will automatically switch to Aux-in mode.

#### 9. TF/Micro SD Card Slot Mode

The speaker will play the music from your TF/Micro SD card when plugging the card into the slot. The maximum supported memory is 32 GB.

#### 10. USB Flash Drive Mode

The speaker will play the music from your USB flash drive when plugging the USB into the USB-A port. The maximum supported memory is 32 GB.



#### 11. Reset to Factory Default Settings

Hold the 'M' button for 5 seconds until a sound prompt is heard, which means that the speaker has been reset to factory default settings.

#### 12. Auto Power Off

The speaker will power off automatically after 1 hour if it does not pair with any device through Bluetooth or does not play any sound after pairing. When in low battery, the speaker will power off automatically as well.

#### 13. Charging

	Red light	Charging
	Goes off	Charging completion

## Care & Maintenance

Do not use any form of detergents or cleaning material to clean the product as any type of chemical may make this device unusable. Do not disassemble this product. It contains no user serviceable parts. Do not drop or jump on it and treat it with care for the best performance. Keep the product in a dry location. Dust, dirt & moisture from

humidity can accumulate on the body of the product if kept at an unfriendly place. Do not dispose this product in fire or batteries may explode or leak.

## Warranty Information

Your 'Tronsmart T6 Plus Upgraded Edition Bluetooth Speaker', is warranted to the original owner for 12 months from the date of purchase against defects in material and workmanship under normal use and service. Tronsmart is not responsible for the accidental use of this product and its liability will not exceed the purchase price of the product. If you have any problems while using the product, please do not hesitate to contact our customer support team at [support@tronsmart.com](mailto:support@tronsmart.com).

## FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### SHENZHEN GEEKBUY E-COMMERCE CO., LTD.

19th Floor, Galaxy World Tower B, #1 YaBao Rd.,

LongGang District, Shenzhen, China

Email: [support@tronsmart.com](mailto:support@tronsmart.com)

800-270-1082 (USA & Canada)

+86-755-23603740 (Global)




[www.tronsmart.com](http://www.tronsmart.com)

Made in China

## Documents / Resources



<div><div> T6 Plus Upgraded Edition Bluetooth Speaker USER MANUAL</div><div></div></div>	<p><a href="#">Tronsmart T6 Plus Upgraded Edition Bluetooth Speaker</a> [pdf] User Manual</p> <p>T6 Plus Upgraded Edition Bluetooth Speaker, T6 Plus Bluetooth Speaker, Upgraded Edition Bluetooth Speaker, Bluetooth Speaker, Speaker</p>
--	--

References

- [Tronsmart | Portable Speakers & Headphones, Powering You Ahead](#)