



TRP BSA 68 Bottom Bracket Owner's Manual

[Home](#) » [TRP](#) » TRP BSA 68 Bottom Bracket Owner's Manual 

TRP

Bottom Bracket Installation – BSA


Contents

- [1 BSA 68 Bottom Bracket](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

BSA 68 Bottom Bracket



Determine the type of your BB shell

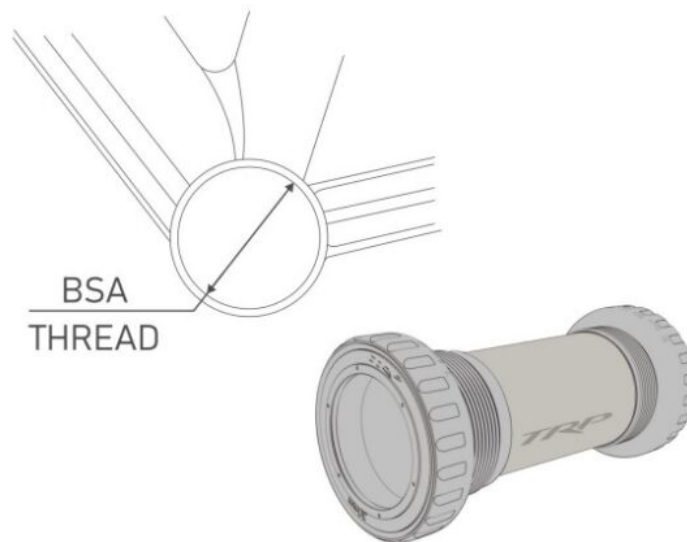

BB shell frame width	Fully assembled width	Non-drive side outer spacer	Non-drive side spacer	Drive side spacer	Drive side outer spacer	Use the following crankset
68mm	91mm	×	×	1 x 2.5mm	×	FC-C8000
68mm	96mm	×	1 x 2.5mm	1 x 2.5mm	1 x 2.5mm	FC-M9050 FC-M8050 FC-G8000
73mm	96mm	×	×	1 x 2.5mm	×	FC-M9050 FC-M8050
83mm	111mm	×	1 x 2.5mm	1 x 2.5mm	1 x 2.5mm	FC-M8070

TRP

Documents / Resources

	TRP BSA 68 Bottom Bracket [pdf] Owner's Manual BSA 68, BSA_240805, BSA 68 Bottom Bracket, BSA 68, Bottom Bracket, Bracket
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.