

**TRP**  
TRP PF30 Bottom  
Bracket



## TRP PF30 Bottom Bracket Instructions

[Home](#) » [TRP](#) » TRP PF30 Bottom Bracket Instructions 

### Contents

- [1 TRP PF30 Bottom Bracket](#)
- [2 Product usage](#)
- [3 Documents / Resources](#)
  - [3.1 References](#)
- [4 Related Posts](#)

**TRP**

### TRP PF30 Bottom Bracket



### Installation Instructions

1. **Measure the width of the frame.** Check the TRP BB & Crankset Compatibility Chart to ensure that you are choosing the correct bottom bracket.
2. **Put any necessary spacers on BB cups.** Follow the TRP BB & Crankset Compatibility Chart.
3. **Lightly grease** The BB shell and BB evenly.
4. **Tighten** Use a standard press fit tool to install the right-side cup into the frame. (Use Bearing Cup Press tool to install)

5. Repeat Step 4 for the left side cup.

6. Make sure dust covers are installed before installing the crankset.

## Specifications

Determine the type of your BB shell	BB shell frame width	Fully assembled width	Non-drive side outer spacer	Non-drive side spacer	Drive side spacer	Drive side outer spacer	Use the following crankset
46mm	73mm	96mm	X	X	1 x 2.5 mm	X	FC-M9050, FC-M8050
46mm	83mm	111mm	X	1 x 2.5mm	1 x 2.5 mm	1 x 2.5mm	FC-M8070

## FAQ

- What tools do I need for installation?

You will need a standard press fit tool and a Bearing Cup Press tool.

- How do I know which spacers to use?

Refer to the TRP BB & Crankset Compatibility Chart for the correct spacers.


- Why is it important to grease the BB shell?

Greasing ensures smooth installation and prevents corrosion.

- What should I do if the dust covers are missing?

Ensure dust covers are installed before proceeding with the crankset installation to protect the components.

## Product usage

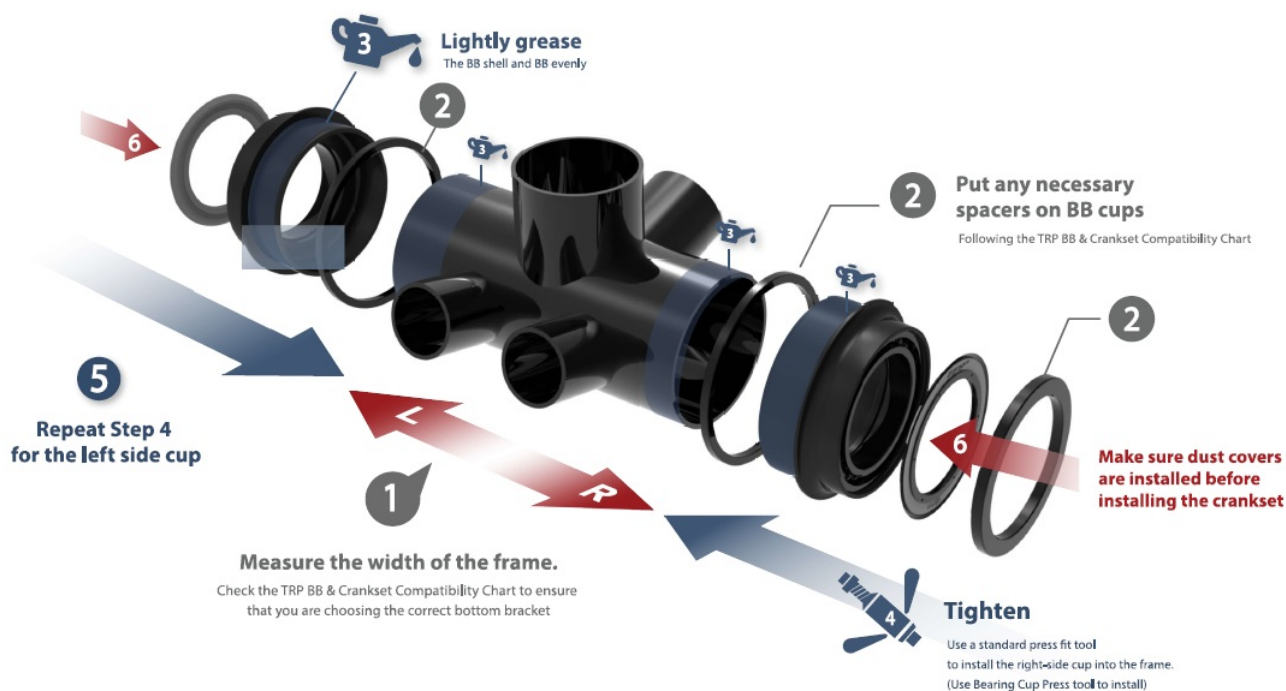

### Lightly grease






The BB shell and BB evenly

Put any necessary spacers on BB cups  
Following the TRP BB & Crankset Compatibility Chart


Repeat Step 4 for the left side cup

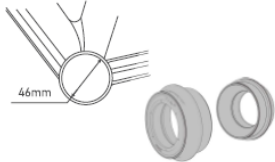Measure the width of the frame.  
Check the TRP BB & Crankset Compatibility Chart to ensure that you are choosing the correct bottom bracket  
Make sure dust covers are installed before installing the crankset

Tighten  
Use a standard press fit tool to install the right—side cup into the frame. (Use Bearing Cup Press tool to install)

Determine the type of your BB shell	BB shell frame width	Fully assembled width	Non-drive side outer spacer	Non-drive side spacer	Drive side spacer	Drive side outer spacer	Use the following crankset
	73mm	96mm			1 x 2.5mm		FC-M9050 FC-M8050
	83mm	111mm		1 x 2.5mm	1 x 2.5mm	1 x 2.5mm	FC-M8070

Documents / Resources

	<a href="#">TRP PF30 Bottom Bracket [pdf] Instructions</a> PF30, PF30 Bottom Bracket, Bottom Bracket, Bracket
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.