

Trudian

**Wiegand Access
Control Reader**



Trudian Wiegand Access Control Reader User Manual

[Home](#) » [Trudian](#) » Trudian Wiegand Access Control Reader User Manual 

Contents

- [1 Trudian Wiegand Access Control Reader](#)
- [2 Product Information](#)
- [3 Product Overview](#)
- [4 Product Usage Instructions](#)
- [5 Frequently Asked Questions](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



Trudian Wiegand Access Control Reader



Product Information

Specifications:

- **Working voltage:** DC12V
- **Swipe distance:** 0~6CM
- **Working current:**
- **Card type:** reading IC card
- **Communication mode:** Wegen 26 / Wegen 34
- **Working temperature:** -40°C to -70°C
- **Relative humidity:** 10% to 93%
- **Open mode:** Swipe card
- **Size:** 118 * 72 * 16MM
- **Installation method:** Hanging installation

Product Overview

Parameter:

Working voltage	DC12V
Swipe distance	0~6CM
Working current	60mA±20mA
Card reading type	IC card
Communication mode	Wegen 26 / Wegen 34
Working temperature	-40°C~-70°C
Relative humidity	10%~93%
Open mode	Swipe card
Size	118 * 72 * 16MM
Installation method	Hanging installation

Product Usage Instructions

Installation:

Refer to the Wiegand Reader Installation Diagram for proper installation.

Wiegand Reader Installation diagram

1. Use the matching screwdriver to remove the read head device wall plate;
2. Select a mounting location, mark the screw holes, drill 3-4 holes and use a hammer to tap in the expansion plugs;
3. Fix the wall plate of the read head device to the wall with screws and connect the wires;
4. Install the read head device, first snap the read head device into the wall plate from top to bottom, then align the bottom of the read head device with the screw holes of the wall plate, and finally screw on the screws to fix it.

Wiring Instruction:

Wire color	Function
Red Line	DC12V
Black Line	GND
Green Line	D0
White Line	D1
Yellow Line	WG34
Blue Line	LED/BZ

Notes

1. Before powering up, you must confirm the voltage of the power supply and the positive and negative terminals of the power supply.
2. When using external power supply, it is recommended to share the power ground with the controller power supply.
3. Read the head to the control box wire, it is recommended to use 8-core shielded multi-strand twisted pair network cable. Three of the cores standby, if you do not need to read the head sound and LED light feedback legal card, may not be connected to LED/BZ line, Wegen data line D0 and D1 is recommended for each other better twisted pair, line cross-sectional area recommended 0.22 square millimeters or more, it is recommended that the wiring length does not exceed 100 meters, shielded wire connected to the control box motherboard GND, thickened or double stranded together a power supply to the reading head, help to enhance the performance of the reading head. (You can also use other multi-core shielded Category 5 wire)

Frequently Asked Questions

Q: What is the working voltage of the Wiegand Access Control Reader?

A: The working voltage is DC12V.


Q: What card types can be read by the reader?

A: The reader can read IC cards.

Q: What is the communication mode supported by the reader?

A: The reader supports Wegen 26 and Wegen 34 communication modes.

Documents / Resources

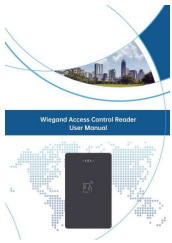

[Trudian Wiegand Access Control Reader](#) [pdf] User Manual

Wiegand Access Control Reader, Wiegand Reader, Access Control Reader, Reader

References

- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.