



## trulifi 6800 Controller Unit User Guide

[Home](#) » [Trulifi](#) » trulifi 6800 Controller Unit User Guide 

*trulifi 6800 Controller Unit User Guide*



Trulifi Controller Unit 6800

## Quick Start Guide

### Contents


- [1 1. Introduction](#)
- [2 2. Installation and configuration](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

## 1. Introduction

This Quick Start Guide describes how to install your Trulifi Controller Unit. A comprehensive User Manual with detailed instructions is available from <https://www.signify.com/global/innovation/trulifi/downloads>

## 2. Installation and configuration


- Connect the POF cables as depicted below. Please note that the Tx terminal of the first Access Point must be connected to Rx of the second Access Point. The Tx of the second Access Point must be connected to the Rx of the third Access Point, etc.
- Connect the Trulifi Access Points and Controller Unit to your Ethernet switch as indicated.
- Download the Trulifi Controller 6800 User Manual available from the URL stated above for detailed instructions how to configure your Trulifi Controller using its Graphical User Interface.

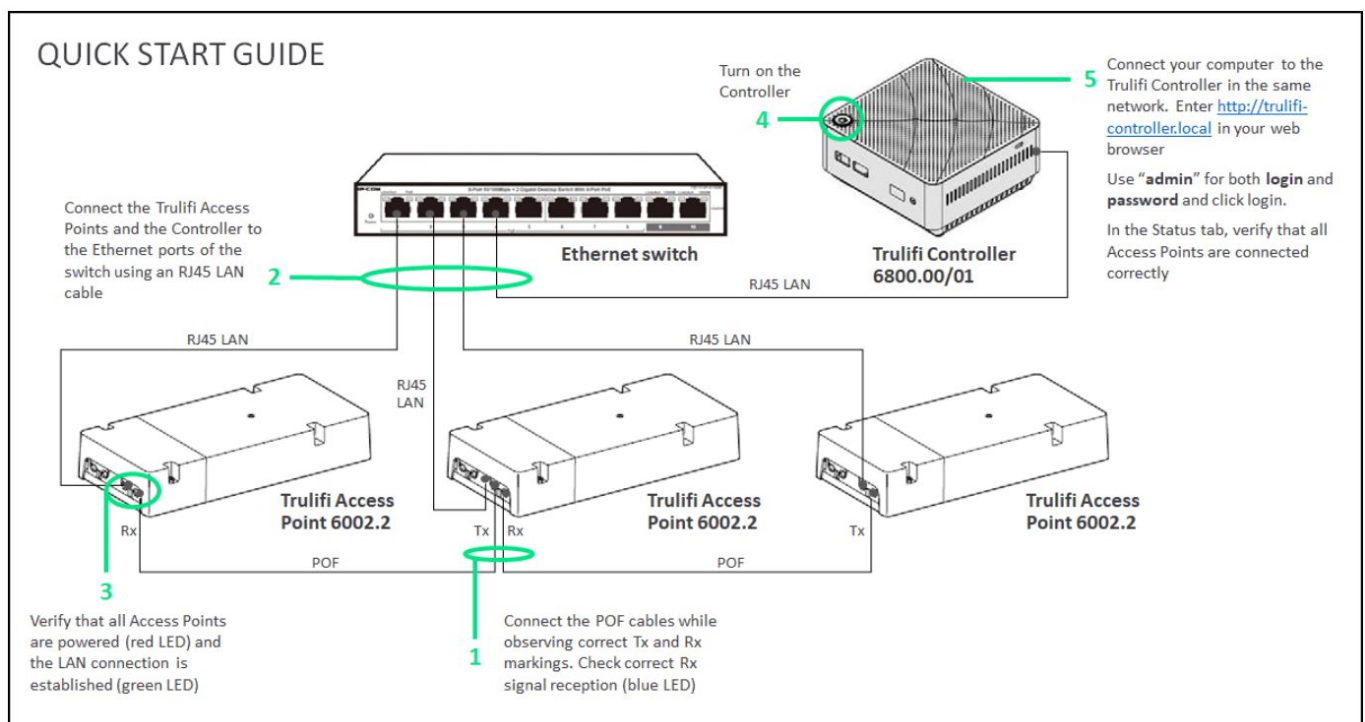

<http://trulificontroller.local>

© 2021 Signify Holding. All rights reserved. The information provided herein is subject to change, without notice. Signify does not give any representation or warranty as to the accuracy or completeness of the information included herein and shall not be liable for any action in reliance thereon. The information presented in this document is not intended as any commercial offer and does not form part of any quotation or contract, unless otherwise agreed by Signify. All trademarks are owned by Signify Holding or their respective owners. 4422-952-15736\_580\_C – Trulifi 6800 Controller Unit – Quick Start Guide



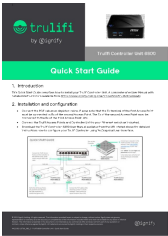

[trulifi 6800 Controller Unit](#) [pdf] User Guide  
6800, Controller Unit