

 



trulifi Controller Unit EU 6002.0 User Guide

[Home](#) » [Trulifi](#) » trulifi Controller Unit EU 6002.0 User Guide 


trulifi Controller Unit EU 6002.0 User Guide




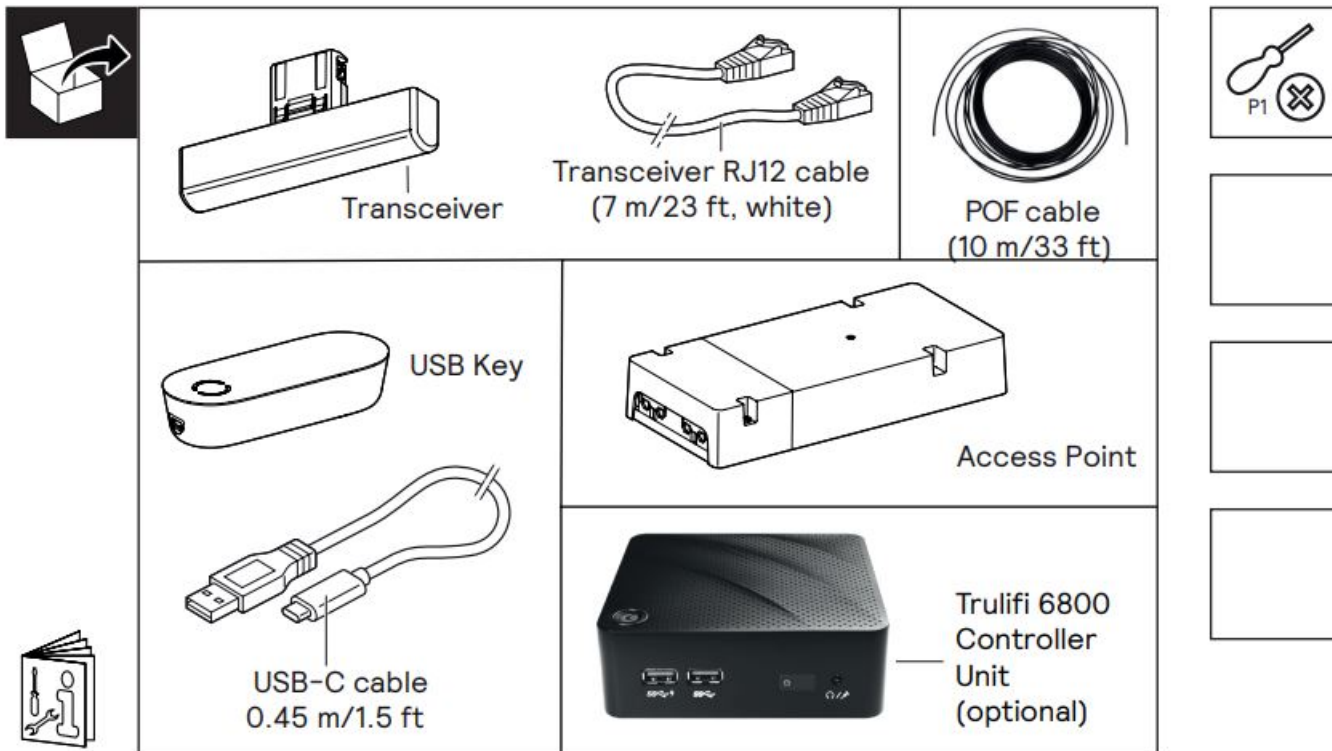


	12NC order code	System Power (W)	Power factor	Voltage (V)	Rel. humidity (%)
Trulifi Controller Unit EU 6002.0	912500102095				
Trulifi Controller Unit NA 6002.0	912500102282				
Trulifi Controller Unit EU 6800.00	912500103432				
Trulifi Controller Unit NA 6800.01	912500103433				
Trulifi Controller Unit Application 6800.20	912500103434				
Trulifi License 6800 ROAMING *	912500103435				
Trulifi License 6800 NMC *	912500103436				
Trulifi Access Point 6002.2	912500101791	4.2 (idle) / 38 (full load)	0.3 (idle) / 0.5 (full load)	100-240 V AC	20 - 90
Trulifi transceiver 6002.1	912500101812	4.6 (Access Point)		24 V DC (Access Point)	
Trulifi USB Key 6002.1	912500101792	3.5		5 V DC (USB)	
Trulifi POF cable EU 10 m	912500102094				
Trulifi POF cable NA 10 m	912500102283				

* For Trulifi License 6800 ROAMING and Trulifi License 6800 NMC license key please contact your local Signify representative


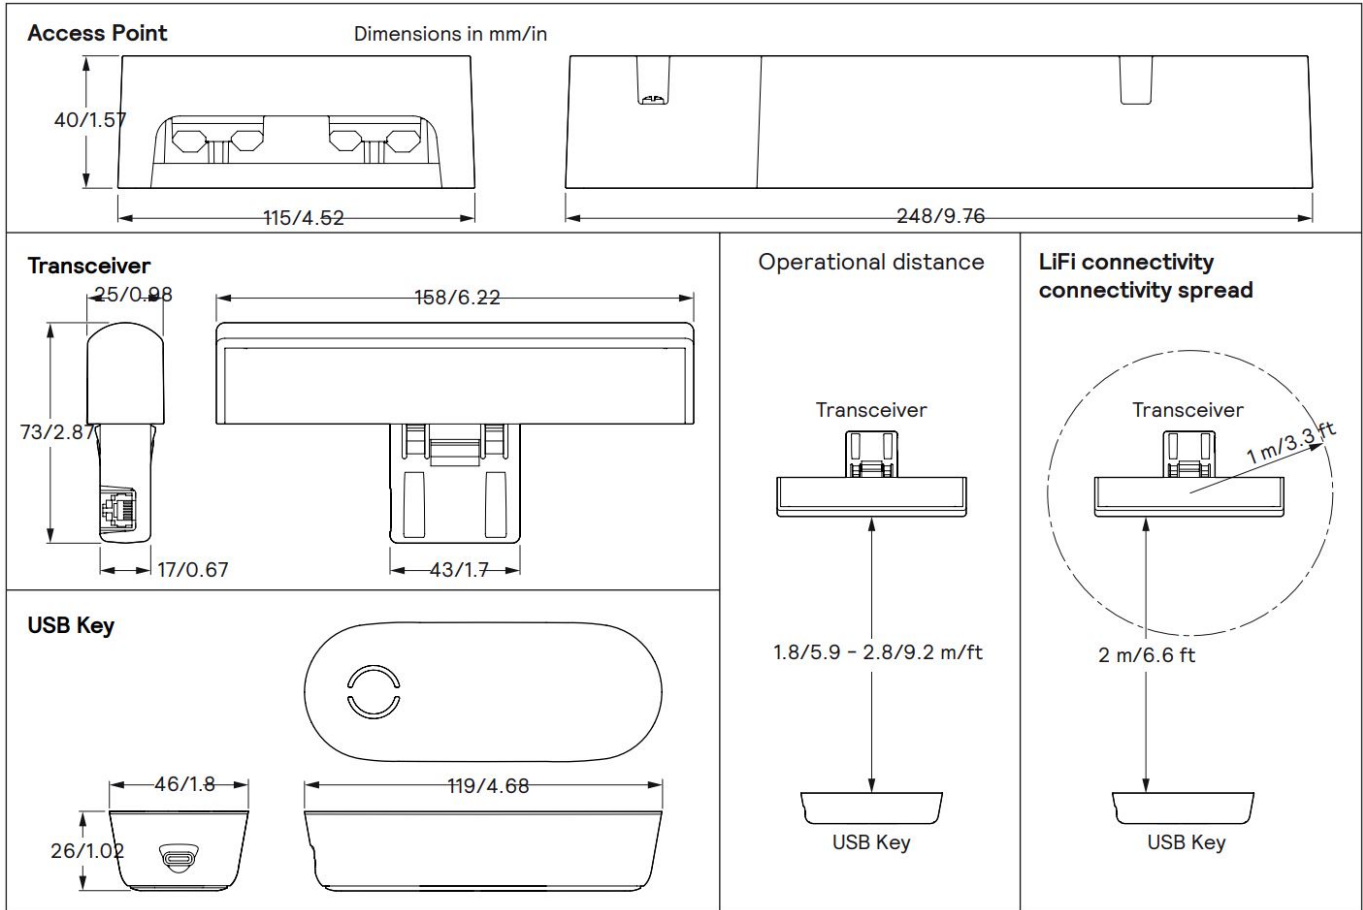


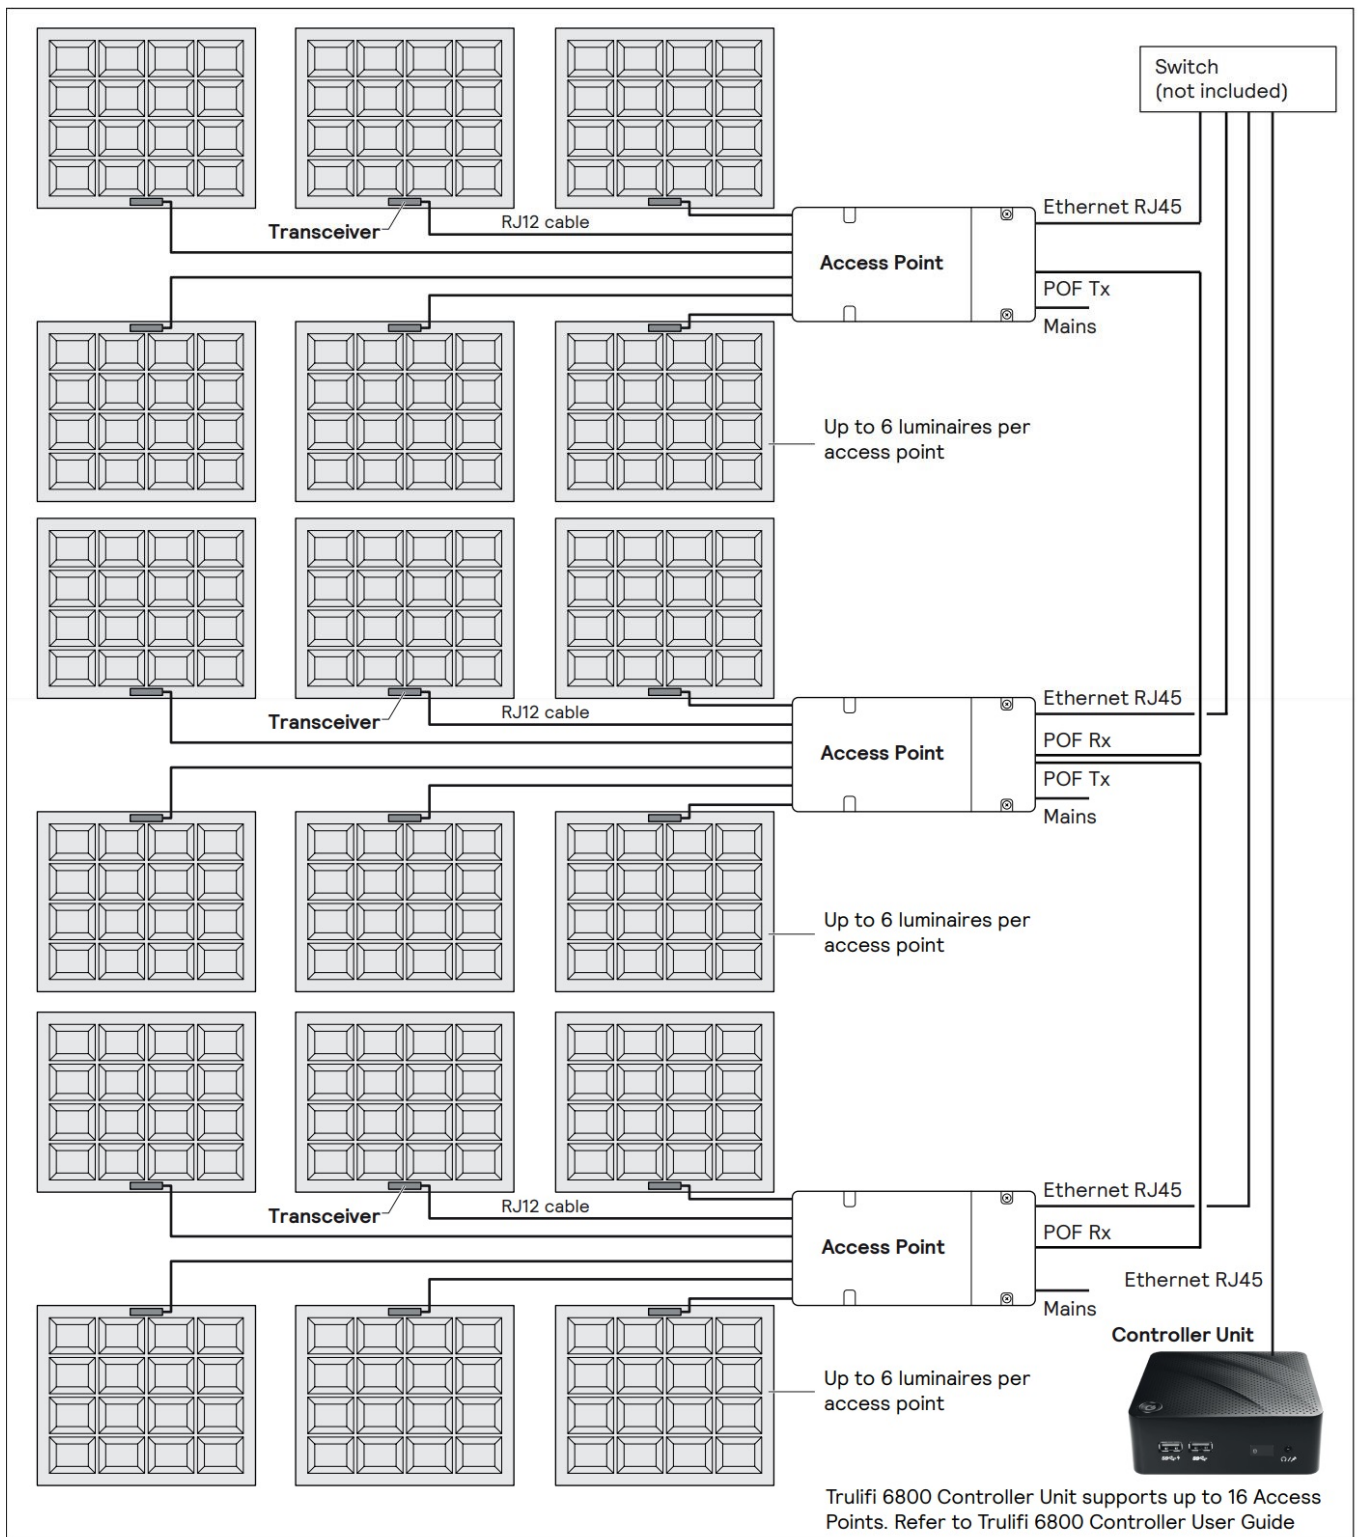

Ceiling holder (sold separately)

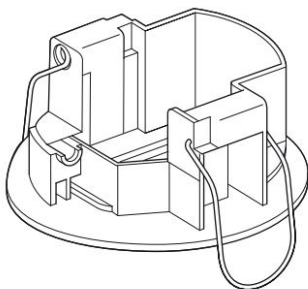

12NC order code: 912500101579

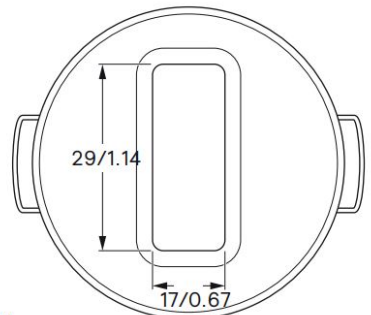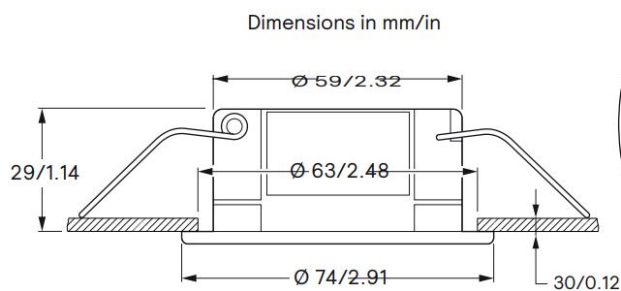

Note with regards to installation of the Truli 6002 Access Point (in short: `Access Point`) and the Truli 6002 Transceiver (in short: `Transceiver`) in the United States of America:

- The Access Point and Transceiver pass the acceptance criteria for the flame test as defined in UL standard 2043, 4th edition. Compliance with UL2043 implies that the Access Point and Transceiver can be installed in building plenums in most US regions. Please refer to your local installer for installation options in accordance with local regulations.
- The Transceiver RJ12 cable (7 m/23 ft, white) and POF cable (10 m/33 ft) are both plenum rated and can therefore be installed without the need for additional metal conduits.


 

 


- The Life system shall be installed by a qualified electrician and wired in accordance with the latest IEEE electrical regulations or the national requirements.
- Access points and Controller shall be disconnected from mains power during installation and wiring.
- To avoid damaging the POF cable, a bend radius of at least 25 mm/1 in shall be observed during installation
- For Canada only: Canada ICES-003 (B) / NMB-003 (B)




ATTENTION


OBSERVE PRECAUTIONS FOR HANDLING ELECTROSTATIC SENSITIVE DEVICES

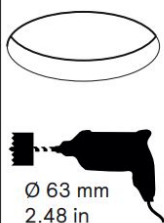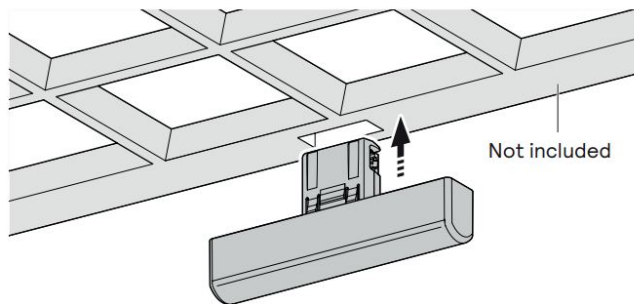


1a

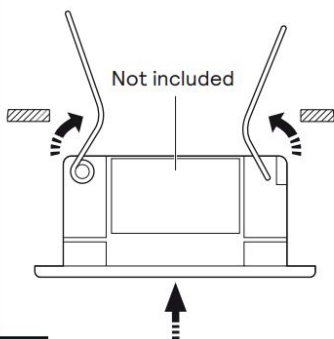


1b

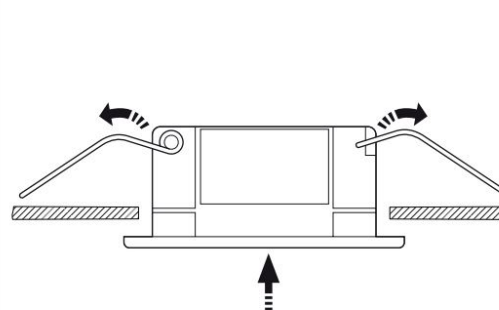


1c

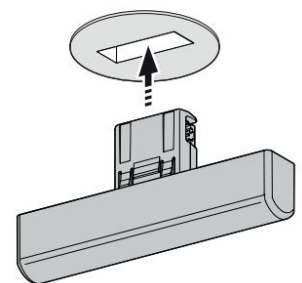


1d

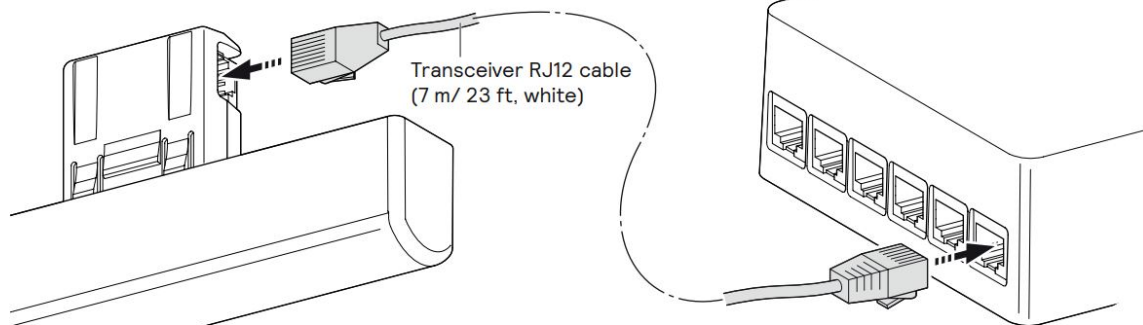


2

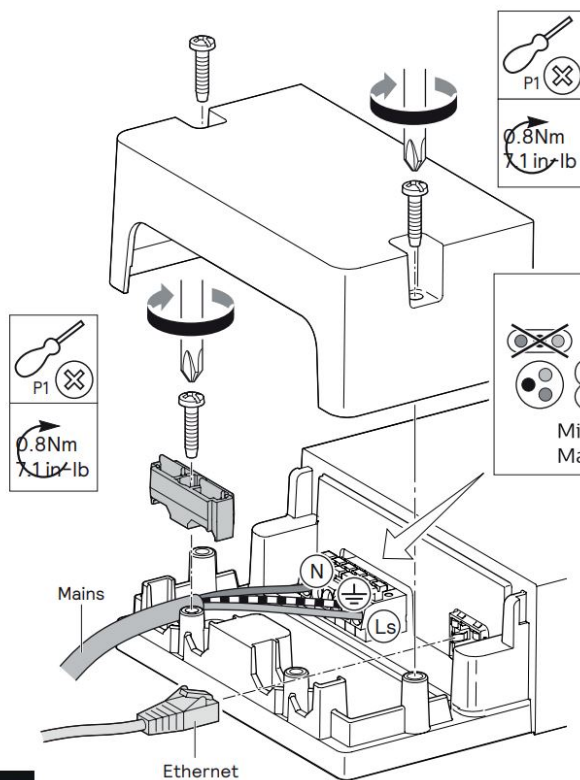

3

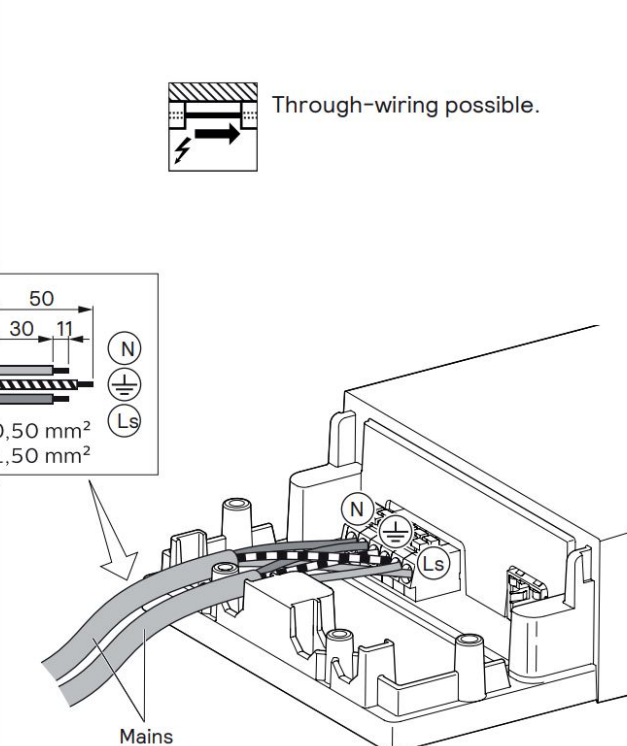

4

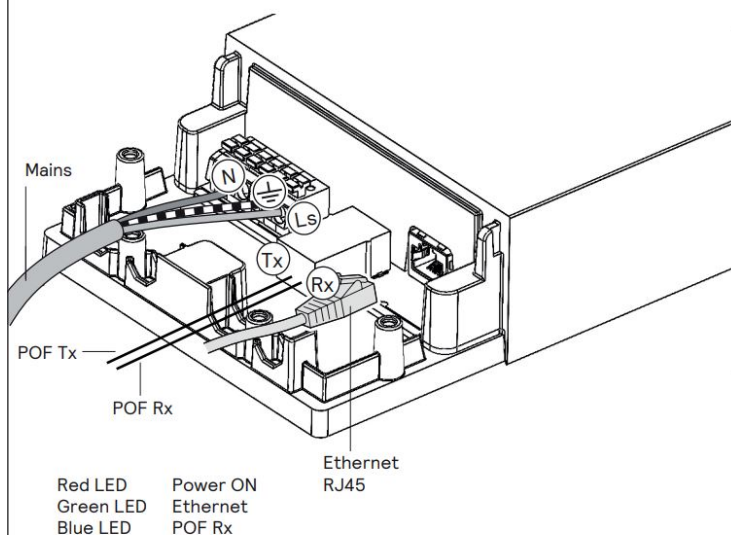


5

© 2021 Signify Holding. All rights reserved. The information provided herein is subject to change, without notice. Signify does not give any representation or warranty as to the accuracy or completeness of the information included herein and shall not be liable for any action in reliance thereon. The information presented in this document is not intended as any commercial offer and does not form part of any quotation or contract, unless otherwise agreed by Signify. All trademarks are owned by Signify Holding or their respective owners.



- Contents
- [1 Documents / Resources](#)
- [2 Related Posts](#)

Documents / Resources

	trulifi Controller Unit EU 6002.0 [pdf] User Guide Controller Unit EU 6002.0
--	---