



## Home » TRUPER » TRUPER DES-26C Gas String Trimmer Instruction Manual

### Contents [ hide ]

- 1 TRUPER DES-26C Gas String Trimmer
- 2 Use and care recommendations
- 3 Technical data
- 4 Fuel Specifications
- 5 Motor Tools Safety Warnings
- 6 Parts
- 7 Assembly
- 8 Fuel supply
- 9 Start up
- 10 Operation
- 11 Maintenance
- 12 Troubleshooting
- 13 Authorized service centers
- 14 Warranty policy
- 15 Frequently Asked Questions
- 16 Documents / Resources
  - 16.1 References



## **TRUPER DES-26C Gas String Trimmer**



## **Applies for:**

Code: 12496

Model: DES-26C

Read the user's manual thoroughly before operating this tool.



### **WARNING**

- To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.
- Keep this manual for future references.
- The illustrations in this manual are for reference only. They might be different from the real tool.

### Use and care recommendations



	٨	
7	!	V

For better performance and durability, use high-octane gasoline. In Mexico, we recommend using **PREMIUM** gasoline mixed with **2-STROKE ENGINE OIL**.

Using the wrong mixture can cause serious engine damage.

Gasoline PREMIUM

Mix

**DO NOT** use **GASOLINE MIXTURE** that has been stored for over 15 days.

Always USE the SAFETY GUARD and nylon line with a DIAMETER of 0.08 in to 0.105 in

**ALWAYS** run your brush cutter at **FULL POWER** with the throttle **FULLY** squeezed.

A Perform periodic **MAINTENANCE** to your machine (page 10).

### **Technical data**

п	rc.			~
D		-/	n	U.
-	_	_	•	•

Code	12496
Description	Gas string trimmer, curved shaft
Net weight	11.4 lb (with no fuel)
Fuel tank	16.9 oz
Motor displacement	26 cc
Maximum motor performance	1 Hp
Speed	8 000 RPM
Cutter head	Nylon line
Cutting diameter	17"
Nylon line diameter	0.08 in to 0.105 in
Handle	Loop handle
Work cycle	30 minutes idle per fuel tank consumed. Maximum 6 hours daily.


## **Fuel Specifications**

For better performance and durability, use higher-octane gasoline. In Mexico, we suggest using PREMIUM gasoline.

- The string trimmer has an air-cooled 2-cycle motor using a mix of unleaded gasoline and high quality self-propulsion oil with fuel stabilizer specified for air-cooled two-cycle motors.
- The motor is certified to run with unleaded gasoline for vehicles with 87 or more

([R+M]/2) octane level.

- Do not use any type of gasoline premixed with oil bought in service stations such as gasoline for motorcycles.
- Do not use automotive oil or oil for 2-cycle outboard motors oil.
- The mix ratio should be 50 parts gasoline per 1 part oil (50:1 ratio). Prepare the mix in a gasoline-approved container. Always mix thoroughly before pouring in the motor tank.
- CAUTION Do not use fuel mix stored longer than 15 days. Make small amounts of mix.
- WARNING: Never smoke near fuel, the gasoline filling up area or where the oil mix is being prepared or when operating the tool.
- WARNING Any attempt to start the string trimmer with no oil added to the fuel mix will damage to the string trimmer.
- Use TRUPER ACES-2, ACES-5 or ACES-20 oil caps\*\* to measure the mix. Mix 4 capfuls oil per each gasoline liter.
- A wrong mix may cause the motor to throw a rod causing expensive repairs!

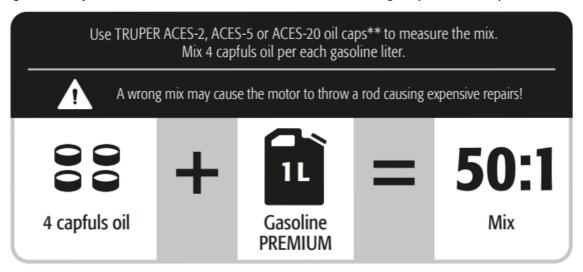

To prolong the useful life of the motor use TRUPER two-cycle synthetic motor oil. \* 1
 gallon = 3.78 liter \*\* Not included

## **Motor Tools Safety Warnings**

- Keep your work area clean, tidy and well lit.
  - **CAUTION:** Cluttered and dark areas may cause accidents.
- Never use the string trimmer in explosive areas or in the presence of flammable liquids.

**DANGER:** Before starting the motor keep the string trimmer at least 9 meters (30 feet)

away from the fill up area.

 Keep children and passersby at a safe distance while operating the string trimmer.

**WARNING:** Distractions could cause loosing control and cause accidents.

Avoid contact with power lines and circuits.

**DANGER:** Find and avoid power lines and circuits, especially hidden wiring as well as any grounded object.

Stay alert, use care and common sense.

DANGER: Familiarity with the string trimmer operation could lead to distractions. It could cause accidents.

 Refrain from using the string trimmer if tired or under the influence of drugs, alcohol or medication.

**DANGER:** Being momentarily distracted while using the string trimmer could cause severe personal injury.

 Operate the string trimmer with guards and protection devices in place and in good working condition.

**WARNING:** Failure to comply with this warning is a hazard of severe personal injury.

• Do not force the string trimmer.

**CAUTION:** Working within the tool's working design assures a better and safer job.

• Keep the string trimmer in a safe place and out of the reach of children.

**WARNING:** Motor powered tools are dangerous to inexperienced people.

• Wear proper clothes.

WARNING: Loose clothes, jewelry or long hair could get caught in the mobile parts.

• Keep hands away from rotating and/or mobile parts.

WARNING: Failure to comply with this warning is a hazard of severe personal injury.

• Do not operate the string trimmer in enclosed areas.

**DANGER:** Avoid breathing accumulated carbon monoxide, a potentially deadly odorless toxic gas.

• Wear adequate protective safety accessories.

**CAUTION** Wear eye protection, dust mask, non-skid safety shoes, helmet and ear plugs. These safety gears reduce the risk of injury.













• Turn off the string trimmer before adjusting, changing accessories or storin.

**WARNING** Double check the string trimmer switch is in the off position.

 Refrain from operating the string trimmer if the switch is not working or is not properly assembled.

WARNING Failure to complain with this warning is a hazard of personal injury. Immediately send it to a TRUPER Authorized Service Center.

• Do not overreach.

**CAUTION** Good balance and support lead to better controlling the tool in unexpected situations.

Avoid the string trimmer to unintentionally start.

**WARNING:** Double-check the string trimmer motor is off before maintenance or putting it away.

• Remove brackets before turning on the string trimmer.

**DANGER** Additional tools or vices installed in a rotating part could cause severe personal injury.

 Service the string trimmer and double-check it is in good working conditions before operating.

**CAUTION** Carefully check mobile parts, alignment and assembly.

Do it periodically. Look for any damaged element or part not working properly. Repair immediately in a TRUPER Authorized Service Center.

Accessories.

**CAUTION** Use only accessories or spare parts indicated in this Manual or certified by TRUPER.

• Never leave a running string trimmer unattended.

**DANGER** Turn off and disconnect the string trimmer after using. Set it in a safe position to avoid severe injury.

• Never smoke in the proximity of fuel.

DANGER Do not smoke in the proximity of the fuelling area or when using the string trimmer.

## Safety warnings for string trimmers

## **Fuel handling**

• Never smoke near fuel or where gasoline is supplied. Or where the oil mix is prepared

or while operating the string trimmer.

- Handle fuel with care to reduce risk of fire or burns.
- Fuel is very flammable.
- Do not allow gasoline or oil getting contact with your skin.
- Protect your eyes. Avoid spilling oil or gasoline. In the event of accidental contact,
   wash eyes immediately with clean water. If irritation persists, see a doctor.
- Mix and store fuel in a labeled container.
- WARNING Mix fuel outdoors away from flames or sparks.
- Before refueling the string trimmer turn off the motor. Set the string trimmer in the ground in a clear surface. Wait for the motor to cool down.
- CAUTION Clean all the fuel that might have been spilled before operating the string trimmer.
- CAUTION Verify there are no leaks. If so, correct them before using the string trimmer to prevent fire or burns.
- Move the string trimmer at least 30 feet away from the fuel filling up site before starting the motor.
- Under no circumstance burn spilled fuel.
- Under no circumstance, use any other type of fuel different from the specified in this Manual.

### Before operating the string trimmer

Wear the right clothes to operate the string trimmer.

Tight fitting clothes, strong pants, anti-skid safety boots, heavy-duty protecting gloves and safety glasses with side protection complying with ANSI Z87.1. Standard.









### **WARNING**

- Remove any accessories or loose clothes that could get caught by the moving cutter head. Fasten your long hair above your shoulders.
- Verify the string trimmer is in perfect working conditions. Do not turn on is not properly
  adjusted or fully assembled to work in a safe manner, or if the fuel tank shows leakage

or loose screws.

- Verify the string trimmer is clean, dry and free of oil or fuel.
- Double-check the work area is in an open area and is well ventilated.
- Check the work area. Remove stones, pieces of broken glass, nails, wire or rope.
   They could be soot out or be tangled in the string trimmer.
- In extreme temperatures, verify there are no ice formations or condensation in the string trimmer.
- Verify that visibility and light conditions are adequate to see clearly. Otherwise, do not use the string trimmer.
- Do not use the string trimmer with any guards in place. Or if the guards show any type
  of damage or they have missing parts.

### When operating the string trimmer

- CAUTION Keep passersby, children and animals at least 50 feet away.
- Verify the cutter head is not making contact with any object before starting the motor.
- WARNING Keep both feet firmly set on the ground and both hands holding the string trimmer by the handles. Never operate the string trimmer single-handed. Otherwise the operator and any other person present may be injured.
- Keep all your body away from the cutter head when the motor is running.
- Always keep the cutting head pointed downwards, below your waist level. Never raise it above 2.4 feet from the ground.
- Keep all your body parts away from the muffler. Otherwise severe burns can occur.
- Keep the string trimmer away from flammable materials.
- Do not use the string trimmer to cut woody shrubs.
- Be alert to surrounding risks. The string trimmer noise could prevent you from noticing them.
- DANGER If making jobs near traffic roads, stop cutting until there are no vehicles in sight. The string trimmer could shoot particles towards the moving vehicles and produce a severe accident.


## After operating the string trimmer


• **WARNING** Do not try to stop the cutter head rotating movement in any other way than releasing the switch. Wait for the cutter head stop after shutting off the string trimmer.

It will take a couple of seconds.

- **CAUTION** Always carry the string trimmer with the motor off and the muffler away from your body. Before putting the string trimmer in a vehicle, drain the fuel tank.
- **WARNING** Turn off the motor before idling the string trimmer. DO NOT leave the motor running unattended. Wait for the string trimmer to cool off before storing.
- CAUTION Highly trained personnel string trimmer should only carry out service and repairs.

## **Parts**

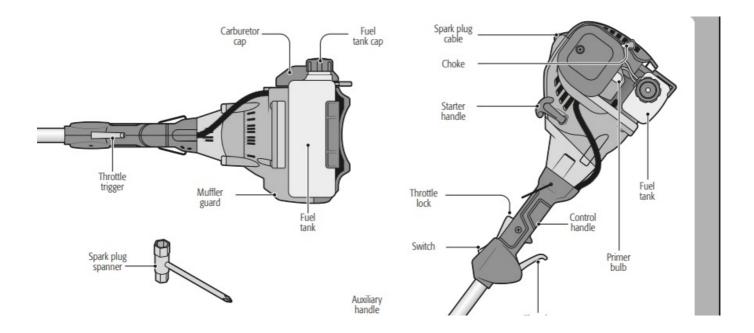

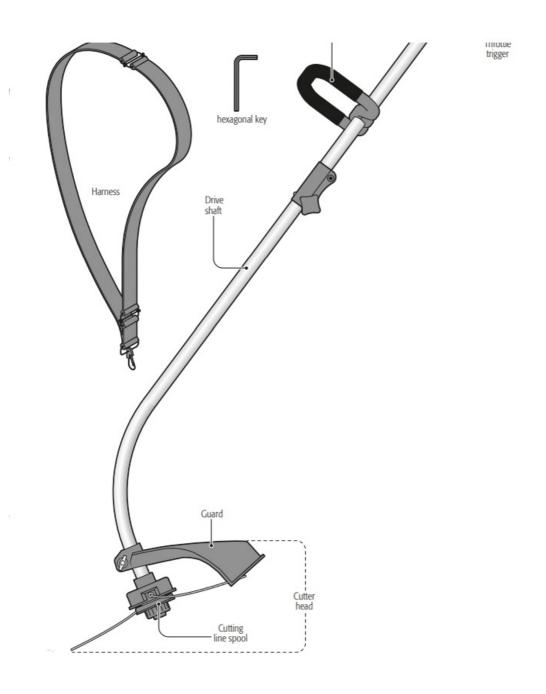

### **WARNING**

Do not try to modify the tool or manufacture accessories that are not recommended. Otherwise there is hazard of severe personal injury and making the warranty void.

### **WARNING**

When assembling parts disconnect the spark plug cable from the motor, to prevent an accidental start and cause severe injury.


## **Assembly**

### Guard

• Install the guard before setting the string spool. Otherwise the guard cannot be


mounted.

- Pass the guard on the curved arm end. Double-check to align the guard orifices with the mounting orifices (A).
- Secure the guard with the bolt and nut.

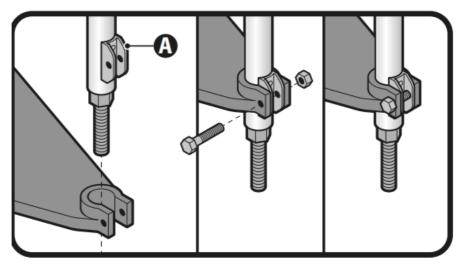

### **Shaft**

- Align the safety pin (a) of the lower shaft with the middle hole in the clamp (b).
- Press the safety pin down and insert the lower shaft into the clamp.
- Release the safety pin; ensure that it engages in the hole on the upper shaft.
- Tighten the locking knob anticlockwise to secure the connection (c).

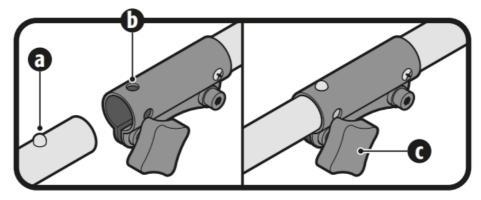

## **Cutting string replacement and mounting**


- With the string trimmer turned off, remove the spool-retaining cap (A) turning counterclockwise.
- Remove the empty spool. Verify it is clean and has no damaged or worn parts.
- Cut 20' length of cutting line. Make a loop in the middle of the line and insert the loop in the spool inner hook (B). Hold the line and wind it clockwise. Double-check each end of the line is wound in its respective section (upper and lower). Do not wind too

much line. After winding there shall remain a 0.2" minimum distance between the spool edge and the wound line.

- Leave approximate 6" unwound on both ends of the line and insert each one of them in the spool notches (C). This is to prevent the line to unwind while installing the spool in the brush cutter. Later on you will release the lines from their notches.
- Set back the spool in its cover passing the ends of each line through the cover orifices
   (D). If the line is loose or tangled in this step, wind it again in the spool and secure it in its notches.
- Set the spool cover in the axis (E) and secure the spool tightening the retention cap
   (A).
- Apply force and pull both ends of the cutting line outwards to release it from the notches in the upper side of the spool (G).


## **Auxiliary handle**

- Install the auxiliary handle as shown in the figure.
- To operate comfortably move the auxiliary handle trough the string trimmer arm up to the right height.
- Tighten the screws to fix into position.

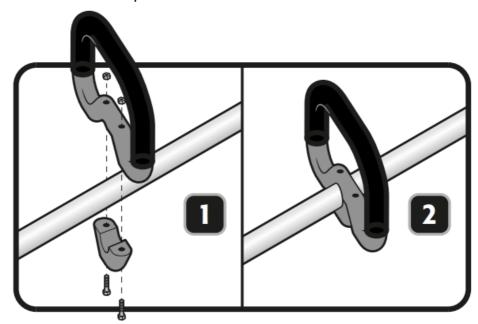


### **Harness**

Set the harness in the handle ring to support the string trimmer on the shoulder.

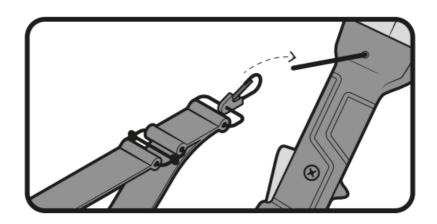

### **Cutting string replacement and mounting**

- With the string trimmer turned off, remove the spool-retaining cap (A) turning counterclockwise.
- Remove the empty spool. Verify it is clean and has no damaged or worn parts.
- Cut 20' length of cutting line. Make a loop in the middle of the line and insert the loop in the spool inner hook (B). Hold the line and wind it clockwise. Double-check each end of the line is wound in its respective section (upper and lower). Do not wind too much line. After winding there shall remain a 0.2" minimum distance between the spool edge and the wound line.
- Leave approximate 6" unwound on both ends of the line and insert each one of them in the spool notches (C). This is to prevent the line to unwind while installing the spool in the brush cutter. Later on you will release the lines from their notches.
- Set back the spool in its cover passing the ends of each line through the cover orifices
   (D). If the line is loose or tangled in this step, wind it again in the spool and secure it in its notches.
- Set the spool cover in the axis (E) and secure the spool tightening the retention cap
   (A).
- Apply force and pull both ends of the cutting line outwards to release it from the notches in the upper side of the spool (G).

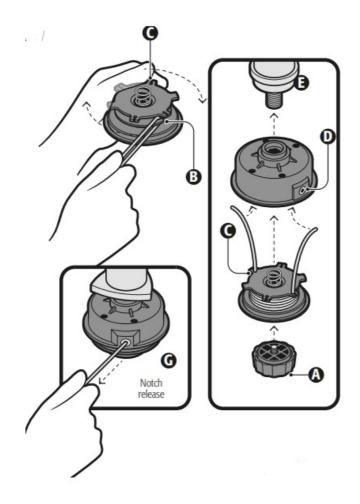


## **Fuel supply**

- Follow the safety standards for handling fuel (Page 5).
- Allow the motor to completely cool down before filling up.
- Set the string trimmer lying it down onto a flat surface as shown in the figure.
- Wipe around the fuel tank cap to prevent contamination.
- Slowly loosen the fuel cap.
- Use care to avoid spillage. Pour the fuel mix into the fuel tank.
- CAUTION Follow fuel specifications.
- Before setting back the fuel cap check and clean the joints.
- Immediately set the fuel tank cap back and tighten by hand.
- Wipe clean any fuel spills.

### **CAUTION**


In a new motor and after running it for the first time it is normal that smoke emissions are present.

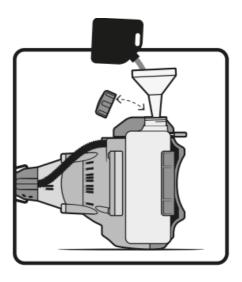

## Start up

### **Starting**

- Set the tool onto level ground using care the cutter head is not making contact with any obstacles.
- Set the switch in the ON position (A).
- When the motor cools down move the choke lever (B) upwards. Press and release the primer bulb (C) 6 times.
- If the motor is hot move the choke lever downwards. Do not use the primer bulb.
- Pull the starter/handle (D) quickly to start the motor. Once the motor is running do not release the starter/handle, carefully set it back to its initial position to prevent damaging it.
- Once the motor is running move the choke lever downwards.
- Let the motor run idle a couple of seconds.
- Set the harness onto your shoulder. Hold the string trimmer by both handles using both hands.
- Lift it to start cutting.
- Press the lock (E) and the throttle trigger (F) to start the cutting device.

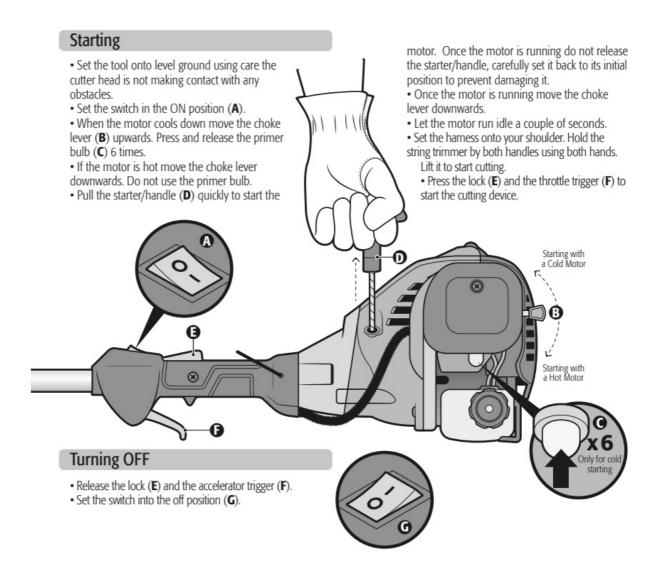

## Operation


### **CAUTION**

- Remember that you, being the string trimmer operator, are responsible of your safety and the safety of those who are near your work area. Follow all security standards before operating the tool.
- Keep good balance with both feet firmly set on ground.
- Use the harness to support the string trimmer weight. Hold firmly the string trimmer in front of you. Set one hand in the handle and the other in the auxiliary handle to have the tool aligned to your body and pointing the cutter head 30° downwards, away from your feet.

### **DANGER**

• Do not turn on or operate the string trimmer in any other position.

- Turn on the string trimmer and make cuts from left to right rotating your waist and keeping the tool position.
- As you cut grass the cutting thread will wear and will fall. To release more thread from
  the spool press the string trimmer lightly downwards to have the ground pressing the
  retention cap against the spool and to release more thread. The guard blade will cut
  the remaining thread. At this moment stop pushing the string trimmer against the
  ground to stop spending more thread.
- To cut brush or tall grasses make it gradually. Do not try to cut in one pass from its base because residue could clog the cutting head or make you loose control over the string trimmer.

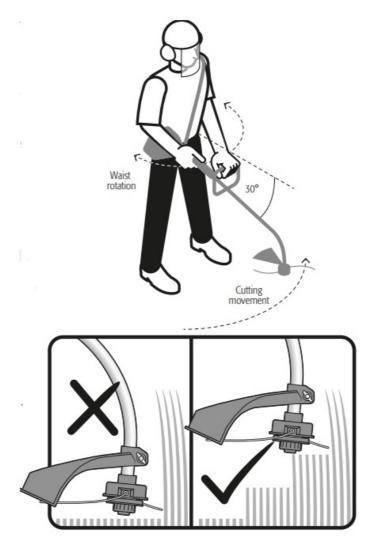

### Maintenance

Before inspecting, cleaning or servicing the tool, turn off the motor. Wait for all the moving parts to stop. Disconnect the spark plug cable and separate it from the spark plug. Otherwise, you could be severely injured and the equipment could get damaged.

### General cleaning

- Clean and unblock all the starter unit ventilation slots with a brush when necessary.
- In the same way, periodically clean the motor cylinder wings and the fan wings to remove dirt. Not doing it will cause the motor to overheat and get damaged.

## Cleaning the air filter

- Remove the air filter cap loosening the cap knob.
- · Remove the air filter.
- Depending of the time it has been used you can give a superficial cleaning to the filter by only tapping it against a flat surface to remove most of the particles.
- You can also blow the filter with compressed air. Do it in both sides.
- For a more complete cleaning wash the filter in lukewarm soapy water. Rinse it and let it dry before installing it back in the tool.
- Install back the air filter verifying it clicks in place.
- Clean the air filter as frequently as necessary to keep it always clean. Otherwise the motor performance will diminish.

### **Fuel filter**

- Check frequently the gasoline filter.
- If the filter is dirty, replace it.
- In the gas tank interior is dirty rinse it with gasoline.

## Carburetor adjustment

- We recommend making carburetor adjustments in a TRUPER Authorized Service Center.
- A wrong adjustment can damage the motor and make the warranty void.

### Spark plug replacement

• The motor uses a TORCH L8RTC spark plug with an electrode gap of 0.025" Replace the spark plug once a year with a similar one.

- With a totally cold motor, loosen the worn spark plug turning left with a spark plug wrench and remove it.
- Insert the new spark plug and tighten to the right by hand. Tighten it half a turn more with the key included.

### **CAUTION**

Use care not to damage the spark plug thread. Otherwise the motor will be seriously damaged.

### Exhaust and muffler cleaning

- The exhaust and muffler can be clogged with carbon deposits, depending on the type
  of fuel, the amount of oil used and / or the conditions the tool is used. If noticing loss
  of power you should remove the deposits to restore performance. Go to a TRUPER
  Authorized Service Center to have this service made.
- The muffler is equipped with an anti-spark screen inside the muffler. After being used long periods of time the screen gets dirty and needs to be replaced.
   Go to a TRUPER Authorized Service Center to have it replaced.

### **CAUTION**

 Check constantly that the muffler has the fasteners secured and that there is no damage or corrosion. If finding leaks, stop the tool and immediately go to a TRUPER Authorized Service Center to have it repaired.

### **Tool storage**

If storing the tool a month or more, be aware of the following:

- Drain all the contents in the fuel tank into an approved gasoline container. All the remaining fuel should be used again in other equipment with a two-cycle motor with a ratio of 50:1.
- Run the motor until the rest of the fuel is consumed and the motor shuts off by itself.
   This way you eliminate the fuel residues and will avoid gum forming and damaging the fuel system.
- Clean thoroughly.

- Store the tool in a ventilated space, away from corrosive agents like garden chemical substances or deicing salts. Also away from children.
- Comply with all the government rules regarding safety in handling and storing fuel.

Regular maintenance	Every use	Every 25 h of use	Every 50 h of use	Every 150 h of use	Every 250 h of use
General cleaning	/				
Air filter cleaning					
Carburetor cleaning *					
Spark plug inspection and adjustment *					
Fuel tank cleaning **					
Fuel filter change **					
Fuel chamber replacement **					
Combustion chamber cleaning **					

<sup>\*</sup> Trained user or TRUPER Authorized Service Center

## Available accessories and replacement parts list

Component	Code	Part	Description
	16924	RET-GRUPO-01	Spool retainer for Truper string trimmer
	16926	REP-GRUPO-01	Bump feed head for Truper string trimmer
	16925	TAP-GRUPO-01	Trimmer spool head replacement for Truper
	101814	CB-DES-GRUPO2	Carburetor for gas string trimmer
	101793	KC-DES-26C	Carburetor maintenance kit

## **Troubleshooting**

<sup>\*\*</sup> TRUPER Authorized Service Center

Problem	Cause	Solution
The motor does not start.	• There is no spark.	• Check the spark. Remove the motor cover. Remove the spark plug from the cylinder. Connect the spark plug cable and set it on top of the motor cylinder with its metal part touching the cylinder. Pull the starter and watch the spark in the spark plug electrode. If there is no spark, repeat the test with a new spark plug.
	• There is no fuel.	<ul> <li>Press the primer bulb until the fuel is visible in the primer bulb. If no fuel is showing it means that the fuel supply primary system is blocked. Contact a TRUPER Authorized Service Center. If the primer bulb fills with fuel, it means the motor is choked.</li> </ul>
	The motor is choked.  The starter jack is pulling with more difficulty than when new.	<ul> <li>With the switch off, remove the spark plug. Move the choke lever upwards and pull the starter handle 15 to 20 times to eliminate the fuel excess in the motor. Clean the spark plug and reinstall. Follow the normal starting procedure (consult page 8). If the motor does not start, move the choke lever downwards and repeat the starting procedure. If the motor is still not running, repeat the procedure but this time using a new spark plug.</li> <li>Take the tool to a TRUPER Authorized Service Center.</li> </ul>
The motor starts but it is not accelerating.	• The motor needs a few minutes to warm up.	Allow the motor to warm up completely. If the motor is not accelerating after three minutes contact your TRUPER Authorized Service Center.
The motor starts, but it only runs at high	Carburetor needs adjustment.	Take the tool to a TRUPER Authorized Service Center.
speed with the choke at half position.	Check the oil / fuel mix.	• Use new fuel and the right oil mix for two-cycle.
The motor is not gaining full speed and	• The air filter is dirty.	Clean the air filter. See page 10.
has too much smoke emissions.	• The anti spark guard screen is dirty.	Clean the anti spark guard screen. See page 10.
The motor starts, works but it has no idle speed.	• The idle screw in the carburetor needs to be adjustment.	Turn the idle screw clockwise to increase speed.

### **Authorized service centers**

In the event of any problem contacting a TRUPER Authorized Service Center, please see our webpage

<u>WWW.TRUPER.COM</u> to get an updated list, or call our toll-free numbers 800 690-6990 or 800-018-7873 to get information about the nearest Service Center.

### • AGUASCALIENTES

DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537

### • BAJA CALIFORNIA

SUCURSAL TIJUANA

AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL

FLORIDO II, C.P 22244, TIJUANA, B.C.

TEL.: 664 969 5100

### BAJA CALIFORNIA SUR

**FIX FERRETERÍAS** 

FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO

NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S.

TEL.: 613 132 1115

### • CAMPECHE

TORNILLERÍA Y FERRETERÍA AAA

AV. ÁLVARO OBREGÓN #324, COL. ESPERANZA

C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808

### CHIAPAS

**FIX FERRETERÍAS** 

AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700,

TAPACHULA, CHIS. TEL.: 962 118 4083

### CHIHUAHUA

SUCURSAL CHIHUAHUA

AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052

### MEXICO CITY

FIX FERRETERÍAS

EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 35, COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX.

TEL: 55 5522 5031 / 5522 4861

### COAHUILA

SUCURSAL TORREÓN

CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH.

TEL.: 871 209 68 23

### COLIMA

BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 314 332 1986 / 332 8013

### DURANGO

TORNILLOS ÁGUILA, S.A. DE C.V.

MAZURIO #200, COL. LUIS ECHEVERRÍA, DURANGO,

DGO.TEL.: 618 817 1946 / 618 818 2844

### • ESTADO DE MÉXICO

SUCURSAL CENTRO JILOTEPEC

PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257

TEL: 761 782 9101 EXT. 5728 Y 5102

### GUANAJUATO

CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V.

AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010,

CELAYA, GTO. TEL.: 461 617 7578 / 79 / 80 / 88

### GUERRERO

CENTRO DE SERVICIO ECLIPSE

CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010,

CHILPANCINGO, GRO. TEL.: 747 478 5793

### MORELOS

FIX FERRETERÍAS

CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL.

CENTRO, C.P. 62740, CUAUTLA, MOR.

TEL.: 735 352 8931

### NAYARIT

HERRAMIENTAS DE TEPIC

MAZATLAN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY.

TEL.: 311 258 0540

### NUEVO LEÓN

SUCURSAL MONTERREY

CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790

### OAXACA

FIX FERRETERÍAS

AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300,

TUXTEPEC, OAX. TEL.: 287 106 3092

### • PUEBLA

SUCURSAL PUEBLA

AV PERIFÉRICO #2-A, SAN LORENZO ALMECATLA,

C.P. 72710, CUAUTLACINGO, PUE.

TEL.: 222 282 8282 / 84 / 85 / 86

### QUERÉTARO

ARU HERRAMIENTAS S.A DE C.V.

AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE

ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO.

TEL.: 427 268 4544

### QUINTANA ROO

**FIX FERRETERÍAS** 

CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL,

C.P. 77710 PLAYA DEL CARMEN, Q.R.

TEL.: 984 267 3140

## • SAN LUIS POTOSÍ

**FIX FERRETERÍAS** 

AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320,

SAN LUIS POTOSÍ, S.L.P. TEL.: 444 822 4341

### SINALOA

SUCURSAL CULIACÁN

AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA

MORA, C.P. 80143, CULIACÁN, SIN.

TEL.: 667 173 9139 / 173 8400

### SONORA

**FIX FERRETERÍAS** 

CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL.

CENTRO, C.P. 85000, CD. OBREGÓN, SON.

TEL.: 644 413 2392

### • TABASCO

SUCURSAL VILLAHERMOSA

CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL,

2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB.

TEL.: 993 353 7244

### TAMAULIPAS

VM ORINGS Y REFACCIONES

CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL.

RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA,

TAMS. TEL.: 899 926 7552

### • TLAXCALA

SERVICIOS Y HERRAMIENTAS INDUSTRIALES
PABLO SIDAR #132, COL . BARRIO DE SAN BARTOLOMÉ,
C.P. 90970, SAN PABLO DEL MONTE, TLAX.

TEL.: 222 271 7502

### • VERACRUZ

LA CASA DISTRIBUIDORA TRUPER

BLVD. PRIMAVERA. ESQ. HORTENSIA S/N, COL.

PRIMAVERA C.P. 93308, POZA RICA, VER.

TEL.: 782 823 8100 / 826 8484

### YUCATÁN

SUCURSAL MÉRIDA

CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY.

MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC.

TEL.: 999 912 2451

## **Warranty policy**

# ModelCodeBrand12496DES-26CTRUPER

Warranty. Duration: 1 year. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by TRUPER®. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. Phone number 800-018-7873. Made in China. Imported by TRUPER, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.



Stamp of the business. Delivery date:

### WWW.TRUPER.COM

## **Frequently Asked Questions**

Q: What type of gasoline should I use?

A: It is recommended to use high-octane gasoline mixed with 2-stroke engine oil in a ratio of 50:1 for best performance and engine health.

Q: How often should I perform maintenance on the string trimmer?

A: It is advised to perform periodic maintenance on your machine as outlined in the manual, typically after every few uses or as needed to keep the tool in good working condition.

• Q: Can I use a different nylon line diameter than recommended?

A: It is recommended to always use a nylon line with a diameter of 0.08 in to 0.105 in to ensure proper functioning and safety of the trimmer.

## **Documents / Resources**



TRUPER DES-26C Gas String Trimmer [pdf] Instruction Manual DES-26C, Code 12496, DES-26C Gas String Trimmer, DES-26C, Gas String Trimmer, String Trimmer, Trimmer

### References

- User Manual
  - Code 12496, DES-26C, DES-26C Gas String Trimmer, Gas String Trimmer, String Trimmer, Trimmer,
- TRUPER TRUPER

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment *	
Name	
Email	
Website	
$\ \square$ Save my name, email, and website in this browser for the next time I comme	ent.
Post Comment	
Corobi	
Search:	
e.g. whirlpool wrf535swhz	Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of
these marks on this website does not imply any affiliation with or endorsement.