



Trust 23579 GXT 1230 Muta Wireless Gamepad Instruction Manual

[Home](#) » [Trust](#) » Trust 23579 GXT 1230 Muta Wireless Gamepad Instruction Manual

Contents [[hide](#)]


- [1 Trust 23579 GXT 1230 Muta Wireless Gamepad](#)
- [2 Battery indicators](#)
- [3 Controller](#)
- [4 Connect with pc](#)
- [5 How to use](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)



Trust 23579 GXT 1230 Muta Wireless Gamepad




Battery indicators

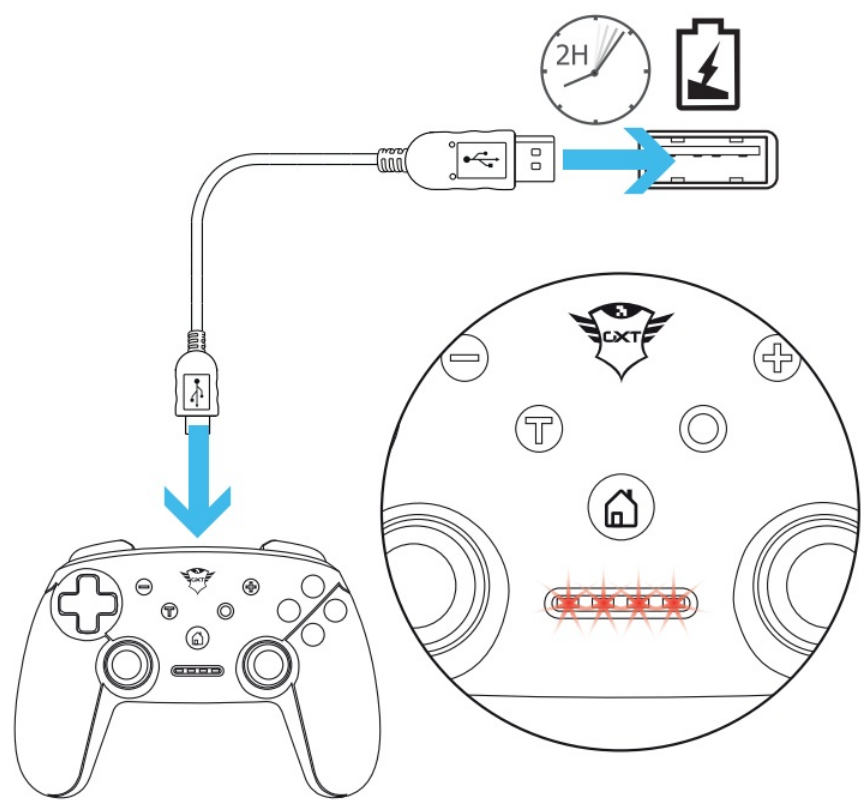


Controller

a

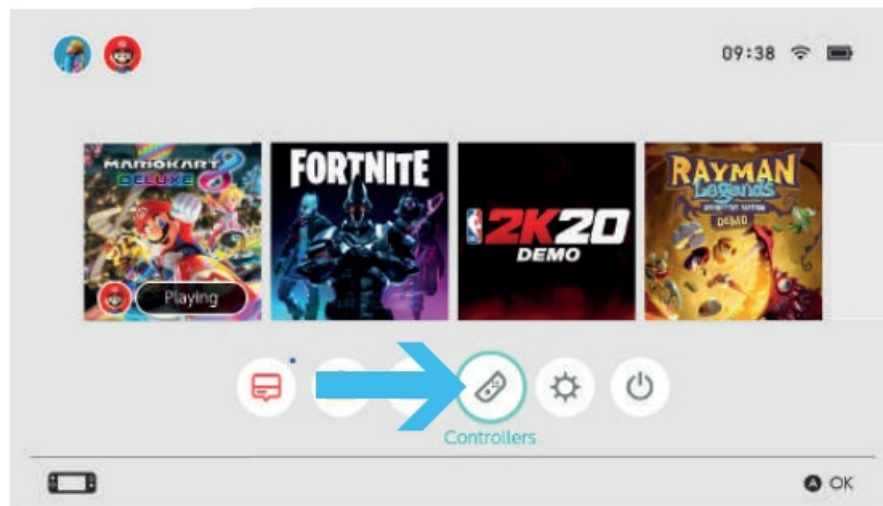

b

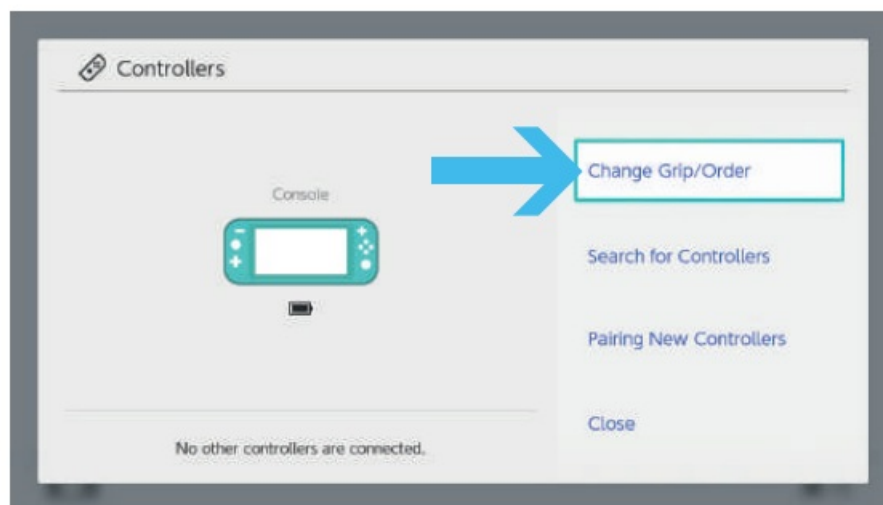


c





HOME + B

d

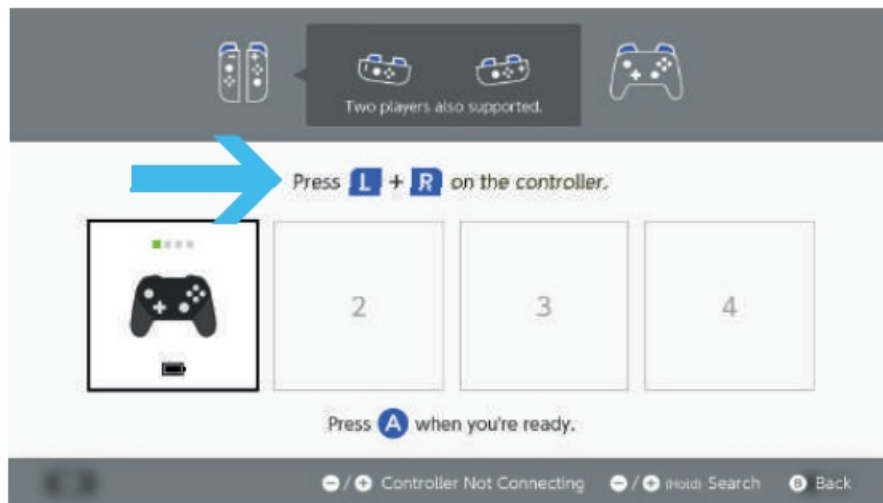

Connect with pc

a

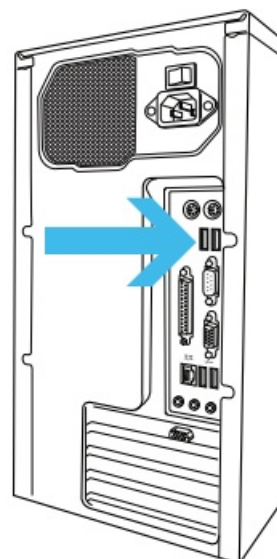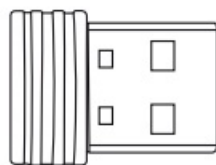

b



HOME + X

How to use

PC LAPTOP

SWITCH™



 + Y, B, A, X, L, R, LZ, RZ
press: on/off

Controller key	Switch	PC XInput
Y	Y	X
B	B	A
A	A	B
X	X	Y
+	+	Start
-	-	Back
L-Stick	L-Stick	L-Stick
R-Stick	R-Stick	R-Stick
L	L	LB
R	R	RB
LZ	LZ	LT
RZ	RZ	RT
L3	L3	L3
R3	R3	R3
Ⓣ	Turbo	Turbo
Ⓞ	Screenshot	N/A
Up	Up	Up
Down	Down	Down
Left	Left	Left
Right	Right	Right
🏠	Home	Guide

www.trust.com/23579/faq

Documents / Resources



[Trust 23579 GXT 1230 Muta Wireless Gamepad](#) [pdf] Instruction Manual
 23579 GXT 1230 Muta Wireless Gamepad, 23579 GXT 1230, Muta Wireless Gamepad, Wireless Gamepad