



TSC PEX-1120 4-Inch Performance Print Engine User Guide

[Home](#) » [TSC](#) » TSC PEX-1120 4-Inch Performance Print Engine User Guide 

Contents


- [1 TSC PEX-1120 4-Inch Performance Print Engine](#)
- [2 unpacking](#)
- [3 loading media](#)
- [4 loading ribbon](#)
- [5 Installing Driver & Calibrating Sensor](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)




TSC PEX-1120 4-Inch Performance Print Engine




unpacking

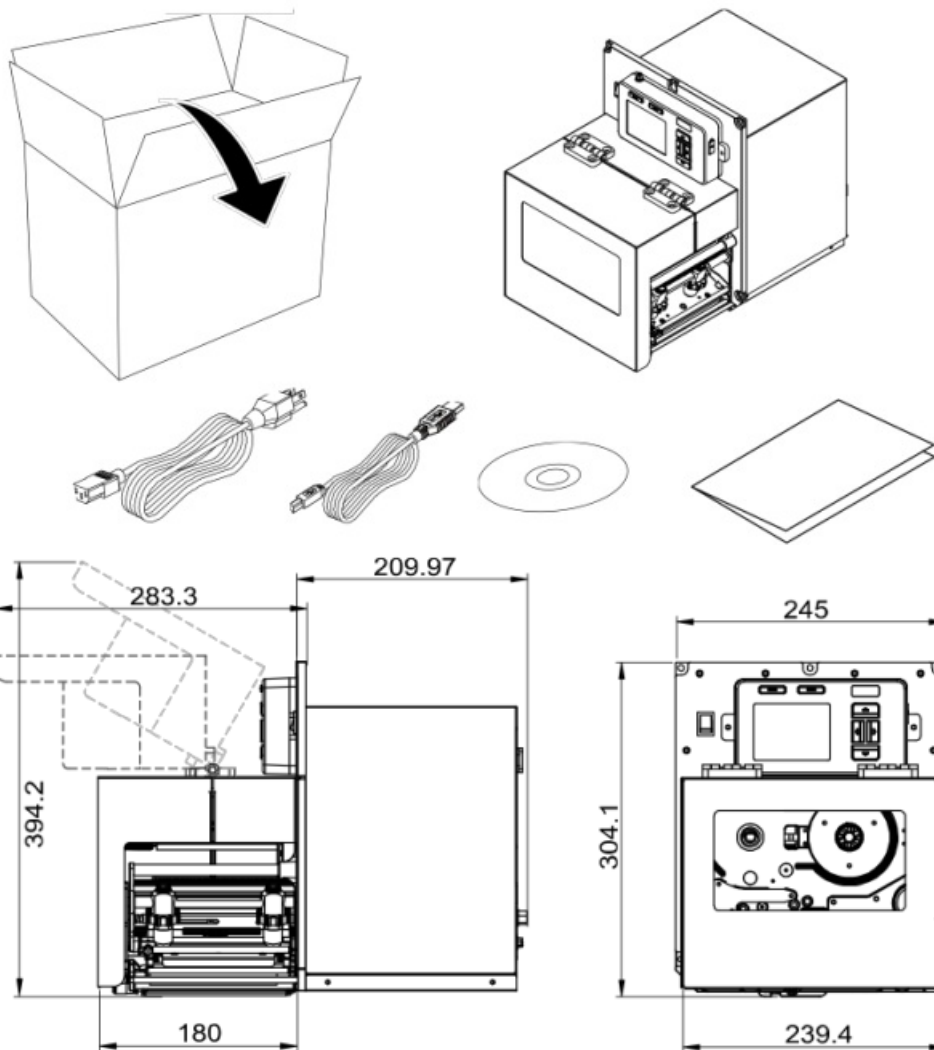


loading media

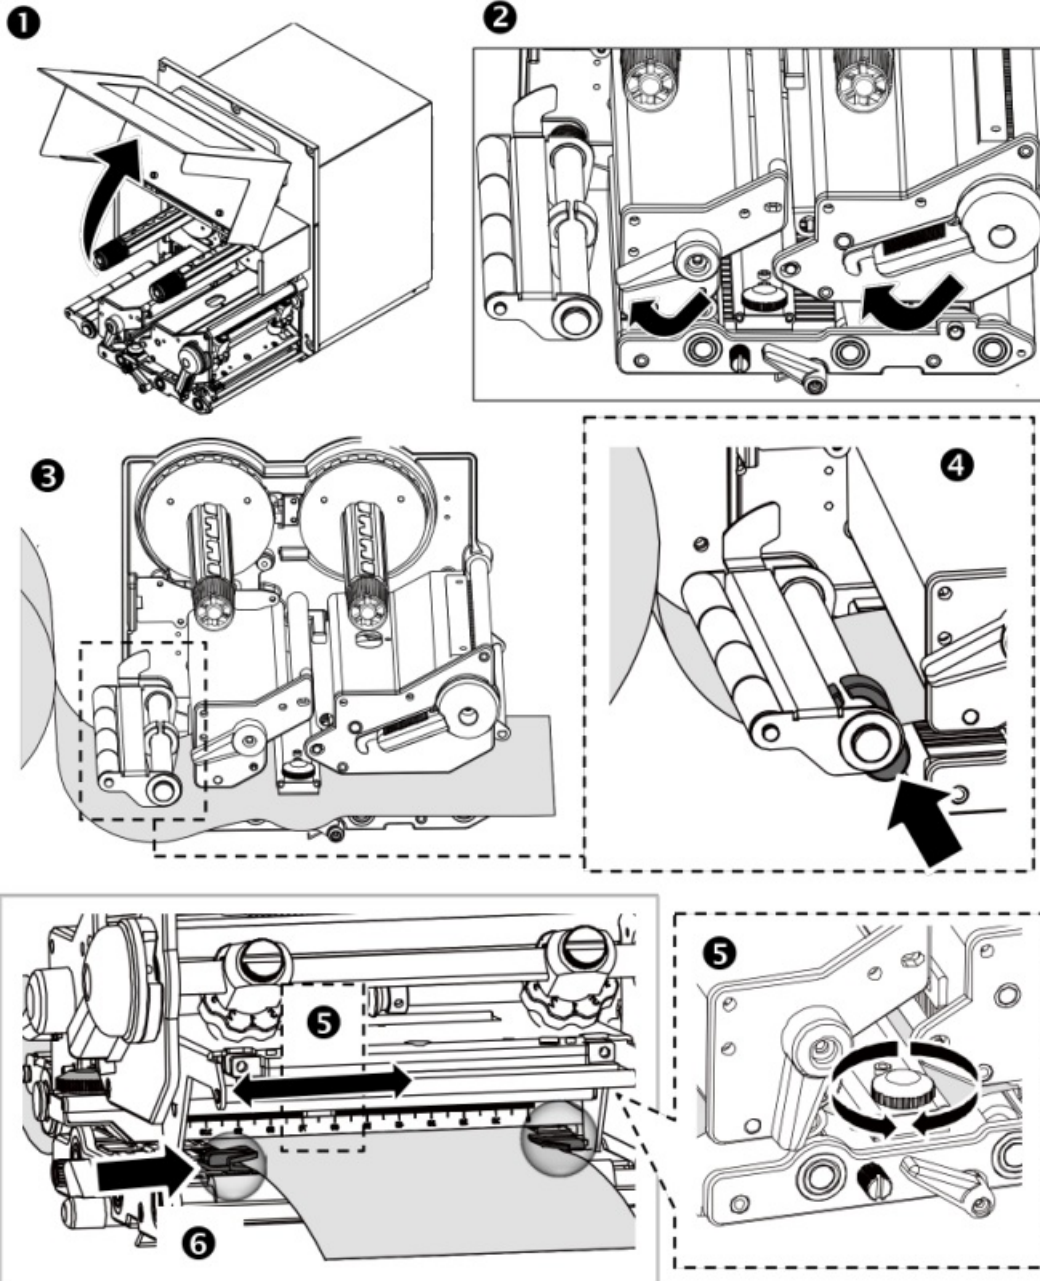


loading ribbon

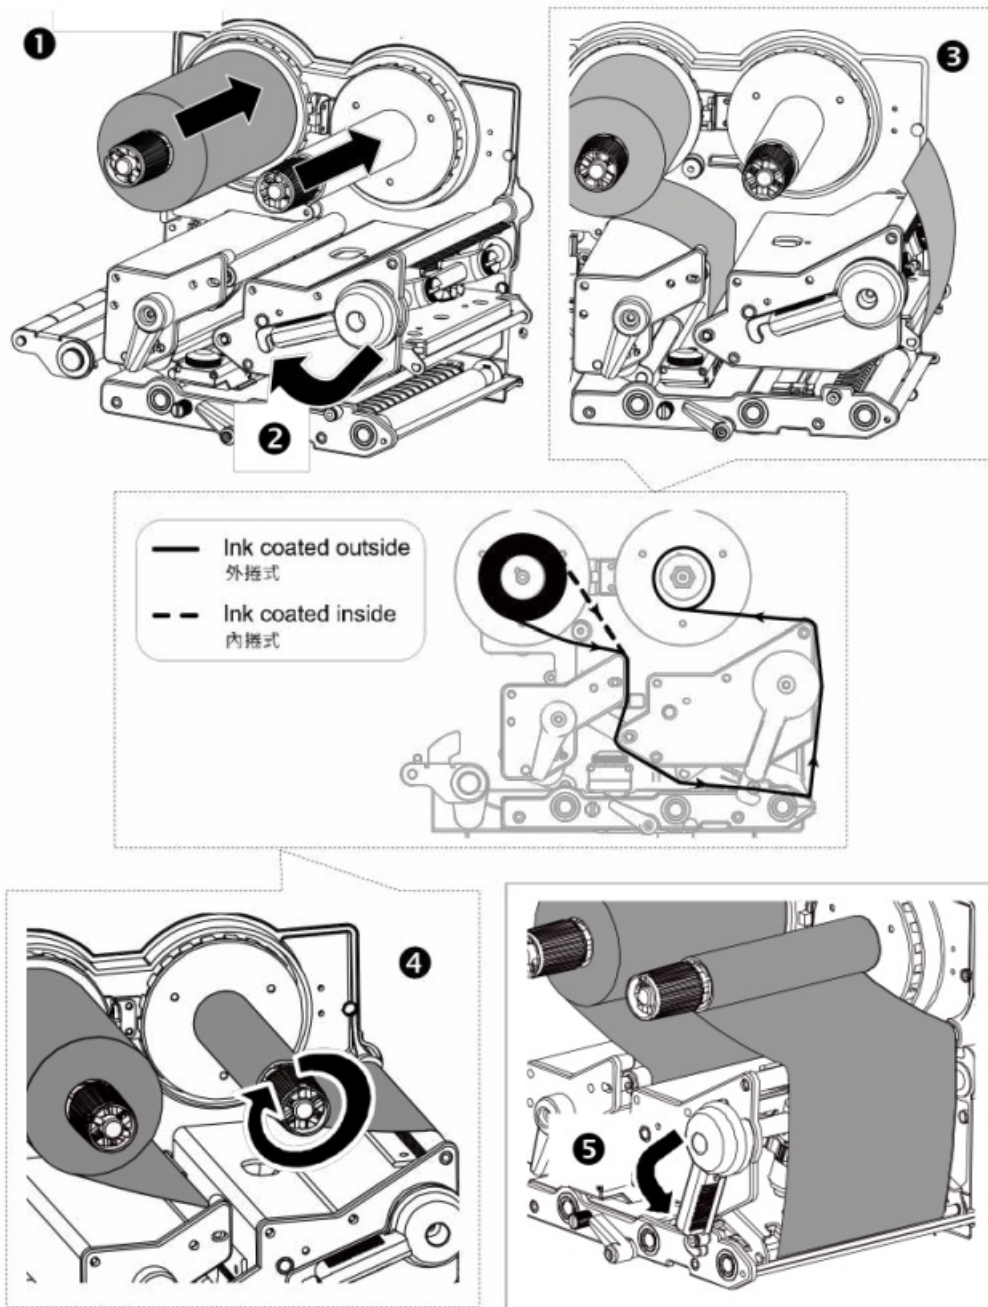


Attaching Power & Connecting Interface Cable

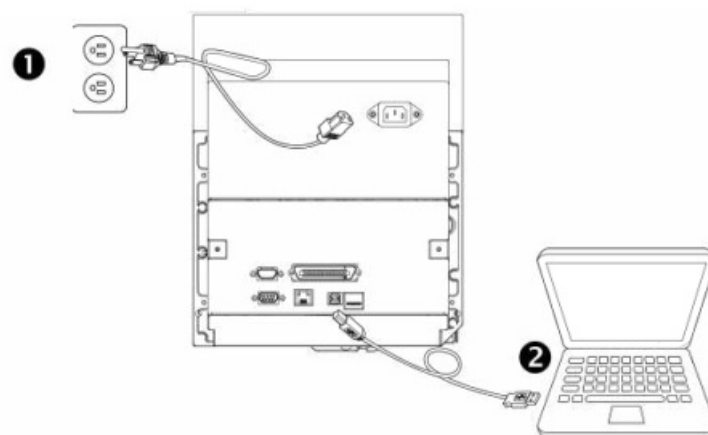


Turn on the Power

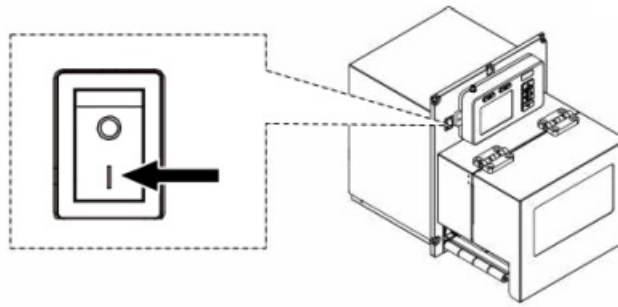

Installing Driver & Calibrating Sensor

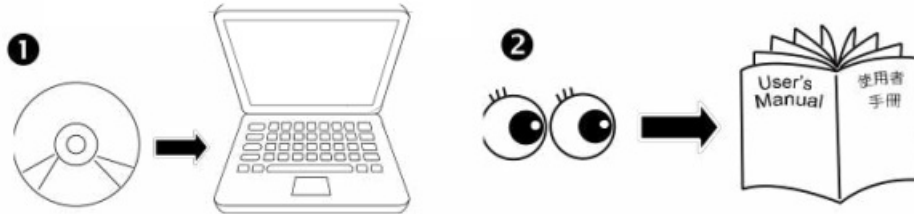

Documents / Resources

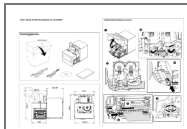

[TSC PEX-1120 4-Inch Performance Print Engine](#) [pdf] User Guide

PEX-1120 4-Inch Performance Print Engine, PEX-1120, 4-Inch Performance Print Engine, Performance Print Engine, Print Engine, Engine