

TT ELD PT30 ELD Device User Manual

Home » TT ELD » TT ELD PT30 ELD Device User Manual

Contents

- 1 TT ELD PT30 ELD Device
- 2 How to install an ELD device
- 3 Using TT ELD on the road
- **4 MORE INFORMATION**
- 5 Documents / Resources
 - **5.1 References**



TT ELD PT30 ELD Device



How to install an ELD device

- Make sure your vehicle engine is turned off. If the engine is on, please turn it off and turn the key to the "Off" position before connecting the ELD device.
- Locate the diagnostic part inside your vehicle's cabin. The diagnostic part is typically located in one of the following places:
 - under the left side of the dashboard;
 - under the steering wheel;
 - near the driver's seat;
 - under the driver's seat.
- Connect the ELD plug to the diagnostic part of the vehicle.
 Unscrew the lock surface until it locks. Make sure the ELD is connected.
- Once plugged in, the device will start syncing with the engine control module [ECM] and TTELD application on the tablet.
- Then get the tablet provided by Fleet and turn it on. The tablet should automatically start the application.




Application guide

- 1. Log in to the application using your username and password.
 - If you don't have an TT ELD account, please, contact your carrier.
 - If you don't remember your password, you can reset it by clicking "Forgot password?", or contact your carrier.



Your tablet with the TT ELD application automatically scans for ELD.


- When you log in to your TT ELD account, the app starts scanning for available ELD devices automatically.
- And the ELD device lights green when it is ready to use

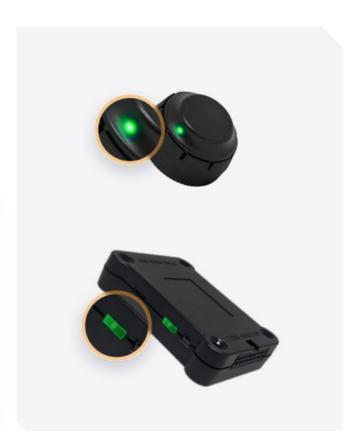



You should choose your ELD.

Once the scanning is complete, select your ELD device from the displayed list of results.

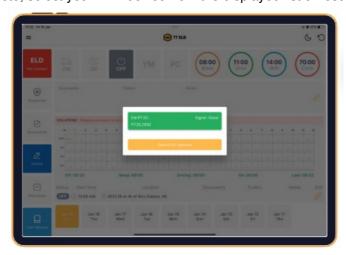

If the ELD is connected to the vehicle, you can see a green icon on the top left corner of the dashboard. If it is not connected, the icon stays red with the "ELD not connected" text.



Using TT ELD on the road

Once you have connected your mobile device to ELD, your driving time is automatically recorded.


When your vehicle starts moving and reaches a speed of at least 5 mph, your duty status is automatically set to "Driving". If the speed of your vehicle goes less than 5 mph, your duty status changes to "On Duty".



Choose a status in the main window based on your current situation.


From the statuses in the main window, select "Off Duty", "Sleep", or "On Duty" depending on your situation. Fill out the location field and put remarks, such as "Pre-trip inspection" or "Coffee break" (if the location field is left empty, it will be automatically set).




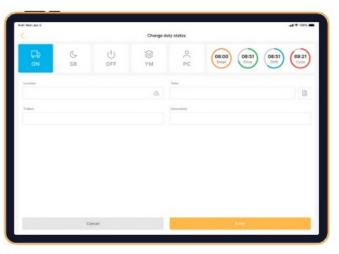

Follow the given guidelines to show your records to the officer


- 1. Tap the "Menu" icon on the top left corner and select "Inspection".
- 2. Tap "Begin inspection" and show your electronic logbook's eight-day summary to the officer.

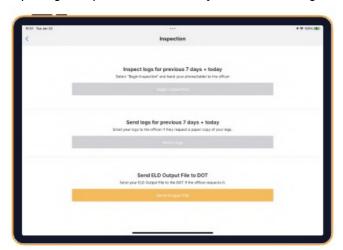


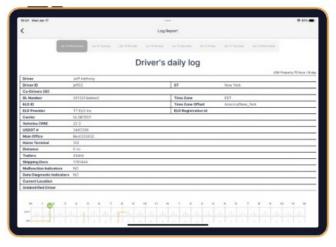

Transfer ELD records to the authorized safety officer for inspection


- 1. Tap the "Menu" icon on the top left corner and select "Inspection".
- 2. In the pop-up menu, select "Send ELD Output File to DOT" to send your electronic logbook's data to DOT.

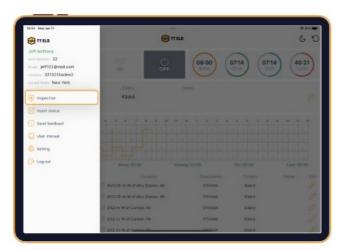


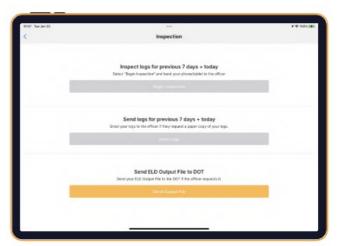

Transfer ELD records to the authorized safety officer for inspection

- 1. Tap "Send ELD Output File to DOT".
- 2. In the newly opened window, write your comment and click the "Send" button.

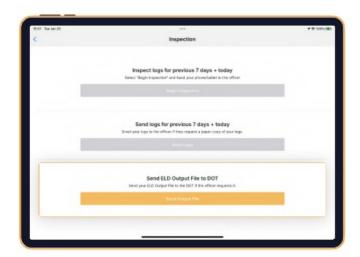

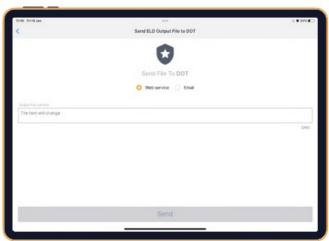

ELD Malfunctions

- 395.22 Motor carrier Responsibilities
- A motor carrier must ensure that its drivers possess onboard a commercial motor vehicle and an ELD information packet containing the following items: An instruction sheet for the driver describing
- ELD malfunction reporting requirements and record-keeping procedures during ELD malfunctions.

The following instructions are by the guidelines outlined in 395-34

TT ELD will monitor and report malfunction data based on section "4.6 ELD's Self-Monitoring of Required Functions":

- P Power compliance" malfunction,
- **E** Engine synchronization compliance" malfunction,
- T Timing compliance" malfunction,
- L Positioning compliance" malfunction,
- **R** Data recording compliance" malfunction,
- S Data transfer compliance" malfunction,
- O Other" ELD detected a malfunction.

MORE INFORMATION

- info@tteld.com
- <u>833-888-8353</u>
- 3864 Center Road Suite A12
- Brunswick, OH 44212

Documents / Resources



TT ELD PT30 ELD Device [pdf] User Manual PT30 ELD Device, PT30, ELD Device, Device

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.