

TT Pro i730 Additional Remote Control Instructions

Home » TT Pro » TT Pro i730 Additional Remote Control Instructions





Contents

- 1 i730 Additional Remote Control
- 2 Documents / Resources
 - 2.1 References

i730 Additional Remote Control

Choose First Server	Press left button if left player is serving first
Scoring	Press the corresponding button for the scorer of a point
Undo last point	Press the blue "Undo" button to step back and correct a mistake
End of Game	Press the middle "Select" button to proceed to the next game
End of Match	Press the middle "Select" button to show the match summary and final scores (pres s right/left to scroll up/down the list of completed games)
Timeout	When any score is displayed Long-hold the "Left" (or "Right") button to launch a 60 s econd countdown timer. Press "Back" at any time to cancel the timer
Warm Up	When "First server" is displayed, long-hold Left & Right to launch a 2-minute warmup timer. Press "Back" at any time to cancel the timer
Access Settings Screen	Press and hold the "Select" button
Reset Match	Press and hold Back button (from the Scoring screen)
Swap Server	Enter Settings screen, and select "Swap Serve"
Swap Sides	Enter Settings screen, and select "Swap Sides"
Change Match settings	Enter Settings screen, select "Match". When completed press "Back" to return
Change Display settings	Enter Settings screen, select "Display". When completed press "Back" to return
Swap Score Display	hen facing away from the scoreboard hold both "Left" and "Right" until the remote-co ntrol shows "Display Flipped" (Note that the scores on the remote-control display ar e not "flipped" as they still correspond to left and right player on the table with respect to referee)

Documents / Resources



TT Pro i730 Additional Remote Control [pdf] Instructions i730 Additional Remote Control, i730, Additional Remote Control, Remote Control

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.