



TurboTronic TT-CF7 Stick Vacuum Instruction Manual

[Home](#) » [TurboTronic](#) » TurboTronic TT-CF7 Stick Vacuum Instruction Manual 



INSTRUCTION MANUAL



**STICK VACUUM
TT-CF7**

Contents

- [1 TT-CF7 Stick Vacuum](#)
- [2 IMPORTANT SAFEGUARDS](#)
- [3 SAFETY INSTRUCTION](#)
- [4 DETAILED DESCRIPTION](#)
- [5 ASEEMBLY](#)
- [6 OPERATING GUIDLINES](#)
- [7 CLEANING AND MAINTENANCE](#)
- [8 TECHNICAL SPECIFICATIONS](#)
- [9 LIMITED WARRANTY:](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

TT-CF7 Stick Vacuum



<https://zline-world.com/product/tt-cf7-stick-vacuum-cleaner/>



www.zline-world.com

Thank you for buying CF7– Stick Vacuum by TurboTronic.

TT-CF7 cordless, rechargeable and powerful vacuum Lightweight and can be used to clean hard to reach areas. Transforms into a handheld vacuum cleaner allowing a greater use of cleaning options. TT-CF7 offers the power you need to keep your home clean. it cleans bare floors and deep cleans carpets. multi-floor cleaning performance, you can move from room to room, cleaning both hard floors and carpet.

BRAND: TURBOTRONIC	POWER: 22.2V 120W, 220-240V I 50-60Hz
ITEM NUNBER: TT-CF7	QTY.: 1 PCS/CTN
DESCRIPTION: Stick Vacuum	G.W: 2.6kg
GB PACKAGE SIZE: 805x275x173 mm	PRODUCT SIZE: 1190x280x250mm
COLOR: Blue	EAN: 4260563038728
COLOR: Black	EAN: 4260563038735
COLOR: Purple	EAN: 4260563038742

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY. READ ALL INSTRUCTIONS.

When using electrical appliance, basic safety precautions should always be followed, including the following:
Read this instruction manual carefully before operating the unit and keep it for future use. Failure to observe and

comply with these instructions may result in an accident.







WARNING:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The appliance is only to be used with the power supply unit provided with the appliance.

SAFETY INSTRUCTION

 
- Make sure that your device and its accessories are in perfect condition before use. You should not use it if you notice any anomalies.
- Before connecting the unit, check that the voltage indicated on the charger corresponds to that of your electrical installation.
- Check the charger power cable regularly. Never immerse the charger. Never leave the charger plugged in continuously to the socket.
- Your appliance is intended for domestic use inside your home. Use it according to the instructions in the manual.
- Never use this unit outdoors.
- Do not remove the plug by pulling the cable or the unit itself.
- Do not use this device while it is charging.
- Do not use this appliance to vacuum incandescent or sharp objects (lighted matches, hot ashes, nails).
- Do not use this vacuum cleaner to vacuum pins, twine, cement, plaster, or any other construction or decorative material.
- Never inhale liquids or toxic substances, detergents, gasoline or dangerous or flammable products. You may seriously damage your device.
- Do not use the vacuum cleaner on damp surfaces.
- Make sure never to clog the air intake areas.
- Do not use the device if it has fallen into water.
- Do not use the device without the tank and filter.
- Keep this device away from hot surfaces.
- Do not use the unit if its accessories are not properly assembled.
- Unplug the unit from the power supply while it is not in use for a period or before cleaning.
- Unplug the appliance from the mains when it is fully charged. Do not pull out the mains plug by tugging the cable.
- Be sure to disconnect the unit from the mains before replacing any accessories.
- For your safety, use only the original accessories supplied with your device.
- Never leave the unit unattended when plugged in.
- Always be sure to have dry hands when turning off or unplugging your device.
- Do not place the base near a heat source.

- Do not drop or pierce the battery.
- The operating temperature of the product varies from 0°C to 40°C, do not use it in environments that exceed the maximum recommended temperature.

	Indicates to read and review instructions to understand operation and use of product.
	Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.
	Take care to avoid contact with hot surface. Always use hand protection to avoid burns.
	For indoor and household use only.


INSTALL THE MAIN FLOOR BRUSH

If you need to connect the floor brush to the vacuum cleaner, connect it directly to the vacuum cleaner body as shown in the picture

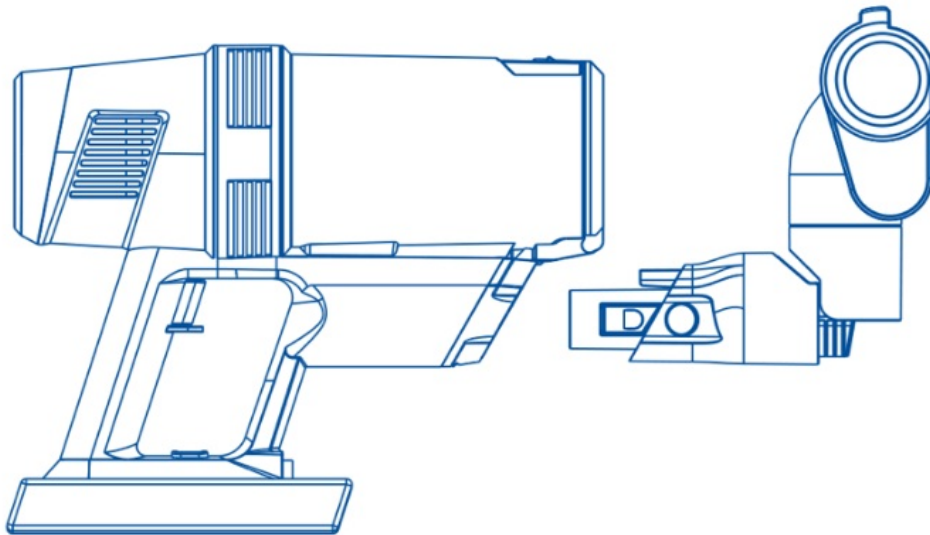


INSTALL 2 IN 1 BRUSH

 To connect the 2 in 1 brush to the vacuum cleaner, connect it directly to the vacuum cleaner body as shown in the picture

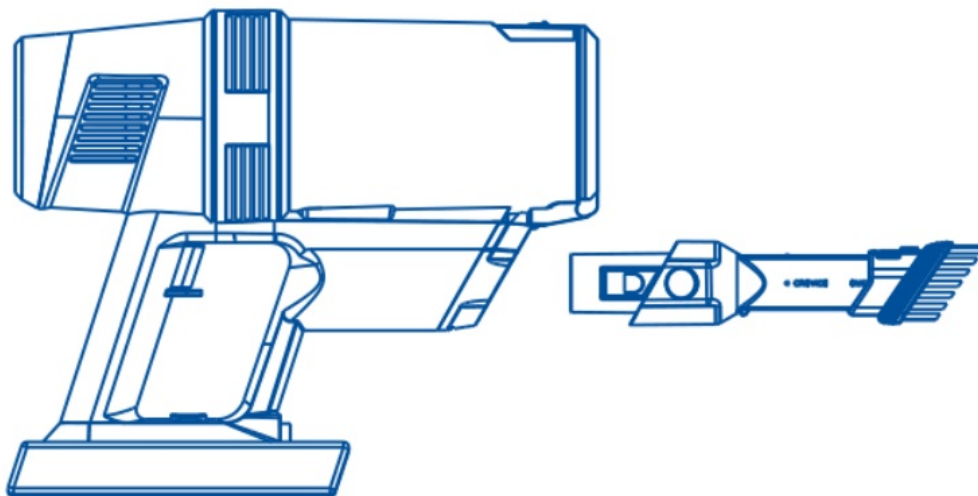

DETAILED DESCRIPTION

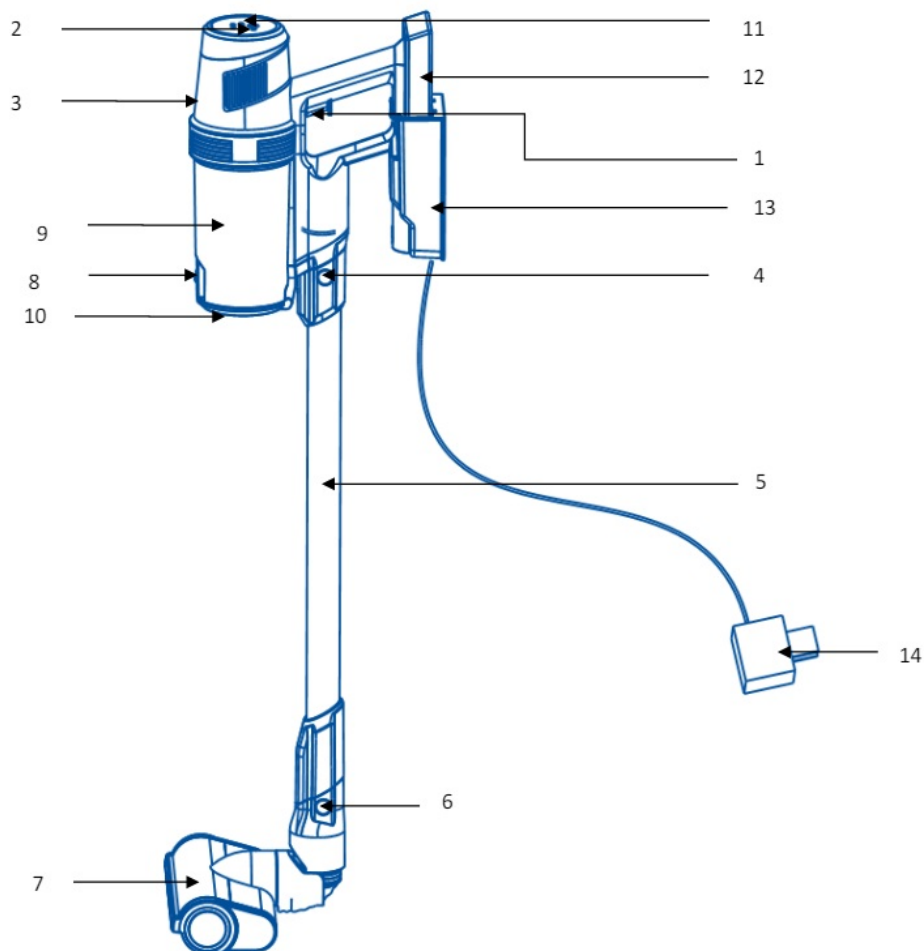 


1. On/Off button
2. Speed control button
3. Motor
4. Unlocking button
5. Vacuum cleaner tube
6. Brush unlocking button
7. Main brush


8. Dust compartment unlocking button
9. Dust compartment
10. Dust compartment lid
11. Battery indicator light
12. Battery
13. Wall mounting bracket
14. Charger

ASSEMBLY

 1. Place the filter into the dust compartment, turn the cone and align the notches on the cone with ridges of the dust compartment
2. Insert the filter into the cone, making sure to flatten it.
3. Screw the assembled dust compartment into the main body until a clicking sound is heard, indicating that screwing is complete.

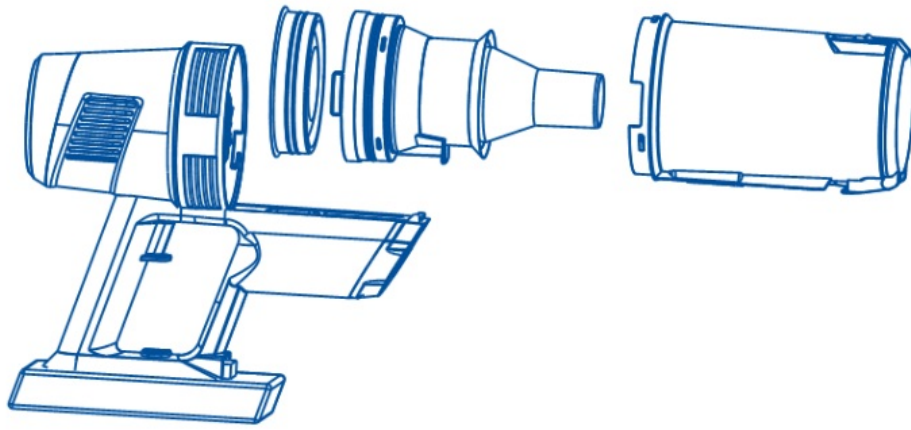


 4. Install the battery pack into the bottom position of the main-body until you hear a click

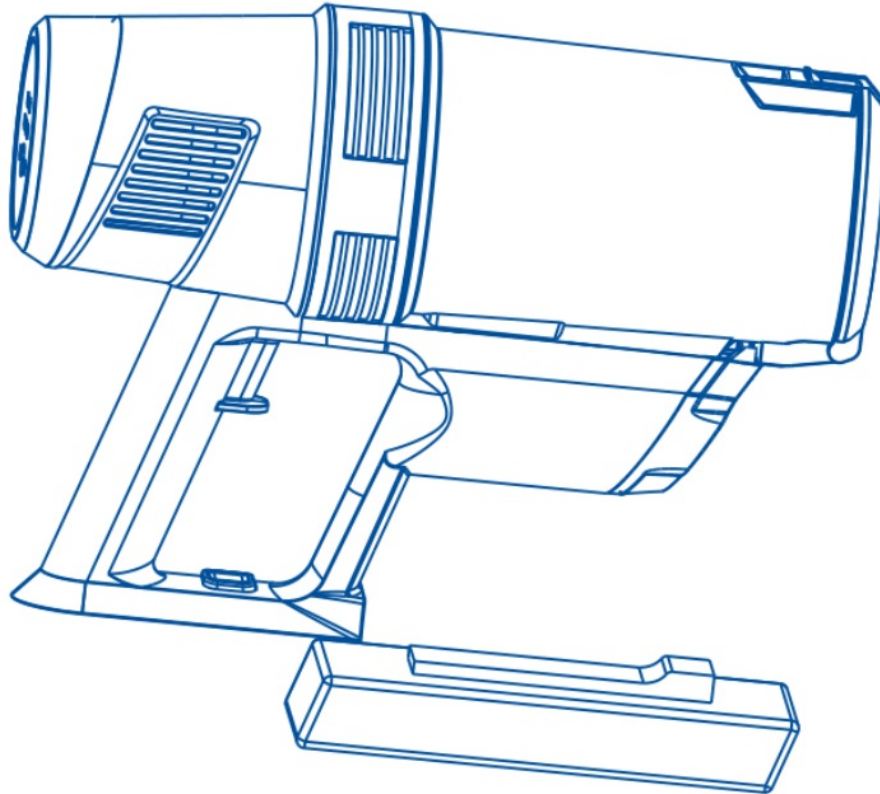

5. Install accessories to the main-body

 Install the aluminum tube and floor brush, simply insert them into the holes on the front of the main-body until you hear a click, then installation is completed.

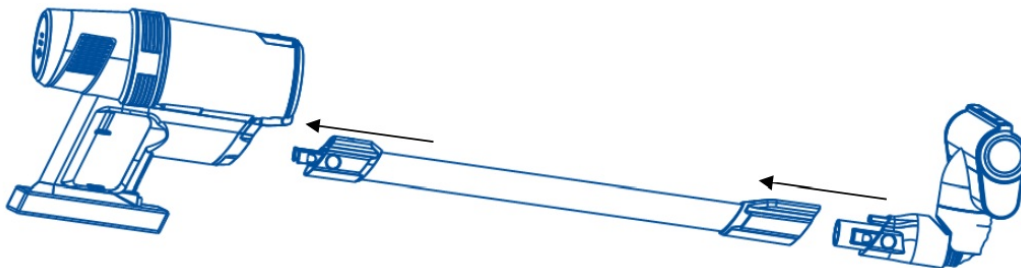

OPERATING GUIDLINES

Before the first use:

1. Remove all protective covers or materials

2. Check that all the parts are included and in good condition
3. Assemble the vacuum cleaner as explained above
4. Position the vacuum cleaner on the wall bracket, plug it in and let it charge fully.
5. When charging, an indicator light lights up. When charging is completed, all 3 indicator lights are on.

Important:

Do not leave the charger connected continuously. Unplug it once your vacuum cleaner is well charged. This will save you energy and extend the life of your charger. The battery provided is only suitable for this vacuum cleaner.

Note:

You must fully charge the battery before the first use and when the appliance has been unused for a long time. When the battery starts to weaken, recharge it immediately with the adapter

Use:

Turn the vacuum cleaner on and off with the on/off button and use the speed control button to adjust the power.

2 in 1 accessory

- Insert the 2-in-1 accessory into the main unit and push the brush head backwards. This accessory is perfect for cleaning sofas, corners, stairs, keyboards, furniture, shelves, electrical appliances and narrow spaces.
- Insert the 2-in-1 accessory into the vacuum cleaner tube and push the brush head back. You can now reach the ceiling and other high areas.

Main brush

- Attach the accessory to the hose. This accessory is ideal for vacuuming floors and carpets.

CLEANING AND MAINTENANCE

- Clean the body of the appliance with a soft, dry cloth.
- Never use detergents or abrasives to avoid damaging the unit.
- Never immerse the appliance in water or any other liquid.
- Store the unit in a place away from direct sunlight.

To empty the dust from the dust compartment:

- Press the unlock button to separate the dust compartment from the main body of the appliance.
- Then press the dust compartment button and empty the compartment.

To clean the dust compartment:

- Remove the dust compartment, remove the filter and the plastic filter.
- Wash and air dry both filters.

To clean the main brush:

Slide the tab at the bottom of the accessory, remove the brush and clean it.

TECHNICAL SPECIFICATIONS

Voltage: 22.2V
Power: 140W
Charging time: 4 to 5 hours

DISPOSAL OF OLD ELECTRICAL APPLIANCES:



The European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment. The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

LIMITED WARRANTY:

Limited Warranty applies to purchases made from authorized retailers of TurboTronic®.

TurboTronic® Warranty coverage applies to the original owner and to the original product only and is not transferable.

TurboTronic® warrants that the unit shall be free from defects in material and workmanship. Limited Warranty apply only when it is used under normal household conditions and maintained according to the requirements outlined in the Owner's Guide, subject to the following conditions and exclusions:

ANY WARRANTY OR AFTER PURCHASE SERVICE, SHOULD BE WITH A THIRD-PARTY COMPANY, FROM WHICH YOU PURCHASED THE PRODUCT. TURBOTRONIC® PROVIDES THE WARRANTY ONLY TO OUR THIRD-PARTY SUPPLIERS. SINCE THIS PRODUCT IS NOT PURCHASED DIRECTLY FROM TURBOTRONIC® BUT THROUGH ONE OF OUR THIRDPARTY SUPPLIERS, ANY ISSUE AFTER THE PURCHASE, CUSTOMER SERVICE OR RECEIVING THE WARRANTY SHOULD BE ONLY / DIRECTLY THROUGH THE THIRD-PARTY SUPPLIERS FROM WHICH YOU PURCHASED THE PRODUCT.

What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in TurboTronic® sole discretion, will be repaired or replaced
2. TurboTronic® reserves the right to replace the unit with one of equal or greater value.

What is not covered by this warranty?


1. Normal wear and tear of wearable parts (such as blending vessels, lids, cups, blades, blender bases, removable pots, racks, pans, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty.
2. Any unit that has been tampered with or used for commercial purposes.
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by TurboTronic®. These defects include damages caused in the process of shipping, altering, or repairing the TurboTronic® product (or any of its parts) when the repair is performed by a repair person not authorized by TurboTronic®.
6. Products purchased, used, or operated outside Europe. Illustrations may differ from actual product.

We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice. TurboTronic®. and Z-Line® are registered trademarks of: Z-GLOBAL B.V.B.A®.

PRINTED IN PRC



Documents / Resources

	<p>TurboTronic TT-CF7 Stick Vacuum [pdf] Instruction Manual TT-CF7 Stick Vacuum, TT-CF7, Stick Vacuum, Vacuum</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.