



TUREWELL RK3318 Android TV Box User Manual

[Home](#) » [Turewell](#) » TUREWELL RK3318 Android TV Box User Manual 

TUREWELL

Android TV User Manual

Contents

- [1 Getting Started](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

Getting Started

1.1 Basic Operations

1.1.1 Power On/ Off and Sleep

1. Connect the box to the TV with HD cable, connect box to the power adaptor, Connect mouse, aif mouse or other input devices with USB port
2. Aterthe device and cable connected pover led urn o blue:
3. Afterthe device and cable disconnected, Power LED tums off
4. Under power on mode, press remote conirof's power bution, device is enering nto slesp mode.
5. Under sleep mode, device will be wake when you press remote control's power button,

1.1.2 Open applications

Use remate conlrofs arrow keys choose the waniend program,clik OK button t open the selected program

1.1.3 Switch in the applications

Click "My Apps" to view recently used programs, click program icon 1o switch appliation arbivarily

1.4 Open applications

Use remote controf's arrow keys to choose the wanted program,click OK button to open the selected program.

1.1.5 Back To Home Screen

 
Click icon  return to home screen

Click icon  on femoe control to return to home screen


1.1.6 Read External Storage Data


Read U Disk

Insert U flash disk or removable hard disk into USB port in the status of power on, icon USB 'appears in top left corner of the desktop, open "FileBrowser", the identified USB(A:) will appear under "Local Disk", U disks operation is available now

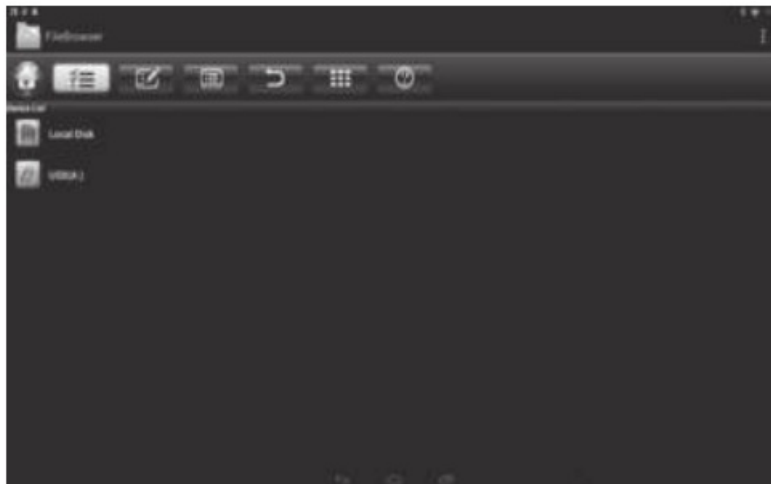

Read TF card

 
Insert T card into the device in the status of power on, when icon  appears in top left corner of the desktop, open "FileBrowser" the identified External Storage Card will appear under "Local Disk", TF card's operation is available now

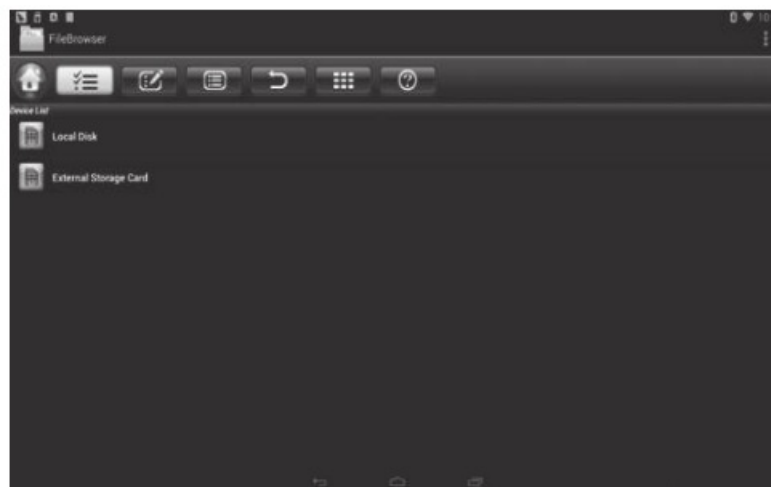

1.1.7 WIFI Function

Home Screen → Settings Network → Select "WiFi" to open WIFI function

 Choose hotspot → Input Password → Connect to the network

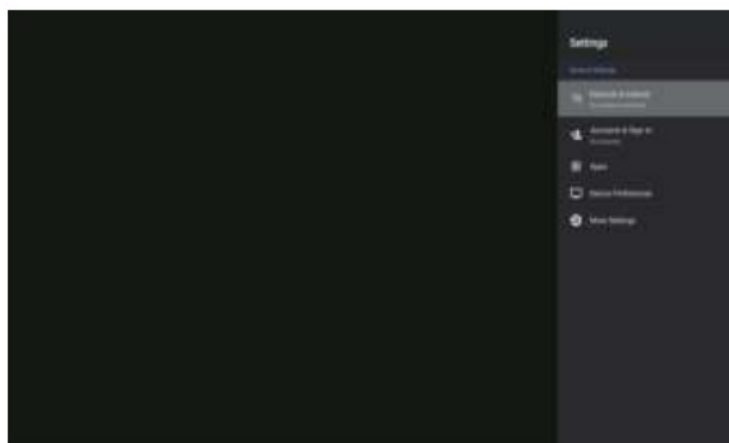

1.1.8 Ethernet Function

 
Insert network cable, network will be connected automatically




1.1.9 WLAN Hotspot

Operations on the box

Homa Screen → Settings→ Other→More Setting→ Portable holspot→ Select “Portable Wi hotspot

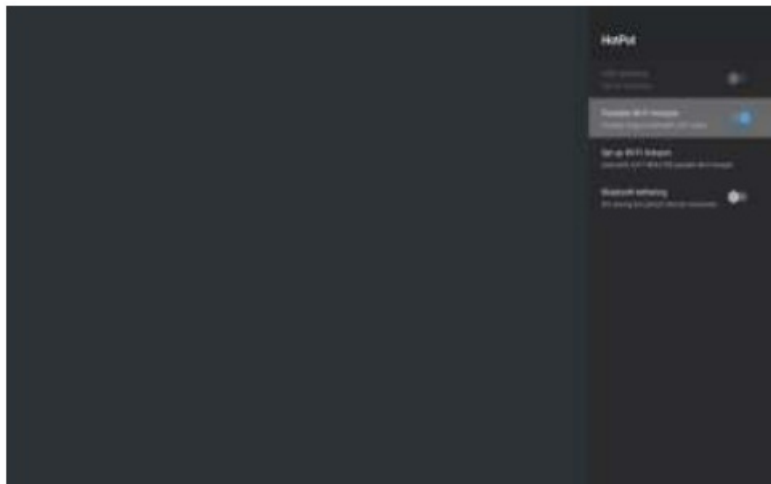

 ‘Select”Set up Wi holspot” to set up “Network SSID™.* Securly”“Password” parameters

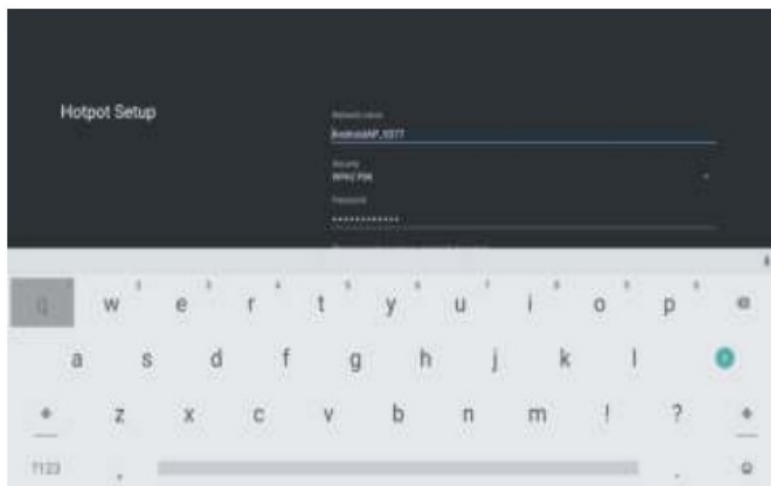

* Ensure connecied o the wired network, the bor can be used as wireless AP 0 support more wireless devices access In the famly

2.4.1 The Step that how to reflash the box

1. Uncompress the downloaded firmware(ROM) to the root of and sorT card(forme your card fist
2. Insert the SD Card into powered-off Box (power cable not plugged i) with no external USB Storage atatched.
3. Using a toothpick, nsert into the AV port o Box,press and haldthe hdden button while plugging power in Do not release unil you see the screen of Robert Logo.
4. Update will un automatically. When it is done then choose “Reboot’. You can disregard any ertorsthat display afer the update, they are not relevant {0 your device

5. When system has rebooted then you should first check (to ensure wifi is working by going to Settings->WiFi. Turn on the wifi switch and you should be able to connect.

TUREWELL

Documents / Resources

Android TV User Manual	TUREWELL RK3318 Android TV Box [pdf] User Manual RK3318 Android TV Box, RK3318, Android TV Box, TV Box, Box
---------------------------	--