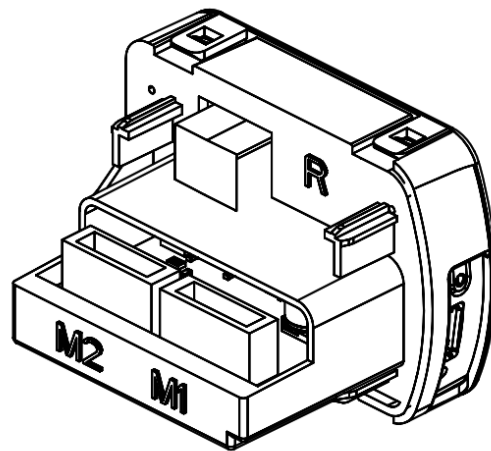
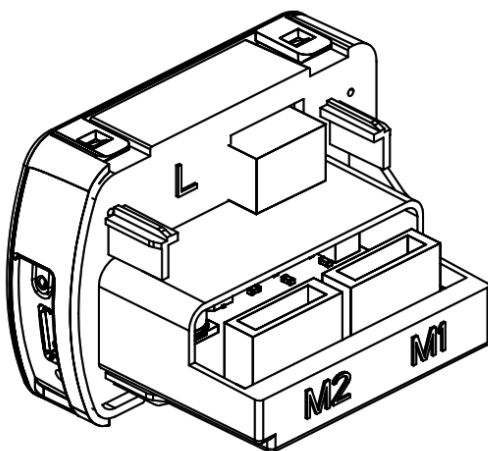


Turnils North America AMPTDBUCL RF Receiver Controller Programming User Guide

[Home](#) » [Turnils North America](#) » Turnils North America AMPTDBUCL RF Receiver Controller Programming User Guide 



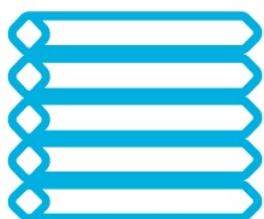
AMP™
AMPTDBU RF Receiver
User Guide



Contents

- 1 Fields of Application
- 2 Specifications
- 3 Safety Instructions
- 4 System Overview
- 5 P1 Button Instructions
- 6 Button Instructions
- 7 Pair / Unpair Remote Control
- 8 Change Motor Direction (if necessary)
- 9 Setting the Upper and Lower Limits
 - 9.1 Set Upper Limit
 - 9.2 Set Lower Limit
- 10 Adjust Limits
 - 10.1 Adjust the Upper Limit
 - 10.2 Adjust the Lower Limit
- 11 Favorite Position
 - 11.1 Set Favorite Position
 - 11.2 Send Shade to Favorite Position
 - 11.3 Delete Favorite Position
- 12 Roller Mode and Sheer Mode
 - 12.1 Roller Shade Mode – continue movement after a short press – Default Mode
 - 12.2 Sheer Shade Mode – jog movement after a short press (continue movement after a long press)
- 13 Add or Remove Additional Remote
 - 13.1 Using Current Remote Control
 - 13.2 New Remote Control
- 14 Adjust Motor Speed
 - 14.1 Acceleration Speed
 - 14.2 Declaration Speed
- 15 Declarations
- 16 Troubleshooting
- 17 Documents / Resources
- 18 Related Posts

Fields of Application



Cellular/Honeycomb
Standard



Cellular/Honeycomb
Skylight



Cellular/Honeycomb
TDBU



Cellular/Honeycomb
Day/Night

Specifications

Working temperature: -10° C ~ +50° C
Input Voltage: USB 5V 1A / USB 5V 2A
Radio Frequency: 433.925 MHz
Maximum Running Time: 6 minutes

Attention

Never drop, knock, drill or submerge the motor.

Read all safety instructions before installation.

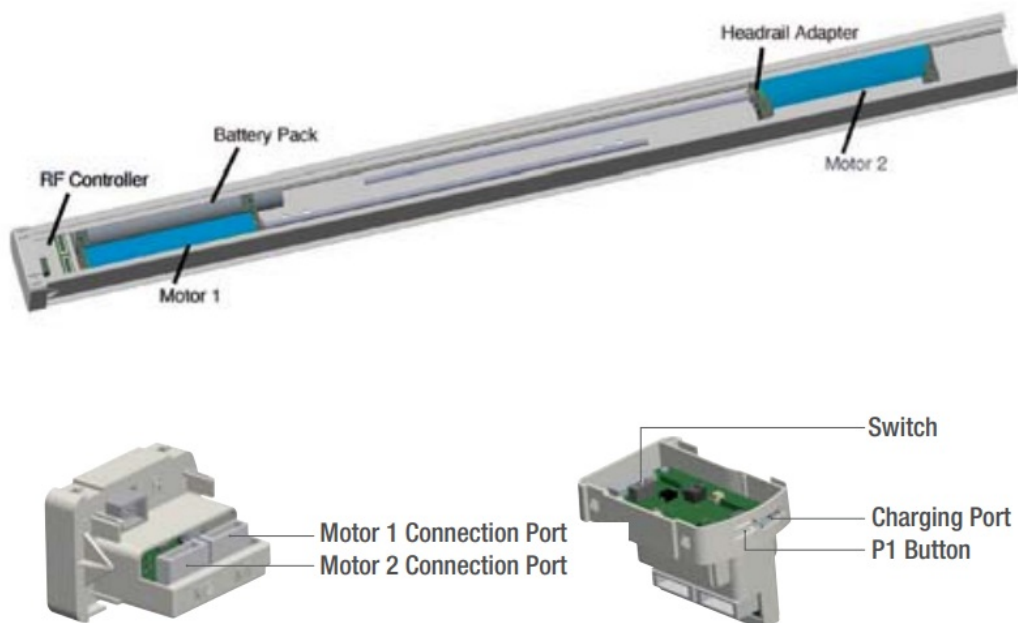
Incorrect installation can lead to serious injury and will void the manufacturer's liability and warranty.



Safety Instructions

1. Do not expose the motor to humid, damp, or extreme temperature conditions.
2. Do not drill into the motor.
3. Do not cut the antenna. Keep it clear from metal objects.
4. Do not allow children to play with this device.
5. If the power cable or connector is damaged, do not use it.
6. Ensure the correct crown and drive adaptor are used.
7. Ensure the power cable and aerial are clear and protected from moving parts.
8. Cable routed through walls should be properly isolated.
9. The motor is to be mounted in a horizontal position only.
10. Before installation, remove unnecessary cords and disable equipment not needed for powered operation.
11. Installation and programming should be performed by a qualified professional. Use or modification outside the scope of these instructions may void the warranty.

System Overview



Switch Functions

1. When the Switch is at Location 1, it is Cellular/Honeycomb TDBU and Cellular/Honeycomb Day/Night Shades working mode.
2. When the Switch moves to Location ON, it is Cellular/Honeycomb Standard and Cellular/Honeycomb Skylight working mode.
3. The Factory default mode is set at Location 1.

P1 Button Instructions

1. Test Motor (Wakes and Runs)

Happening as you press for 1 second

	Press P1 Less than 1 sec.
--	------------------------------

2. Activate Pairing Mode

Happening as you press for 2 seconds

	Press P1 Approx. 2 sec.	Until Shade:		Jog x1
--	----------------------------	--------------	--	--------

3. Sleep Mode

Happening as you press for 6 seconds

	Press P1 Approx. 6 sec.	Until Shade:		Jog x2
--	----------------------------	--------------	--	--------

4. Reverse Motor 1 with Motor 2

Happening as you press for 10 seconds

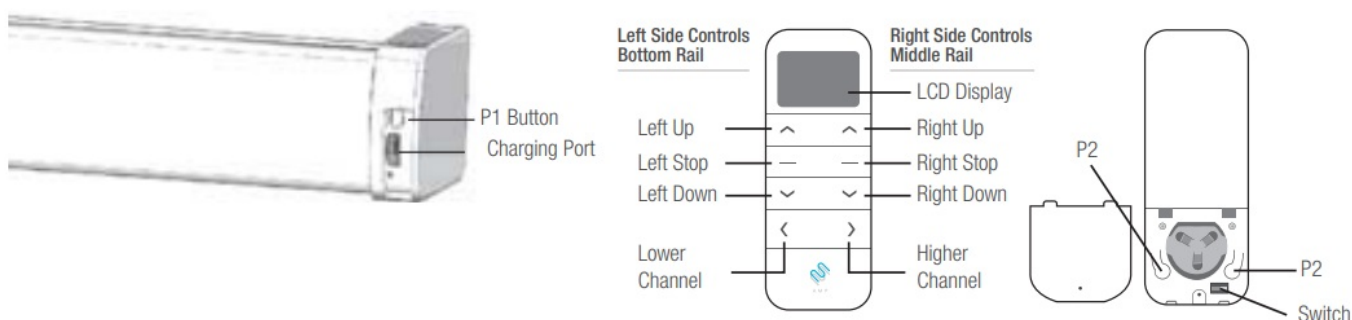
	Press P1 Approx. 10 sec.	Until Shade:		Jog x3
---	-----------------------------	--------------	---	--------

5. Reset To Factory Settings

Happening as you press for 14 seconds

	Press P1 Approx. 14 sec.	Until Shade:		Jog x4
---	-----------------------------	--------------	---	--------

Button Instructions



Rechargeable Battery



Blinking red:
Low battery alert



Blinking green:
Charging in process



Solid green:
Battery has finished
charging



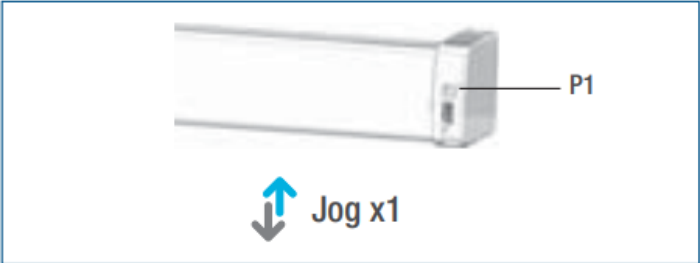
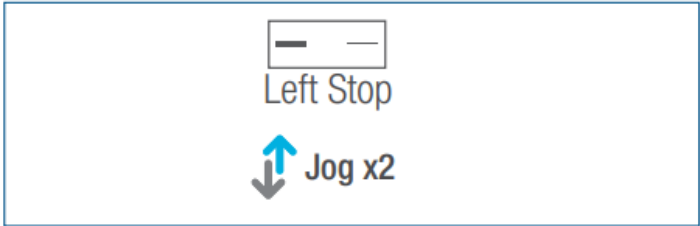
Essential Settings

The steps in factory mode must be completed to ensure proper operation.

* All setup needs to be done using the LEFT SIDE of the remote.

Pair / Unpair Remote Control

- Press the "P1" button (about 2 sec) on the End Cap as shown until motor jog x1.
 - In the next 10 secs, press and hold the Left "Stop" button on the remote control until the motor jog x2.
- * Repeat the same procedure to the unpair the remote control.

Action on Endcap Motor Response	a. 
Action on Remote Control Motor Response	b. 

Change Motor Direction (if necessary)

Press the Left “Up” or Left “Down” button to check if the shade moves in the desired direction.

If you need to reverse the direction, press and hold (about 2 sec) the Left “Up” and “Down” buttons simultaneously until the motor jog x1.

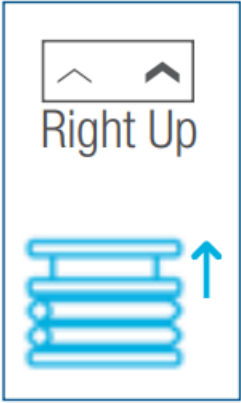

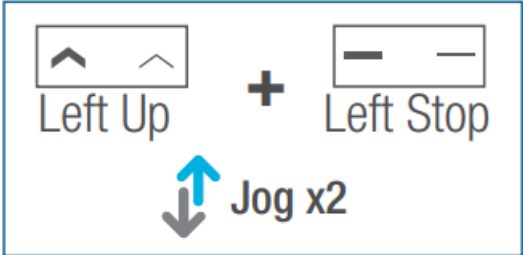
*The operation is only valid when there are no limits.

Action on Remote Control Motor Response	
---	--

Setting the Upper and Lower Limits

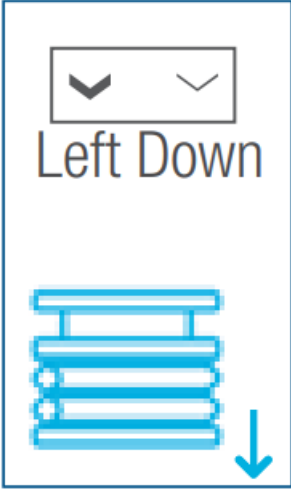
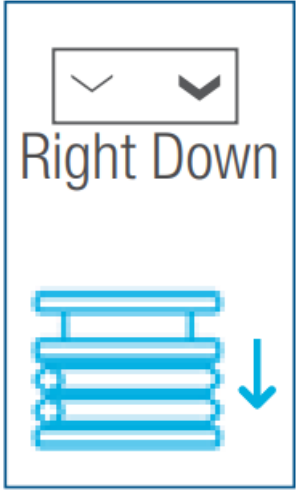
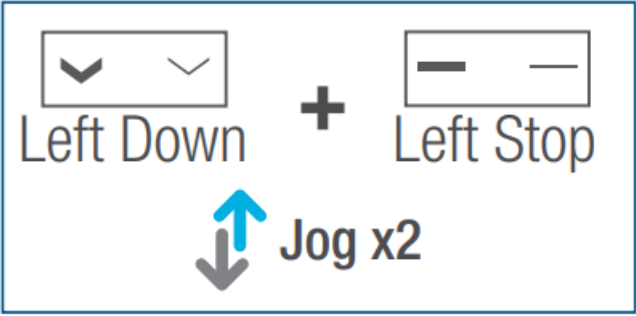
Set Upper Limit

- Press the Right “Up” button to raise the Middle Rail, then press the Right “Stop” button when it is in the desired upper limit.
- Press the Left “Up” button to raise the Bottom Rail, then press the Left “Stop” button when it is in the desired upper limit.
- Press and hold (about 2 sec) Left “Up” and Left “Stop” buttons simultaneously until the motor jog x2.

<p>Action on Remote Control Middle Rail Response</p>	<p>a.</p> 
<p>Action on Remote Control Bottom Rail Response</p>	<p>b.</p> 
<p>Action on Remote Control Motor Response</p>	<p>c.</p> 

Set Lower Limit

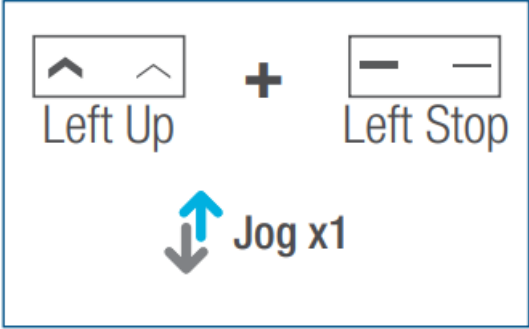
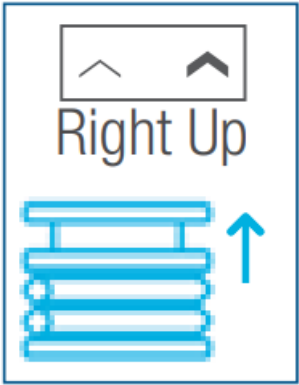
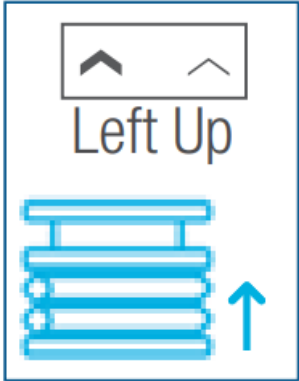
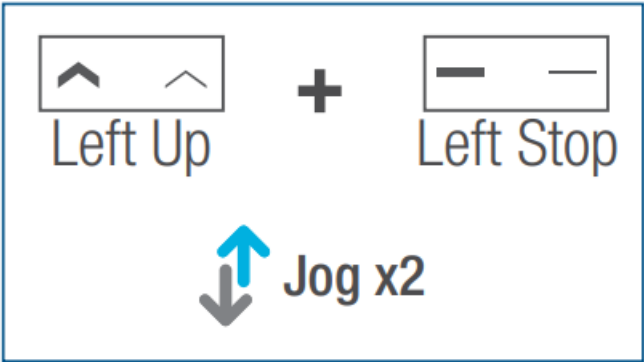
- Press the Left “Down” button to lower the Bottom Rail, then press the Left “Stop” button when it is in the desired lower limit.
 - Press the Right “Down” button to lower the Middle Rail, then press the Right “Stop” button when it is in the desired lower limit.
 - Press and hold (about 2 sec) Left “Down” and Left “Stop” buttons simultaneously until the motor jog x2.
- *If you exit the limit setting status before you finish the limit settings, the motor will take the previous existing limits.

<p>Action on Remote Control Bottom Rail Response</p>	<p>a.</p> 
<p>Action on Remote Control Middle Rail Response</p>	<p>b.</p> 
<p>Action on Remote Control Motor Response</p>	<p>c.</p> 

Adjust Limits

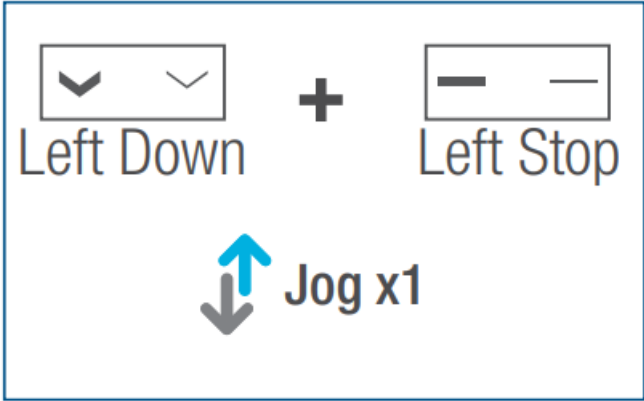
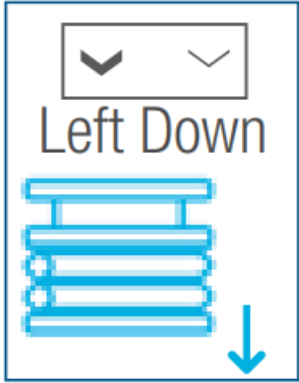
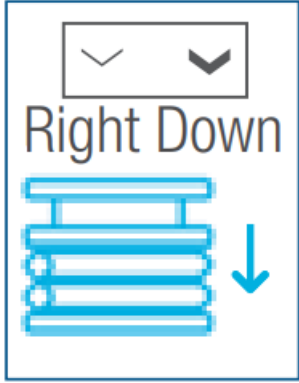
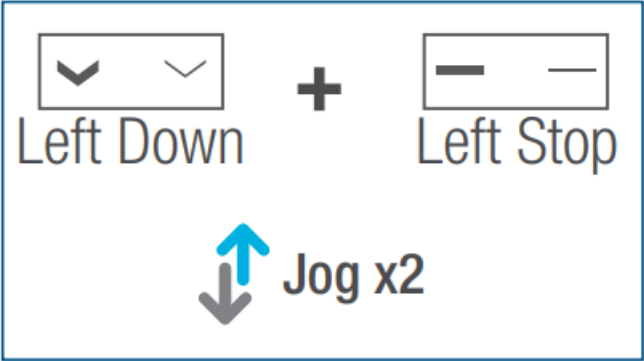
Adjust the Upper Limit

- Press and hold (about 5 sec) Left “Up” and Left “Stop” buttons simultaneously until motor jog x1.
- Press the Right “Up” button to raise the Middle Rail, then press the Right “Stop” button when it is in the new desired upper limit.
- Press the Left “Up” button to raise the Bottom Rail, then press the Left “Stop” button when it is in the new desired upper limit.
- Press and hold (about 2 sec) Left “Up” and Left “Stop” buttons simultaneously until the motor jog x2.

<p>Action on Remote Control Motor Response</p>	<p>a.</p> 
<p>Action on Remote Control Middle Rail Response</p>	<p>b.</p> 
<p>Action on Remote Control Bottom Rail Response</p>	<p>c.</p> 
<p>Action on Remote Control Motor Response</p>	<p>d.</p> 

Adjust the Lower Limit

- Press and hold (about 5 sec) Left “Down” and Left “Stop” buttons simultaneously until motor jog x1.
- Use the Left “Down” button to lower the Bottom Rail then press the Left “Stop” button when it is in the new desired lower limit.
- Press the Right “Down” button to lower the Middle Rail, then press the Right “Stop” button when it is in the new desired lower limit.
- Press and hold (about 2 sec) Left “Down” and Left “Stop” buttons simultaneously until the motor jog x2.

<p>Action on Remote Control Motor Response</p>	<p>a.</p>  <p>The diagram shows two button icons: 'Left Down' (a box with two downward-pointing chevrons) and 'Left Stop' (a box with two horizontal lines). They are separated by a plus sign. Below them, a blue double-headed vertical arrow is followed by the text 'Jog x1'.</p>
<p>Action on Remote Control Bottom Rail Response</p>	<p>b.</p>  <p>The diagram shows the 'Left Down' button icon above a stack of four horizontal blue bars. A blue arrow points downwards from the bottom of the stack.</p>
<p>Action on Remote Control Middle Rail Response</p>	<p>c.</p>  <p>The diagram shows the 'Right Down' button icon (a box with two downward-pointing chevrons) above a stack of four horizontal blue bars. A blue arrow points downwards from the bottom of the stack.</p>
<p>Action on Remote Control Motor Response</p>	<p>d.</p>  <p>The diagram shows the 'Left Down' and 'Left Stop' button icons separated by a plus sign. Below them, a blue double-headed vertical arrow is followed by the text 'Jog x2'.</p>

Favorite Position

Set Favorite Position

Use the Left “Up” or Left “Down” button to move the shade to desired Favorite position.

Press one “P2” button on the back of the remote control until the motor jog x1.

c. Press and hold the Left “Stop” button until the motor jog x1.

d. Once more, press and hold (about 2 sec) the Left “Stop” button until the motor jog x2.

Roller Mode and Sheer Mode

Roller Shade Mode – continue movement after a short press – Default Mode

- a. Press and hold (about 5 sec) Left “Up” and Left “Down” buttons simultaneously until motor jog x1.
- b. Press and hold (about 2 sec) the Left “Stop” button until motor jog x2.

Action on Remote Control Motor Response	<div>a.<div><div><div><div>⤴</div><div>⤵</div></div><div>Left Up</div></div><div>+</div><div><div><div>⤶</div><div>⤷</div></div><div>Left Down</div></div></div><div><div><div>⬆</div><div>⬇</div></div><div>Jog x1</div></div></div>
---	---

b.

—

—

Left Stop

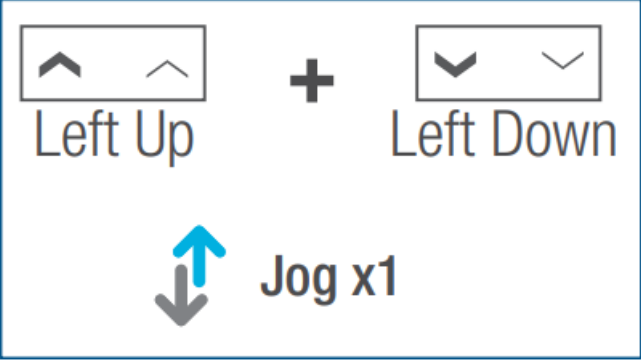

⬆

⬇

Jog x2

Sheer Shade Mode – jog movement after a short press (continue movement after a long press)

- a. Press and hold (about 5 sec) Left “Up” and Left “Down” buttons simultaneously until motor jog x1.
- b. Press and hold (about 2 sec) the Left “Stop” button until motor jog x1.

Action on Remote Control Motor Response	a. <div data-bbox="782 112 1426 470">  </div>
Action on Remote Control Motor Response	b. <div data-bbox="782 515 1426 862">  </div>

Add or Remove Additional Remote

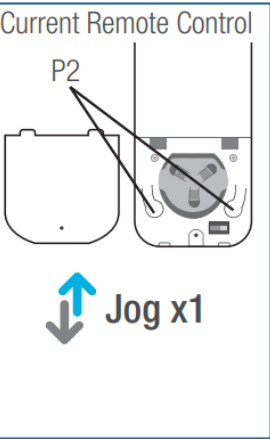
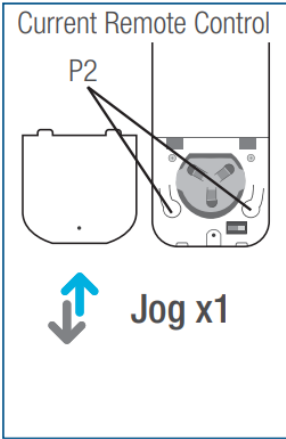
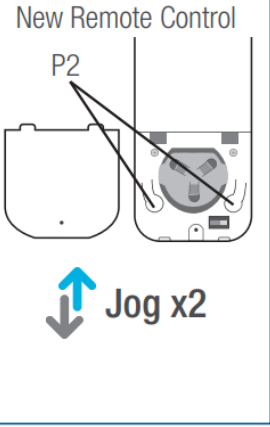
Using Current Remote Control

On the current remote control, press one “P2” button until the motor jog x1.

Once more, on the current remote control, press one “P2” button until the motor jog x1.

c. On the New remote control, press one “P2” button until the motor jog x2.

*Repeat the same procedure to remove the additional remote control.

Action on Remote Control	<div> <div> <div>Motor Response</div> <div> <div> <div>a.</div> <div> <div>Current Remote Control</div> <div> <div>P2</div>  </div> </div> </div> <div> <div>b.</div> <div> <div>Current Remote Control</div> <div> <div>P2</div>  </div> </div> </div> </div> </div></div>
Action on Remote Control	
Motor Response	<div> <div> <div>c.</div> <div> <div>New Remote Control</div> <div> <div>P2</div>  </div> </div> </div> </div>

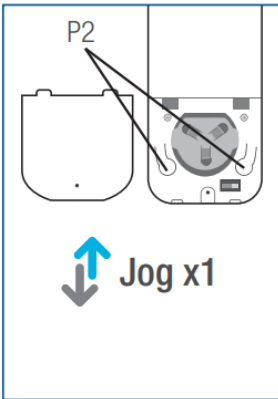

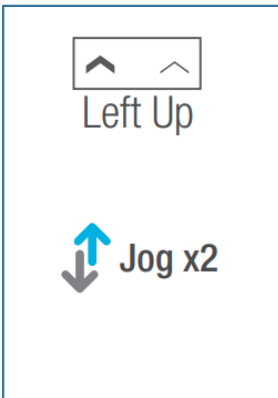
New Remote Control

Follow instructions under section 1.
Pair / Unpair Remote Control

Adjust Motor Speed

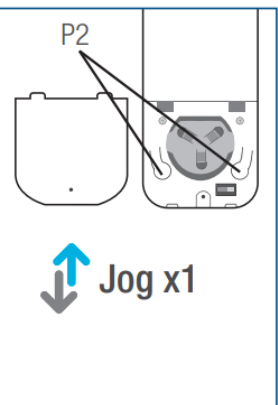

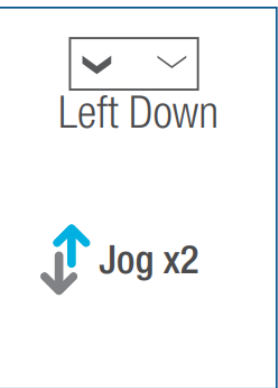
Acceleration Speed

- Press one “P2” button until motor jog x1.
- Press the Left “Up” button until the motor jog x1.
- Once more, press the Left “Up” button until the motor jog x2.

Action on Remote Control Motor Response	<div> <div> <div>a.</div> <div>  </div> </div> <div> <div>b.</div> <div>  </div> </div> </div>
Action on Remote Control Motor Response	<div> <div>c.</div> <div>  </div> </div>

Declaration Speed

- Press one “P2” button until motor jog x1.
 - Press the Left “Down” button until the motor jog x1.
 - Once more, press the Left “Down” button until the motor jog x2.
- *If the motor has no response, it already has a Maximum or Minimum speed.

Action on Remote Control Motor Response	<div> <div> <div>a.</div> <div>  </div> </div> <div> <div>b.</div> <div>  </div> </div> </div>
Action on Remote Control Motor Response	<div> <div>c.</div> <div>  </div> </div>

Declarations

U.S. Radio Frequency FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ISED RSS Warning:

This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Quick Index

Settings	Steps
1 Pairing	P1 (hold down for 2s) > Stop (hold down for 2s)
2 Switch Rotating Direction	Up + Down (hold down for 2s)
3 Setting Upper & Lower Limits	Upper Limit: Up (hold down for 2s) > Up + Stop (hold down for 2s) Lower Limit: Down (hold down for 2s) > Down + Stop (hold down for 2s)
4 Add / Remove Favorite Position	P2 > Stop > Stop
5 Roller Mode & Sheer Mode Switch	Up + Down (hold down for 5s) > Stop
6 Adjust Limits	Upper Limit: Up + Stop (hold down for 5s) > Up or Down > Up + Stop (hold down for 2s) Lower Limit: Down + Stop (hold down for 5s) > Up or Down > Down + Stop (hold down for 2s)
7 Pair / Unpair Additional Emitter	P2 (existing) > P2 (existing) > P2 (new)
8 Speed Regulation	Acceleration: P2 > Up > Up Deceleration: P2 > Down > Down

Troubleshooting

Issues	Possible Causes	Solution
The motor is not responding	External battery pack is depleted	Recharge with compatible AC adaptor and check connection and positioning of solar PV panel
	Insufficient charging from Solar PV Panel	Check connection and orientation of solar PV panel
	The remote control battery is discharged	Replace battery
	The battery is inserted incorrectly into a remote control	Check battery polarity
	Radio interference/shielding	Ensure the remote control and the antenna on the motor are positioned away from metal objects
	The receiver is far away from the Remote Control	Move remote control to a closer position
	Power failure	Check the power supply to the motor is connected and active
	Incorrect wiring	Check that wiring is connected correctly (refer to motor installation instructions)
Cannot program a single motor (multiple motors respond)	Multiple motors are paired to the same channel.	Always reserve an individual channel for programming functions
		SYSTEM BEST PRACTICE – Provide an extra 15 channel remote in your multi-motor projects that provide individual control for each motor for programming purposes
		Place all other motors into sleep mode (ref to P1 button instructions)



Do not dispose of the general waste.
Please recycle batteries and damaged electrical products appropriately.

Please scan the QR code to see more AMP™ product information



Documents / Resources

	Turnils North America AMPTDBUCL RF Receiver Controller Programming [pdf] User Guide AMPTDBUCL, 2AU29AMPTDBUCL, AMPTDBUCL Receiver Controller Programming, Controller Programming
--	---