



Tuya V6 Video Intercom System User Manual

[Home](#) » [Tuya](#) » Tuya V6 Video Intercom System User Manual 

Tuya V6 Video Intercom System User Manual



Introduction:

Thank you for choosing our video intercoms.
Please read this Manual carefully to fully understand its usage.
The company reserves the right to modify this manual.

Contents

- [1 Product Profile](#)
- [2 Operating Instruction](#)
- [3 Warranty Card](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Product Profile

 
Linux System With video intercom, monitoring, unlock functions View records by indoor monitor Automatic photo capture function and save them all IP camera connected, with monitoring, photo taking Supporting 2 door stations and 4 monitors

- No disturbing mode, Optional ringtones and wall paper
- LAN & WAN networking mode

Cloud Storage and Tuya APP supported

No disturbing mode, Optional ringtones and wall paper LAN & WAN networking mode

- **Working Voltage:** DC15~24V
- **Working Temperature** -20°C ~+55°C
- Wall mounting or embedded mounting

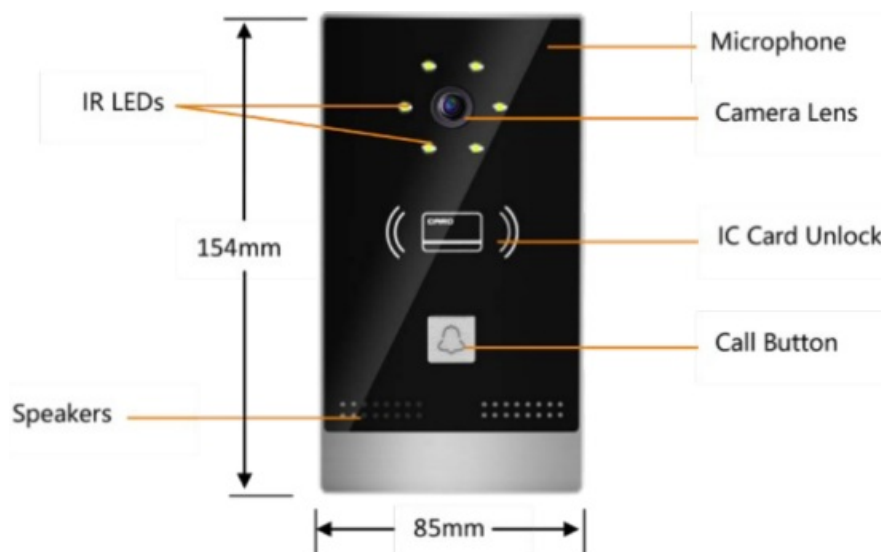





Operating Instruction

Indoor Monitor




Engineering Setting: Click the Settings button on the upper right corner of the home page  enter the password “666666” to enter engineering settings; Engineering settings are divided into room number settings, small door machine settings, IP camera, system information, system reset, and software upgrade.


Users Settings: Click the user settings button on the page”  Time Settings, ringtone Settings, brightness Settings, volume Settings, wallpaper Settings, language Settings, screen saver Settings can be done.


Operating Instruction

Indoor monitor call, unlock: Visitors press the doorbell button of the door station, The indoor monitor



immediately  response and displays the image of the outdoor doorbell camera. Press call button on the



indoor monitor” intercom mode, press unlock button  to enter can remotely unlock the door which is



connected with electric lock. After the end of the call, press call button  ” to hang up, the indoor unit turns into black standby mode; If the indoor monitor has not been answered in 30s, Indoor and outdoor units automatically enter the standby state, then indoor station prompts missed call. If there is no key operation when off-hook state exceeds 90s, it will hang up automatically and enter standby state respectively.

 
Monitor: Click  to monitor the outdoor doorbell camera at this moment you can see the surveillance scene

outside front of the door, Press the unlock button  after monitoring, the door lock can be opened remotely.

Click  , you can see the surveillance image of the IP cameras When monitoring, click the photo icon on the monitoring page  , photos can be taken and saved in micro sd card. If this state stays 60s without any operation, it will automatically return to standby mode.

Query: Click  to check call records and photo messages, click  record and photos can be viewed. And the records can be deleted manually.

DND: Click " " to enter not-disturb mode and the icon turns to " " Indicating the indoor monitor is at state of no disturbance. There are calls coming in and no sound prompts.

Cloud intercom: Click "", You can check the TUYA configuration instructions including TUYA QR code and information.

Outdoor Doorbell Installation

Outdoor Doorbell Installation

1. The height about 1.5 meter from camera to the ground.
2. Install the rainproof cover on the embedded 86 box or box with screws Fix directly on the wall with screws.
3. The door machine is connected with power line and intercom signal line, and then the mounting hole is aligned Put on the hook of the rain cover, and finally fix the screw at the bottom

Figure1. Villa Outdoor Doorbell installation schematic diagram

 
 
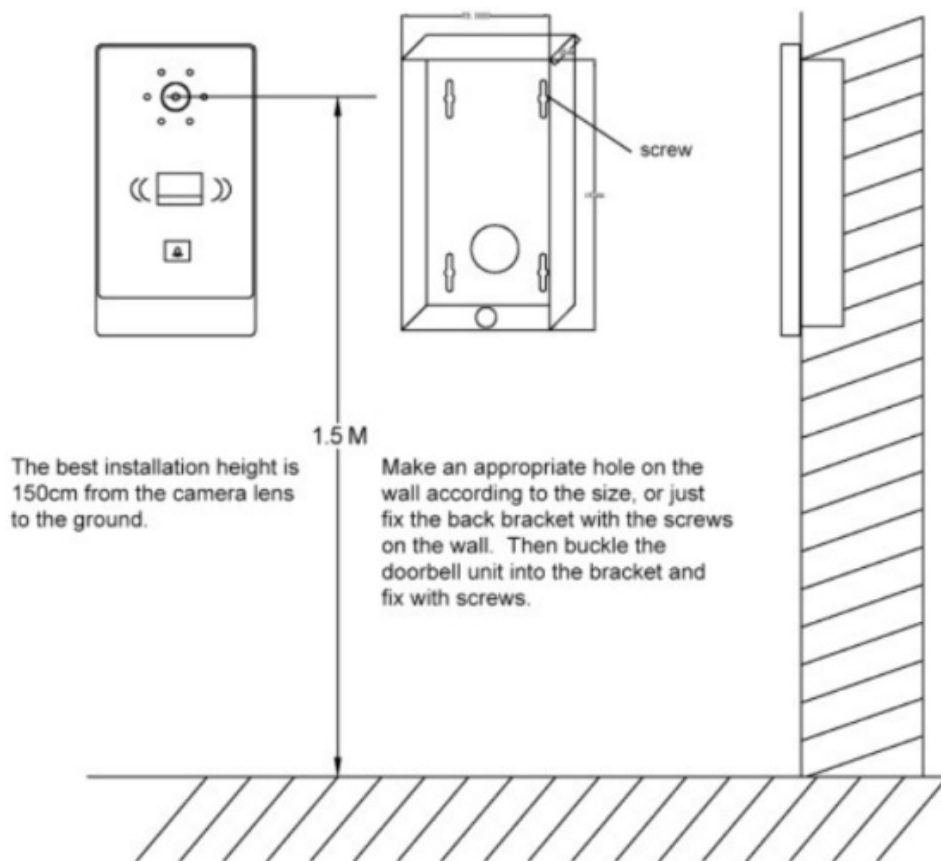 


Figure2. Indoor monitor installation schematic diagram

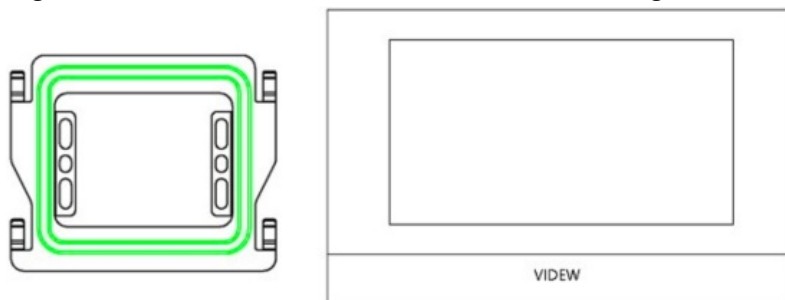 


1. Fix the hanging board on the wall or 86 box with screws.
The best installation height is 145~160cm from the ground.
2. Connect the power adapter and cables to the indoor monitor, align the hooks of the Mounting plate with the holes of the indoor unit, and buckle in place from top to bottom.

Basic Wiring Diagram (without internet or Tuya function)

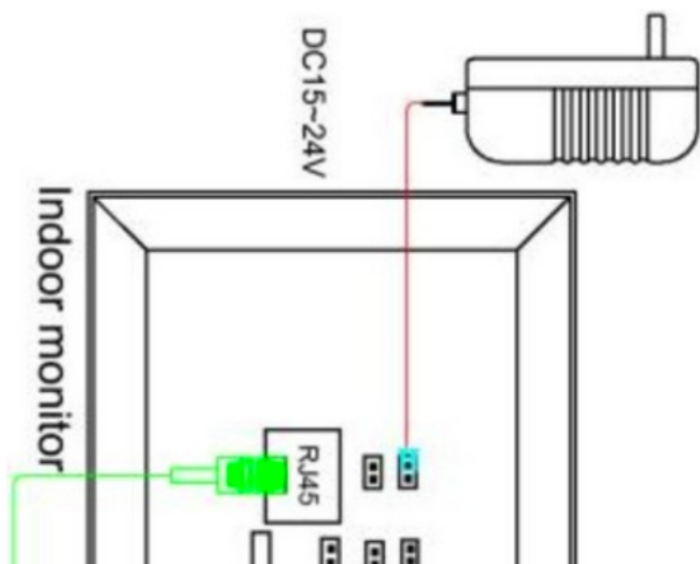

Wiring Diagram with Internet/Router for remotely control with Tuya APP.

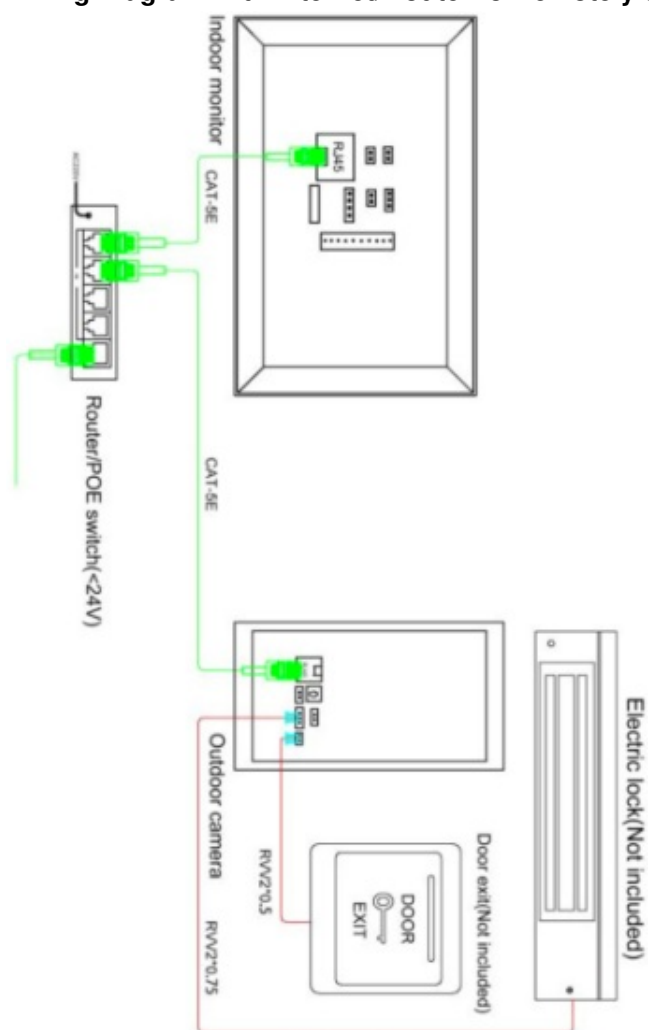

Note:

1. The power adapter is not necessary when the system is applied with same brand LAN POE Switch (under 24V).
2. The intercom connection wires and power adapters are included in the kit, with which you only need connect them according to the diagram. The electric lock and the door exit button are not included, and the extra power supply for electric lock need to be provided by yourself.

3. As the firmware of this digital video intercom system is written and set well with the IP address 192.168.1.x, the TUYA function will only be available with the internet/router with same gateway IP address. If the TUYA QR code does not show up in “tuya” on the monitor, please change the gateway IP address of your router to exactly “192.168.1.1”, the QR code will show up for connection with your phone app.



Warranty Card

Users Info

Warranty Record

After-sales Service Details

A Purchasing this product, please fill in this card carefully and read the following warranty terms carefully to ensure that the product is effective warranty.


- a) The user should keep the card carefully when purchasing the product, and ask the seller to stamp for confirmation.
- b) The warranty period is one year. In case of product failure within the warranty period, the company will provide free maintenance and component replacement if the original component is of poor quality or manufacturing problem.

B The product is damaged and cannot be used normally due to the following reasons, is not covered by the warranty.

- a) Damage causing by did not use and install in accordance with the instructions.
- b) Any man-made or accidental product damage.
- c) Repair, modification or breakage of product seal sticker without our company's approval.
- d) Aging, bruising and scratches on the surface of the product.

C After the expiration of the warranty period, the user can still get the maintenance service provided by the company, but should pay the corresponding fee.

Documents / Resources

	<p>Tuya V6 Video Intercom System [pdf] User Manual v6-rj45, V6 Video Intercom System, Video Intercom System, Intercom System</p>
--	--

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.