

TVCMALL F4 Gravity Sensing Timer User Manual

Home » **TVCMALL** » **TVCMALL** F4 Gravity Sensing Timer User Manual



Contents

- 1 TVCMALL F4 Gravity Sensing Timer
- **2 Product Overview**
- 3 Gravity sensing mode/countdown operation
- 4 Manual mode
- 5 Countdown setting
- **6 Timer operation illustration**
- 7 Documents / Resources
 - 7.1 References
- **8 Related Posts**




TVCMALL F4 Gravity Sensing Timer



Product Overview

Please read this manual carefully before using the product To ensure that the product is used correctly

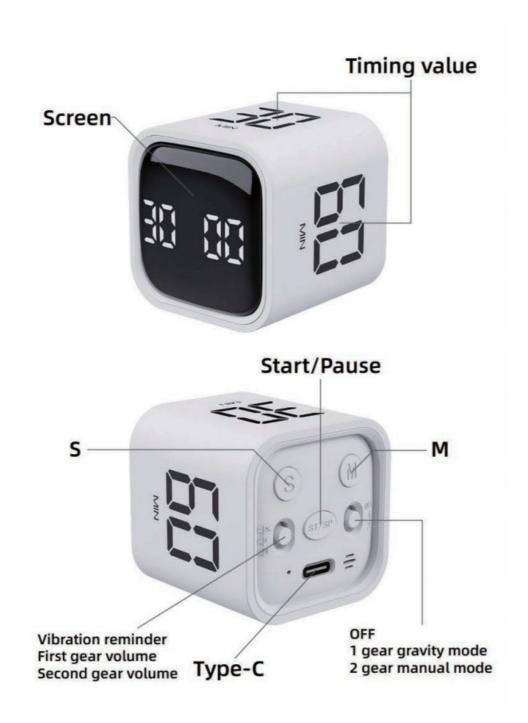

Gravity sensing mode/countdown operation

Gravity mode: Toggle button to mode 1

Turn 5-10-30-60 minutes up, the countdown automatically starts, the screen turns up to pause, on the contrary, the screen turns down to timekeeping is zeroed out (as shown)



Transfer the value to Corresponding position



Value up Start the countdown



Screen up time-out



Screen down Timekeeping is zeroed out

Manual mode

Manual mode: Toggle button to mode 2

Adjustable M/S button, click the center button to start the countdown

S(second) key: 00, 01, 02-59 seconds Cyclic regulation




M(minutes) button: 00,01,02 -99 minutes Cyclic regulation

- 1. When the display shows 00:00 seconds, short press the [SP/ST] button to start the positive timing.
- 2. During the timing process, short press the [SP/ST] button to pause/start the timing.;
- 3. In a paused state, long press the [ST/SP] button to timekeeping is zeroed out.

Countdown setting

- 1. Short press the [M/S] button to adjust the countdown time, long press the [M/S] button to adjust the countdown time guickly, and after setting, short press the [SP/ST] button to start the countdown.
- 2. During the counting process, short press the [SP/ST] button to pause/start the countdown;
- 3. In a paused state, long press [SP/ST] button to timekeeping is zeroed out.
- 4. After the countdown time reaches 00:00, there will be up to one-minute alarm reminder ("di di di" LED screen lights up / sound stops LED screen off these two prompts 1-second group so the cycle). Silent mode vibration reminder.
- 5. Memory mode: After the countdown is finished, short press again the [SP/ST] button to display the current setting time. If you need to reset the timer, long press and ST/SP button. Short press again to cycle the operation

Positive timer operation explanation:

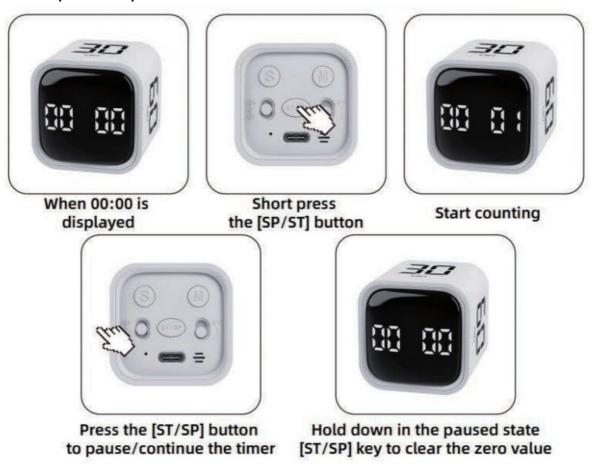

Timer operation illustration



Short press the [M/S] button to set the time



Long press for fast incremental time



Start counting



Pressing the [ST/SP] button during timing Can pause/continue timing



In a paused state long press the [ST/SP] button to



Countdown time There's a bell for one minute timekeeping is zeroed out. (Silent mode is vibration reminder)

Documents / Resources



TVCMALL F4 Gravity Sensing Timer [pdf] User Manual F4 Gravity Sensing Timer, F4, Gravity Sensing Timer, Sensing Timer, Timer

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.